


Tc Terminal Circuit

CIRCUIT DESCRIPTION

Connecting terminals Tc and E₁ of the DLC1 causes the ECU to display the DTC by flashing the ABS warning light.


WIRING DIAGRAM

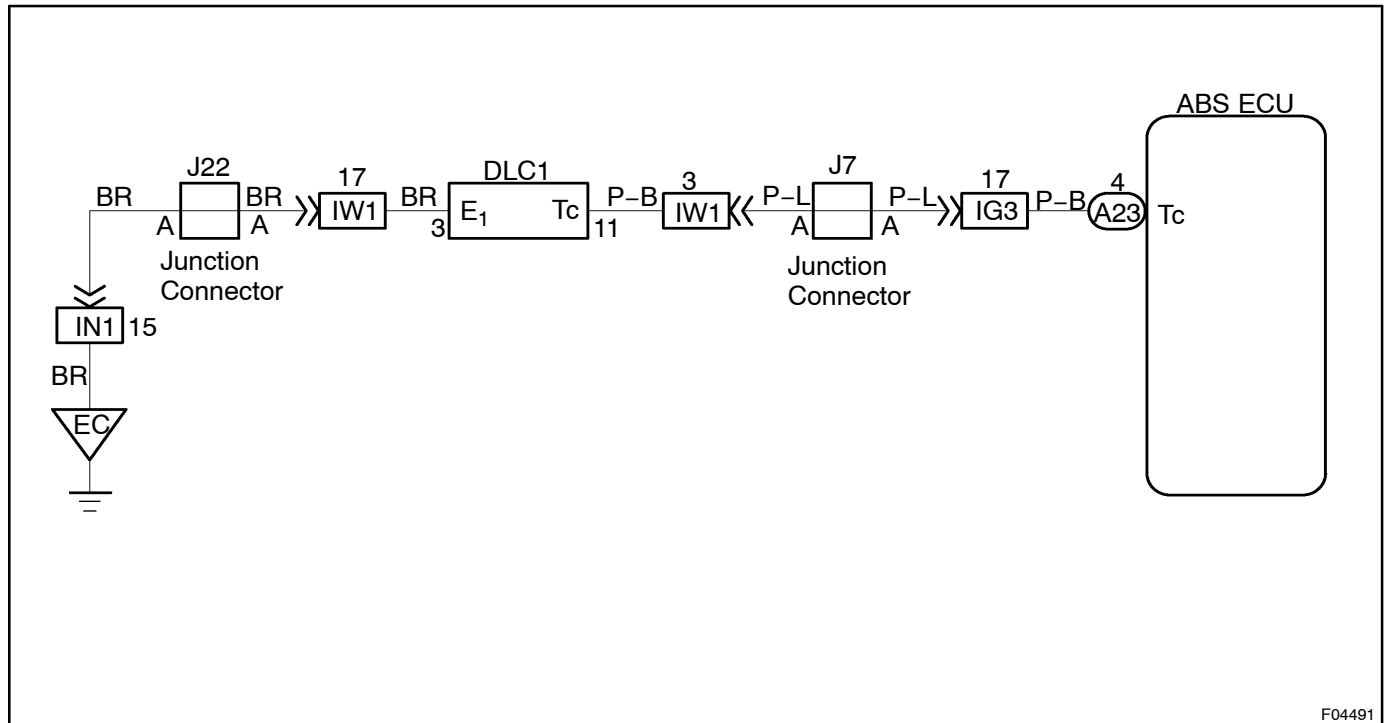

F04491

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of DLC1.

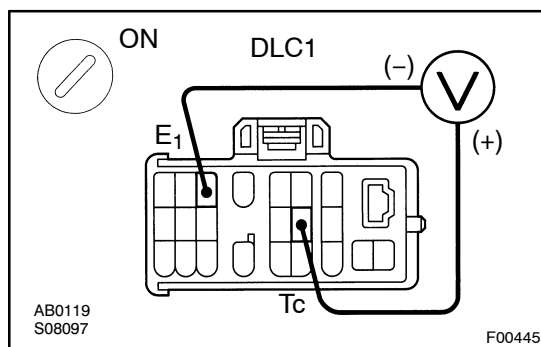

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminal Tc and E1 of DLC1.

OK:

Voltage: 10 – 14 V

OK

 
If ABS warning light does not blink even after Tc and E₁ are connected, the ECU may be defective.

NG

2	Ignition switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page IN-34).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.