


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.

Connecting terminals Ts and E₁ of the DLC1 in the engine compartment starts the check.


WIRING DIAGRAM

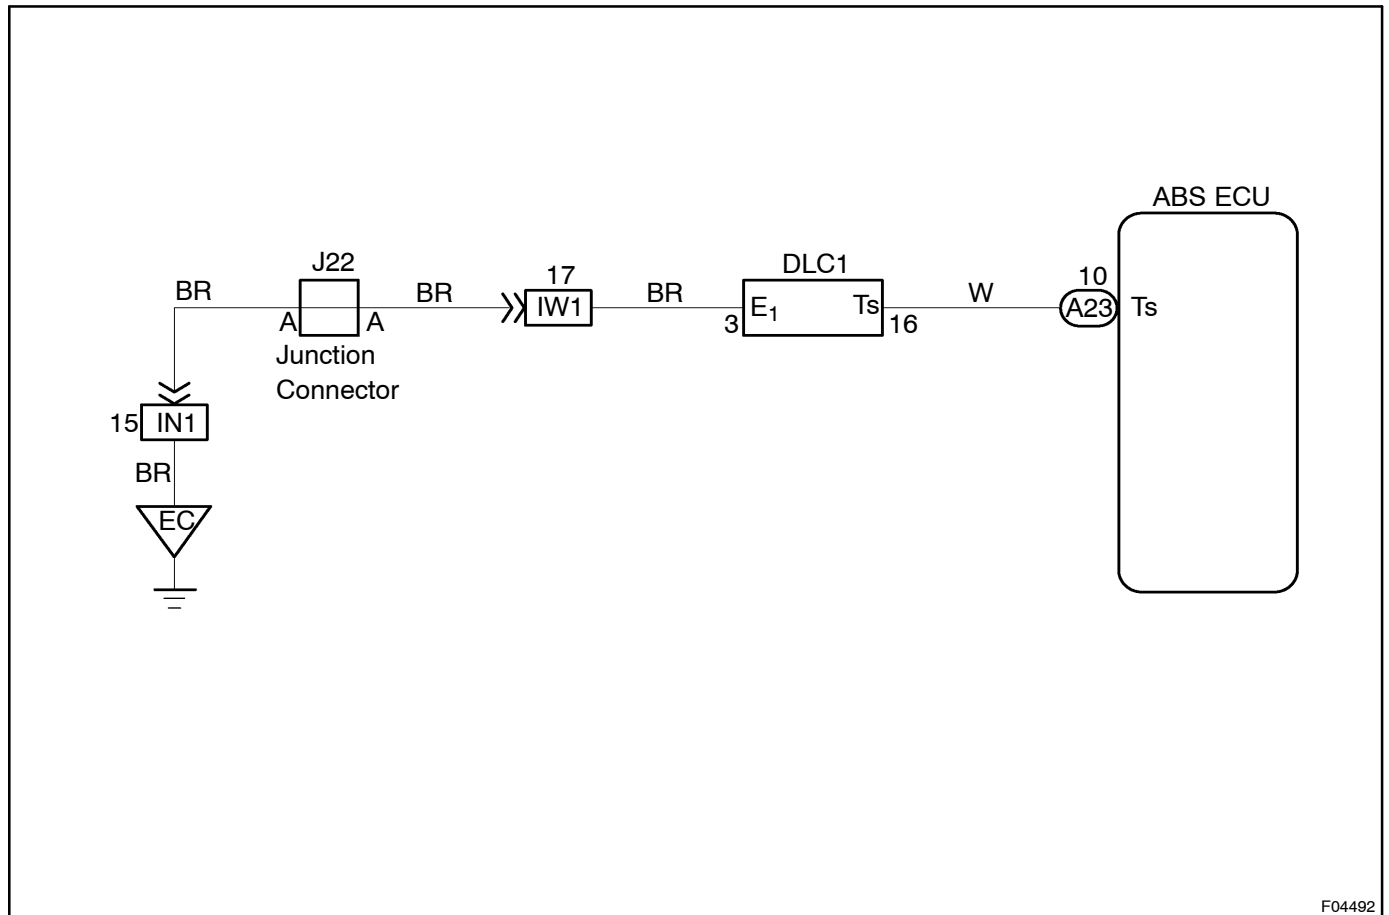

F04492

INSPECTION PROCEDURE

- | | |
|----------|--|
| 1 | Check voltage between terminals Ts and E₁ of DLC1. |
|----------|--|

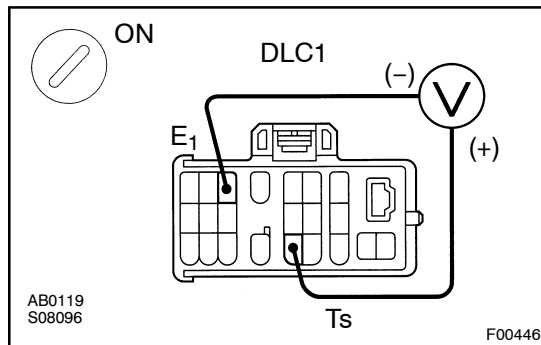**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals Ts and E₁ of DLC1.

OK:**Voltage: 10 – 14 V****OK****If ABS warning light does not blink even after Ts and E₁ are connected, the ECU may be defective.****NG**

- | | |
|----------|--|
| 2 | Ignition switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page IN-34). |
|----------|--|

NG**Repair or replace harness or connector.****OK****Check and replace ABS ECU.**