


Ignition switch power source circuit

CIRCUIT DESCRIPTION

When the ignition switch is turned to the ACC position, battery positive voltage is applied to the terminal ACC of the ECU and when the ignition switch is turned to the ON position, battery positive voltage is applied to the terminal SIG of the ECU.

WIRING DIAGRAM

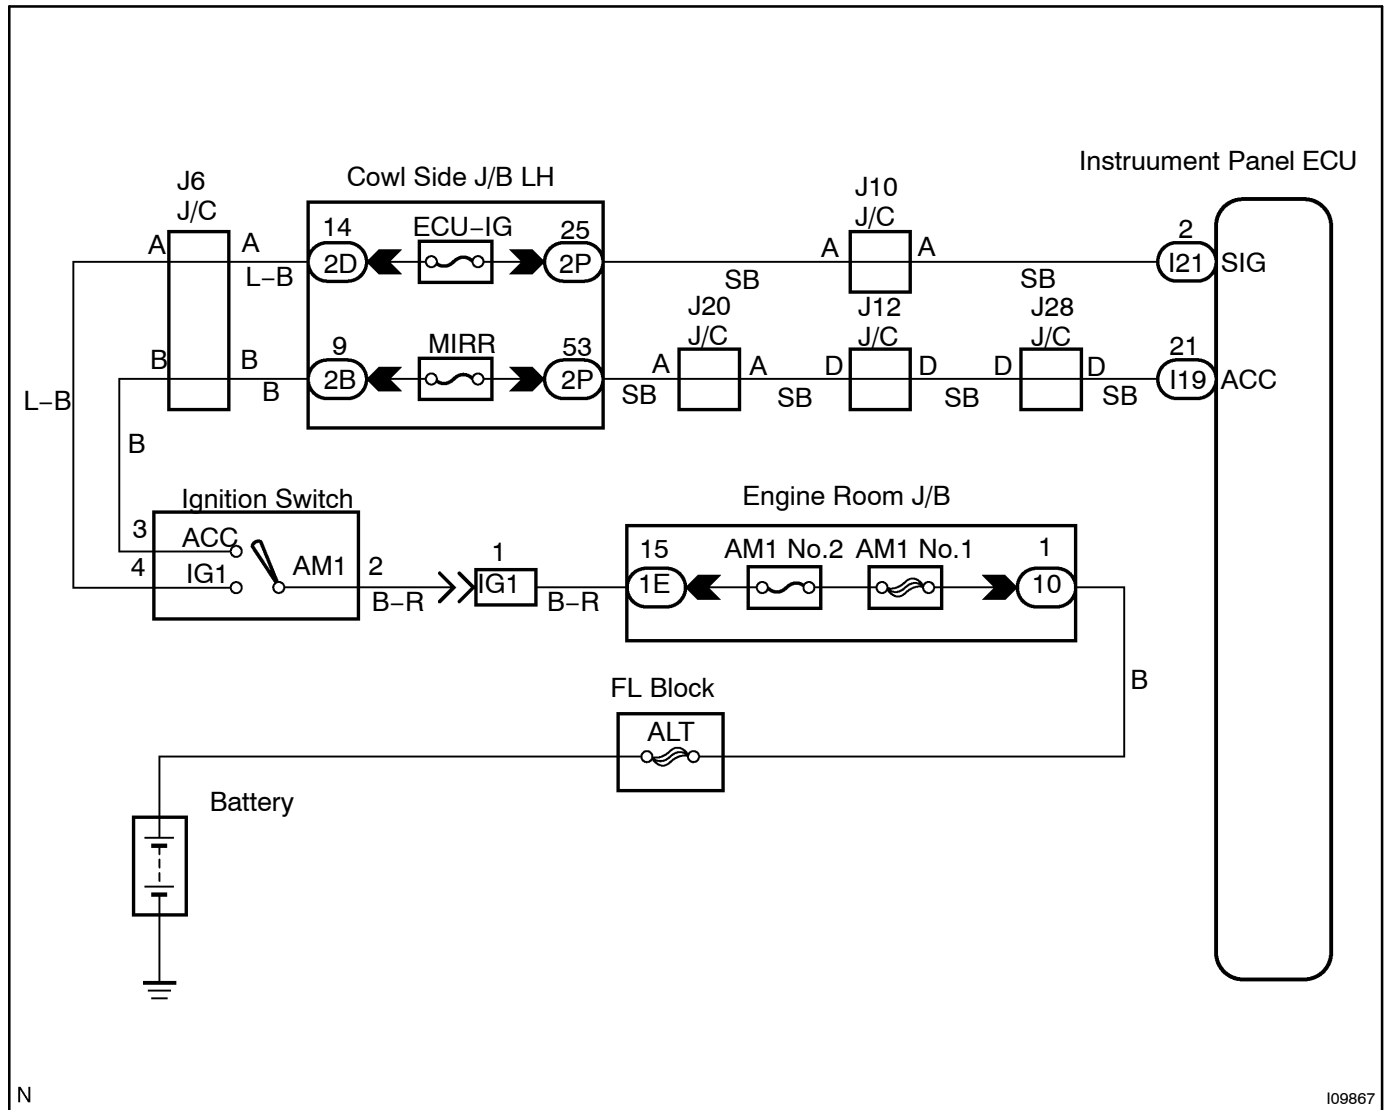

N

109867

INSPECTION PROCEDURE


1	Check ECU-IG and CIGAR fuse.
----------	-------------------------------------

CHECK:

Check continuity of ECU-IG and SIGAR fuse.

OK:

 Continuity



2	Check voltage between terminals ACC, SIG and GND of Body ECU connector.
----------	--

PREPARATION:

 
 
Turn ignition switch ON.

CHECK:

Measure voltage between terminals ACC, SIG, and GND.

OK:

Voltage: 10 – 14V



3	Check wireharness and connector between Body ECU and body ground.
----------	--



Check and repair wireharness and connector between Body ECU and battery.