


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the body ECU.

WIRING DIAGRAM

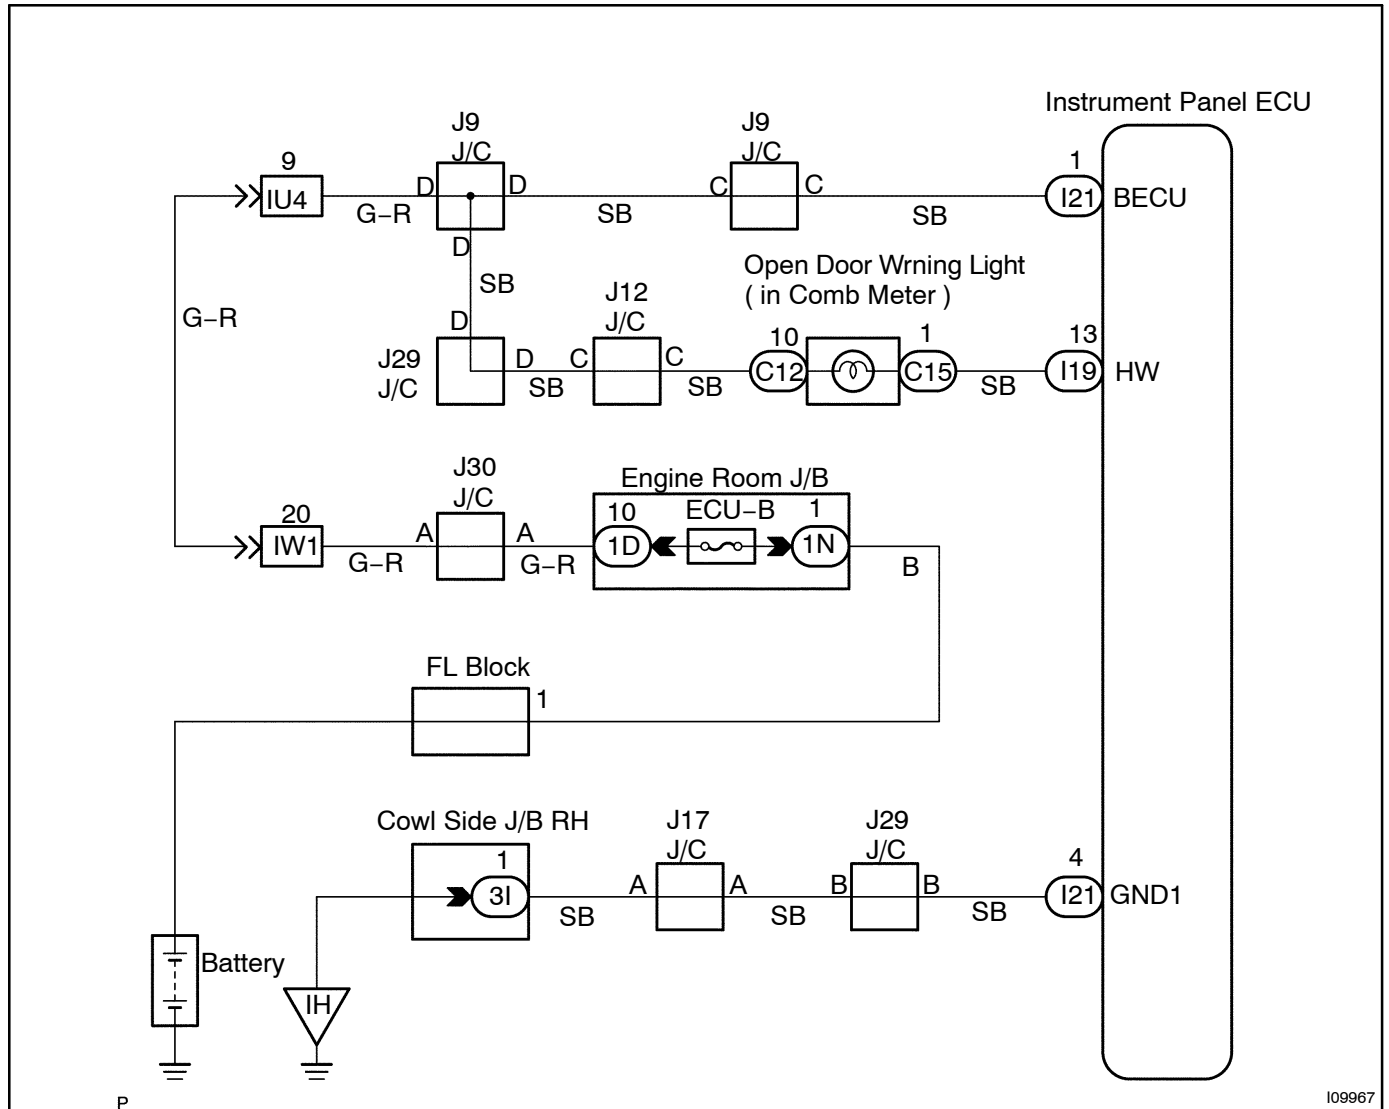

109967

INSPECTION PROCEDURE


1	Check ECU-B fuse.
----------	--------------------------

CHECK:

Check continuity of ECU-B fuse.

OK:

 Continuity



2	Check voltage between terminals BECU and GND of Body ECU connector.
----------	--

PREPARATION:

 
 
- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:


Measure voltage between terminals BECU and GND.

OK:

Voltage: 10 – 14V



3	Check wireharness and connector between Body ECU and body ground.
----------	--

 

Check and repair wireharness and connector between Body ECU and battery.