

PROBLEM SYMPTOMS TABLE

LIGHT CONTROL:

Symptom	Suspect Area	See page
Auto turn-off does not operate	3. Door courtesy switch circuit (Driver side) 4. Ignition switch 5. Body ECU	DI-611 DI-589 –

REAR WIPER AND WASHER:

Symptom	Suspect Area	See page
Rear wiper does not operate.	1. Rear wiper switch circuit 2. Rear wiper motor circuit 3. Body ECU	DI-594 DI-596 –
Rear washer does not operate.	1. Rear washer switch circuit 2. Rear washer motor 3. Wire harness	DI-594 BE-48 –
Rear wiper does not operate only at Hi speed.	1. Body ECU	–
Rear wiper does not operate when washer switch is ON.	1. Rear wiper switch circuit 2. Body ECU	DI-594 –

DOOR LOCK CONTROL:

Symptom	Suspect Area	See page
Lock or unlock cannot be operated with door lock control S/W.	1. Door lock control switch circuit 2. Body ECU	DI-609 –
Door key linked function does not operate.	1. Door key lock and unlock switch circuit 2. Body ECU	DI-617 –
Key confinement prevention function does not operate.	1. Key unlock switch circuit 2. Body ECU	DI-605 –

WIRELESS DOOR LOCK CONTROL:

Symptom	Suspect Area	See page
All function of wireless door lock control system do not operate.	1. Transmitter 2. Key unlock warning switch circuit 3. Wireless door lock ECU 4. Body ECU	DI-460 DI-605 DI-458 –
Lock (or unlock) function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Body ECU	DI-617 DI-615 –
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system .	1. Door courtesy switch circuit 2. Body ECU	DI-611 –

THEFT DETERRENT SYSTEM:

Symptom	Suspect Area	See page
No alerting condition is operated. (The system cannot be set.)	1. Theft deterrent indicator circuit 2. Key unlock warning switch circuit 3. Courtesy switch circuit 4. Door unlock detection switch circuit 5. Engine hood courtesy switch circuit 6. Body ECU	DI-506 DI-605 DI-611 DI-615 DI-531 –
The system operated for more 60 seconds.	1. Body ECU	–

OTHERS:

Symptom	Suspect Area	See page
Does not operate the illuminated entry.	1. Illumination circuit 2. Body ECU	DI-591 –