

Main Switch Circuit (Cruise Control Switch)

CIRCUIT DESCRIPTION


When the cruise control main switch is turned off, the cruise control does not operate.

WIRING DIAGRAM

See page [DI-549](#).

INSPECTION PROCEDURE

1	Check voltage between terminal CMS of ECM connector and body ground.
---	--

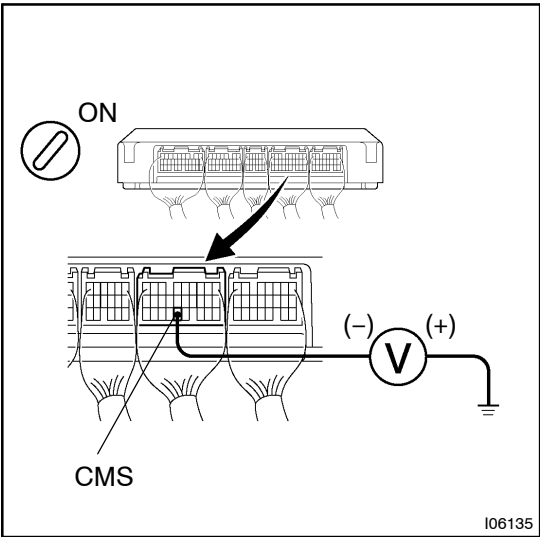

PREPARATION:

- (a) Remove the ECM with connector still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal CMS of ECM connector when main switch is held on and off.

OK:

Main switch	Voltage
OFF	10 - 14 V
ON	Below 0.5 V


OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-543](#)).

NG

2

Check main switch continuity.

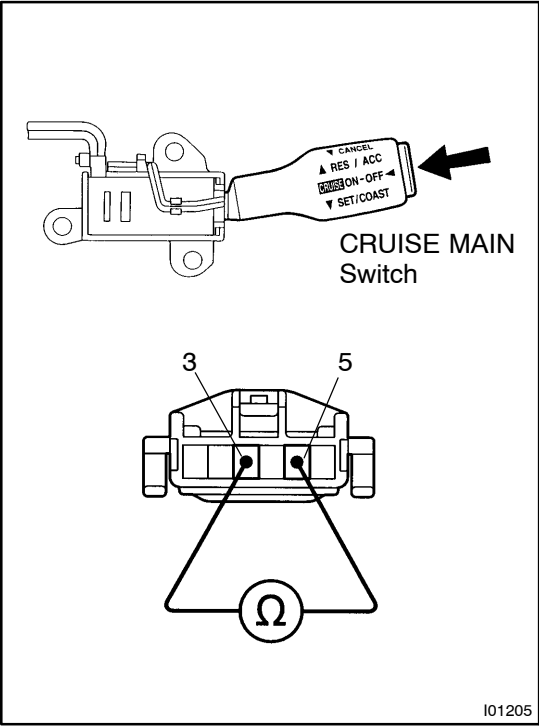

PREPARATION:

- (a) Remove steering wheel center pad (See page [SR-9](#)).
- (b) Disconnect the control switch connector.

CHECK:

Check continuity between terminals 3 and 5 of control switch connector when main switch is held on and off.

OK:

Switch position	Tester connection	Specified condition
OFF	3 – 5	No continuity
ON	3 – 5	Continuity

NG

Replace control switch.

OK

3

Check harness and connector between ECM and main switch (See page [IN-24](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-34](#)).