


CRUISE MAIN Indicator Light Circuit

CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


WIRING DIAGRAM

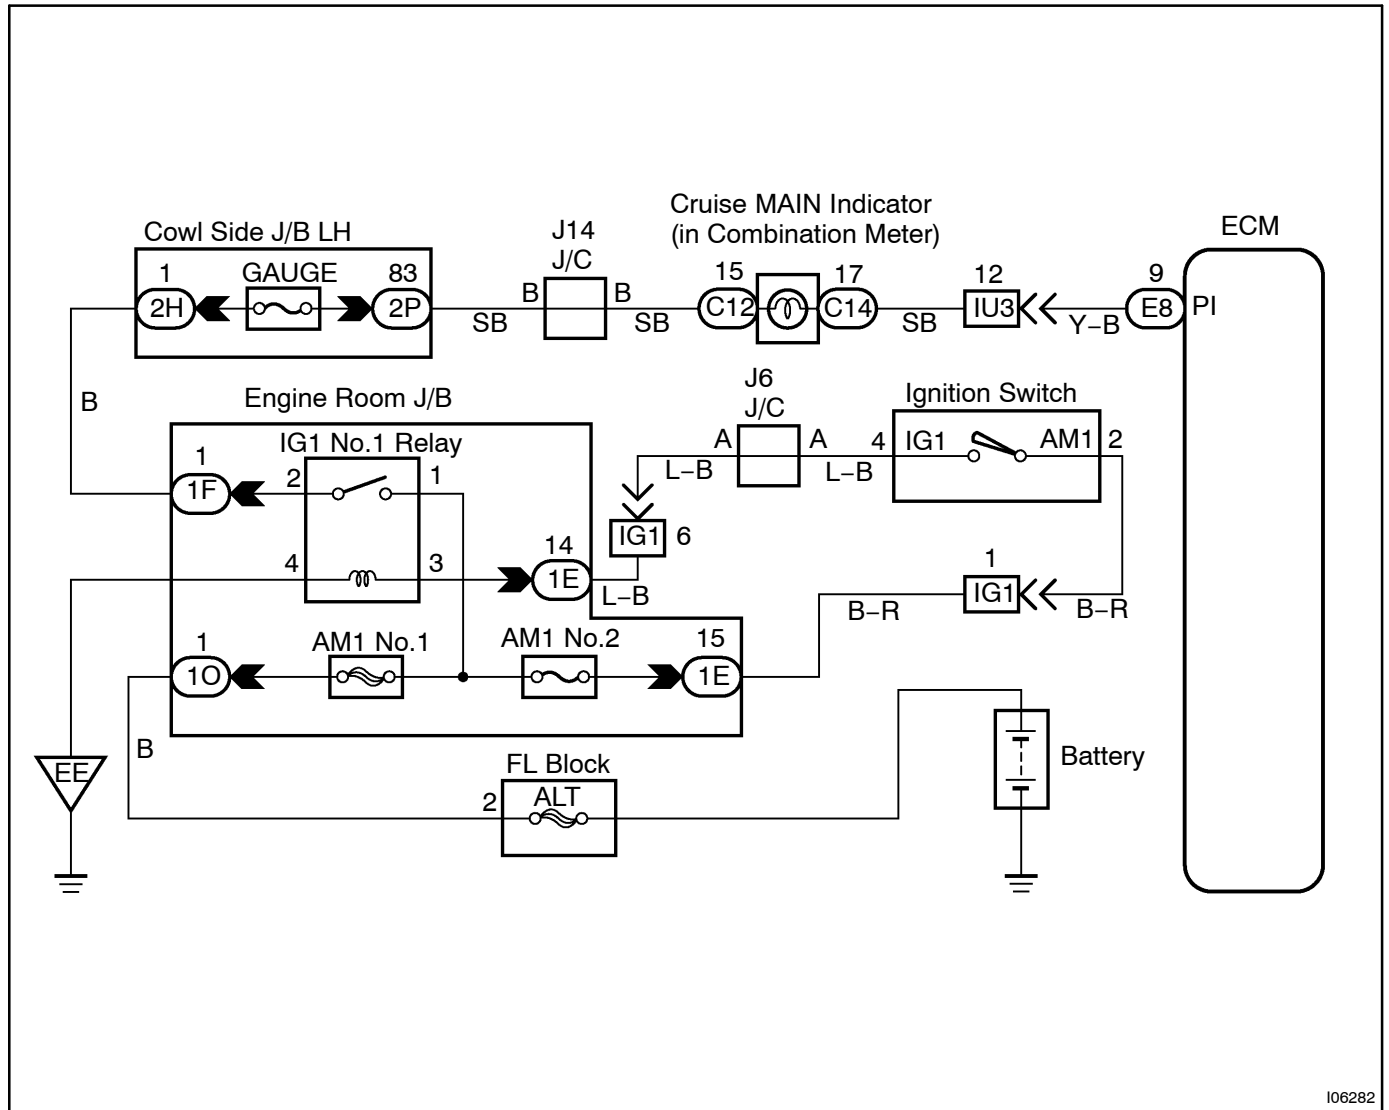

I06282

INSPECTION PROCEDURE

1	Check voltage between terminals PI and GND of ECM connector.
---	--

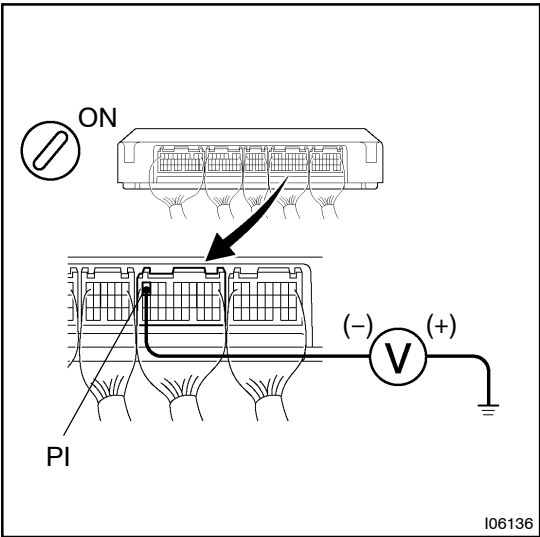

PREPARATION:
Turn ignition switch ON.

CHECK:
Measure voltage between terminals PI and GND of ECM connector when main switch is held on and off.

OK:

Switch position	Voltage
OFF	10 – 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-543](#)).

NG

2	Check combination meter (See page BE-52).
---	--

NG

Replace combination meter.

OK

Check and replace ECM (See page [IN-34](#)).