

## PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and trouble-shoot for each circuit.

### HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

| Details of Problem                                    |                                                                          |                                     | Inspecting Circuit*1                       | See page               |
|-------------------------------------------------------|--------------------------------------------------------------------------|-------------------------------------|--------------------------------------------|------------------------|
| The theft deterrent system cannot be set              |                                                                          |                                     | 1. Indicator light circuit                 | <a href="#">DI-506</a> |
|                                                       |                                                                          |                                     | 2. ECU power source circuit                | <a href="#">DI-508</a> |
|                                                       |                                                                          |                                     | 3. Key unlock warning switch circuit       | <a href="#">DI-521</a> |
|                                                       |                                                                          |                                     | 4. Door key lock and unlock switch circuit | <a href="#">DI-525</a> |
|                                                       |                                                                          |                                     | 5. Door courtesy switch circuit            | <a href="#">DI-529</a> |
|                                                       |                                                                          |                                     | 6. Door unlock detection switch circuit    | <a href="#">DI-527</a> |
|                                                       |                                                                          |                                     | 7. Engine hood courtesy switch circuit     | <a href="#">DI-531</a> |
| The indicator light does not blink when system is set |                                                                          |                                     | Indicator light circuit                    | <a href="#">DI-506</a> |
| When the system is set                                | When the rear door is unlocked                                           | The system does not operate         | Door unlock detection switch circuit       | <a href="#">DI-527</a> |
|                                                       | When the engine hood is opened                                           |                                     | Engine hood courtesy switch circuit        | <a href="#">DI-531</a> |
| While the system is in warning operation              |                                                                          | Horns do not sound                  | Horn relay circuit                         | <a href="#">DI-513</a> |
|                                                       |                                                                          | Theft deterrent horn does not sound | Theft deterrent horn circuit               | <a href="#">DI-511</a> |
|                                                       |                                                                          | Headlights do not flash             | Headlight control relay circuit            | <a href="#">DI-515</a> |
|                                                       |                                                                          | Taillights do not flash             | Taillight control relay circuit            | <a href="#">DI-517</a> |
|                                                       |                                                                          | The door lock is not locked         | Door unlock detection switch circuit       | <a href="#">DI-527</a> |
| When the system is set                                | It is not canceled when the ignition key is turned to ACC or ON position |                                     | Ignition switch circuit                    | <a href="#">DI-519</a> |
| System is still set even when a rear door is open     |                                                                          |                                     | Door courtesy switch circuit               | <a href="#">DI-529</a> |
| Even when the system is not set                       |                                                                          | Horns sound                         | Horn relay circuit                         | <a href="#">DI-513</a> |
|                                                       |                                                                          | Theft deterrent horn sounds         | Theft deterrent horn circuit               | <a href="#">DI-511</a> |
|                                                       |                                                                          | Headlights stay on                  | Headlight control relay circuit            | <a href="#">DI-515</a> |
|                                                       |                                                                          | Taillights stay on                  | Taillight control relay circuit            | <a href="#">DI-517</a> |

\*1: If numbers are given to the circuit proceed with troubleshooting in the order indicated by those numbers.