


TERMINALS OF ECU

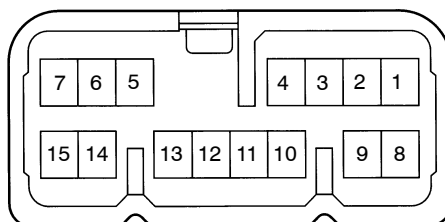

I00227

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
1 – Ground (GND – Ground)	W-B ↔ Body Ground	Always.	Below 1 V
4 – 1 (TRLY – GND)	G ↔ W-B	Taillight lights up.	Below 2 V
		Taillight does not light up.	10 – 14 V
5 – 1 (T – GND) (w/ Theft deterrent system)	G-W ↔ W-B	Transmitter PANIC switch "ON".	Below 1 Ω
		Transmitter PANIC switch "OFF".	1MΩ or higher
6 – 1 (LSWR – GND) (w/ Theft deterrent system)	GR-L ↔ W-B	Rear door unlock detection switch "ON".	Below 1 V
		Rear door unlock detection switch "OFF".	10 – 14 V
7 – 1 (UL3 – GND)	G-B ↔ W-B	Door key lock and unlock switch "UNLOCK". (Driver's Door)	Below 1.5 V
		Door key lock and unlock switch "LOCK". (Driver's Door)	8 – 10 V
8 – 1 (+B – GND)	L-Y ↔ W-B	Always.	10 – 14 V
10 – 1 (KSW – GND)	R-B ↔ W-B	Key unlock warning switch "ON". (Ignition key is inserted into key cylinder)	Below 1 V
		Key unlock warning switch "OFF". (Ignition key is pulled out key cylinder)	10 – 14 V
11 – 1 (LSWD – GND)	L-B ↔ W-B	Driver door unlock detection switch "ON".	Below 1 V
		Driver door unlock detection switch "OFF".	10 – 14 V
12 – 1 (LSWP – GND) (w/ Theft deterrent system)	L-O ↔ W-B	Passenger door unlock detection switch "ON".	Below 1 V
		Passenger door unlock detection switch "OFF".	10 – 14 V
13 – 1 (IG – GND)	R-L ↔ W-B	Turn the ignition switch "OFF" or "ACC".	Below 1 V
		Turn the ignition switch "ON".	10 – 14 V
14 – 1 (CTY – GND)	R-W ↔ W-B	Door courtesy switch "ON".	Below 1 V
		Door courtesy switch "OFF".	10 – 14 V
15 – 1 (L – GND)	L-W ↔ W-B	Door key lock and unlock switch "LOCK".	Below 1 V
		Door key lock and unlock switch are not "OFF" or "UNLOCK".	8 – 10 V