


## POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION

EC07K-02


1. REMOVE V-BANK COVER
2. INSPECT PCV VALVE
  - (a) Remove the PCV valve.

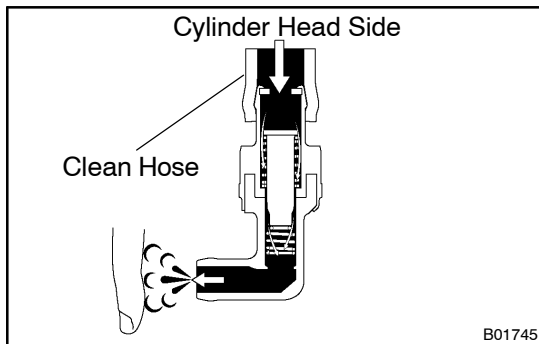


- (b) Install a clean hose to the PCV valve.
  - (c) Inspect the PCV valve operation.
    - (1) Blow air into the cylinder head side, and check that air passes through easily.

**CAUTION:**

**Do not suck air through the valve. Petroleum substances inside the valve are harmful.**

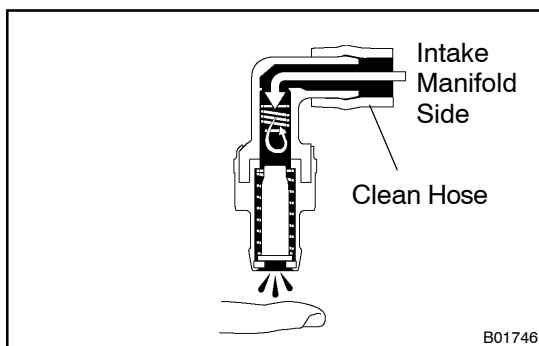

- (2) Blow air into the intake manifold side, and check that air passes through with difficulty.
- If operation is not as specified, replace the PCV valve.
- (d) Remove the clean hose from the PCV valve.
- (e) Reinstall the PCV valve.

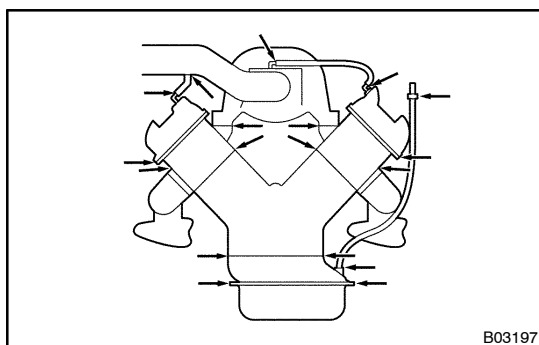

3. INSPECT HOSES, CONNECTIONS AND GASKETS  
Visually for cracks, leaks or damage.
4. REINSTALL V-BANK COVER