

## REMOVAL

1. REMOVE STEERING WHEEL PAD (See page [SR-12](#))
2. REMOVE STEERING WHEEL (See page [SR-12](#))
3. REMOVE COLUMN UPPER AND LOWER COVERS (See page [SR-12](#))
4. REMOVE SPIRAL CABLE (See page [SR-12](#))