


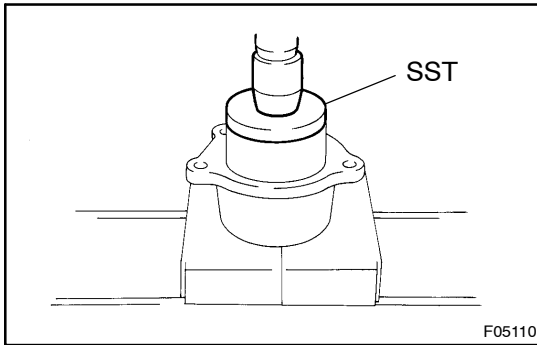


REASSEMBLY

1. INSTALL REAR AXLE BEARING


Using SST and a press, install the bearing.

SST 09950-60020 (09951-00890)

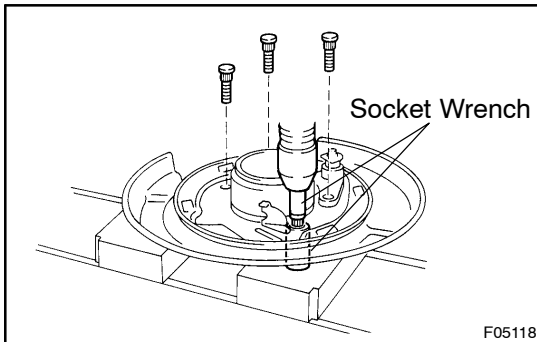

2. INSTALL BEARING CASE

Position the backing plate on the bearing case and using a press and 2 socket wrenches, install the 4 serration bolts.

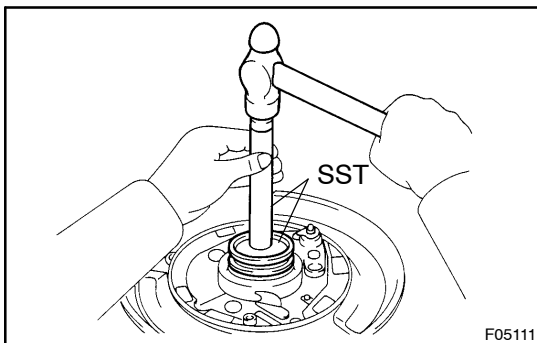


3. INSTALL OUTER OIL SEAL

(a) Using SST and a hammer, install a new oil seal.

SST 09950-60020 (09951-00810),
09950-70010 (09951-07100)

(b) Coat MP grease to the oil seal lip.

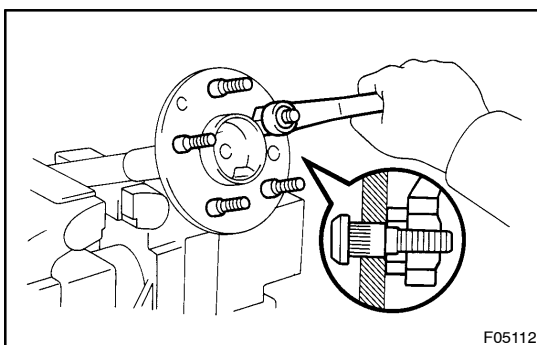


4. INSTALL OIL DEFLECTOR

Position a new gasket and oil deflector on the axle shaft and install a washer and nut to a new hub bolt, as shown in the illustration, and install the 5 hub bolts by torquing the nut.

5. INSTALL AXLE SHAFT TO BACKING PLATE

(a) Install the backing plate, plate washer and bearing retainer on the axle shaft.

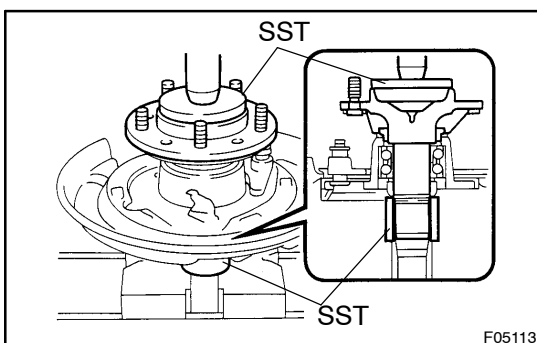


(b) Using SST and a press, install the axle shaft into the backing plate.

SST 09631-12090, 09950-60020 (09951-01030)

6. INSTALL SNAP RING TO AXLE SHAFT

Using a snap ring expander, install a new snap ring.

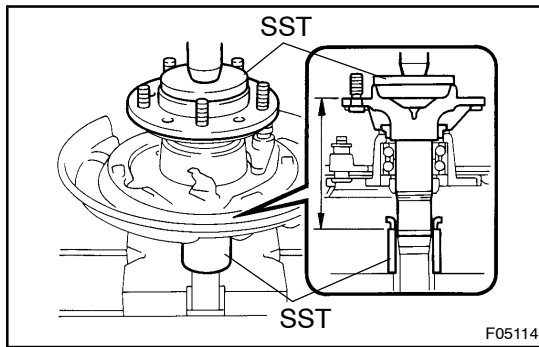

7. INSTALL ABS SPEED SENSOR ROTOR AND BEARING RETAINER

Using SST and a press, install a new ABS speed sensor rotor and bearing retainer.

SST 09631-12090, 09950-60020 (09951-01030)

Standard length: 170.7 ± 1.0 mm (6.720 ± 0.039 in.)