


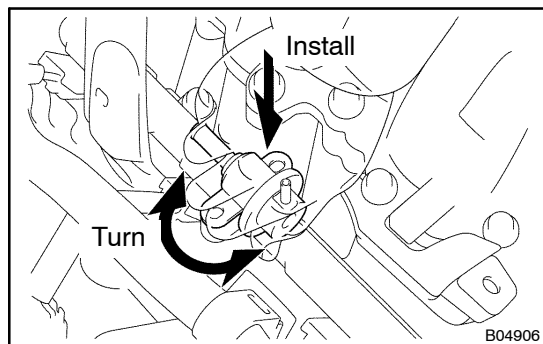


INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- While turning the pressure regulator left and right, install it to the delivery pipe.
- Install the pressure regulator with the 2 bolts.

Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)

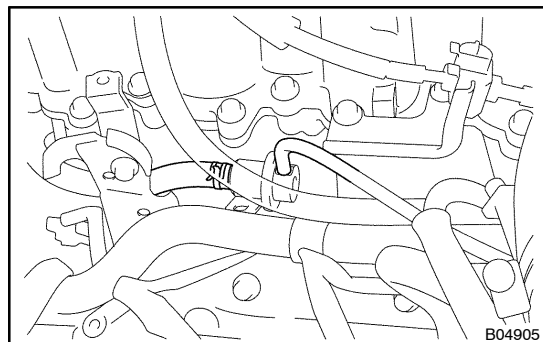

- Connect the vacuum sensing hose to intake air resonator.
 - Connect the fuel return hose to the pressure regulator.
- ### 2. CHECK FOR FUEL LEAKS (See page [SF-1](#))
- ### 3. INSTALL V-BANK COVER