



K POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

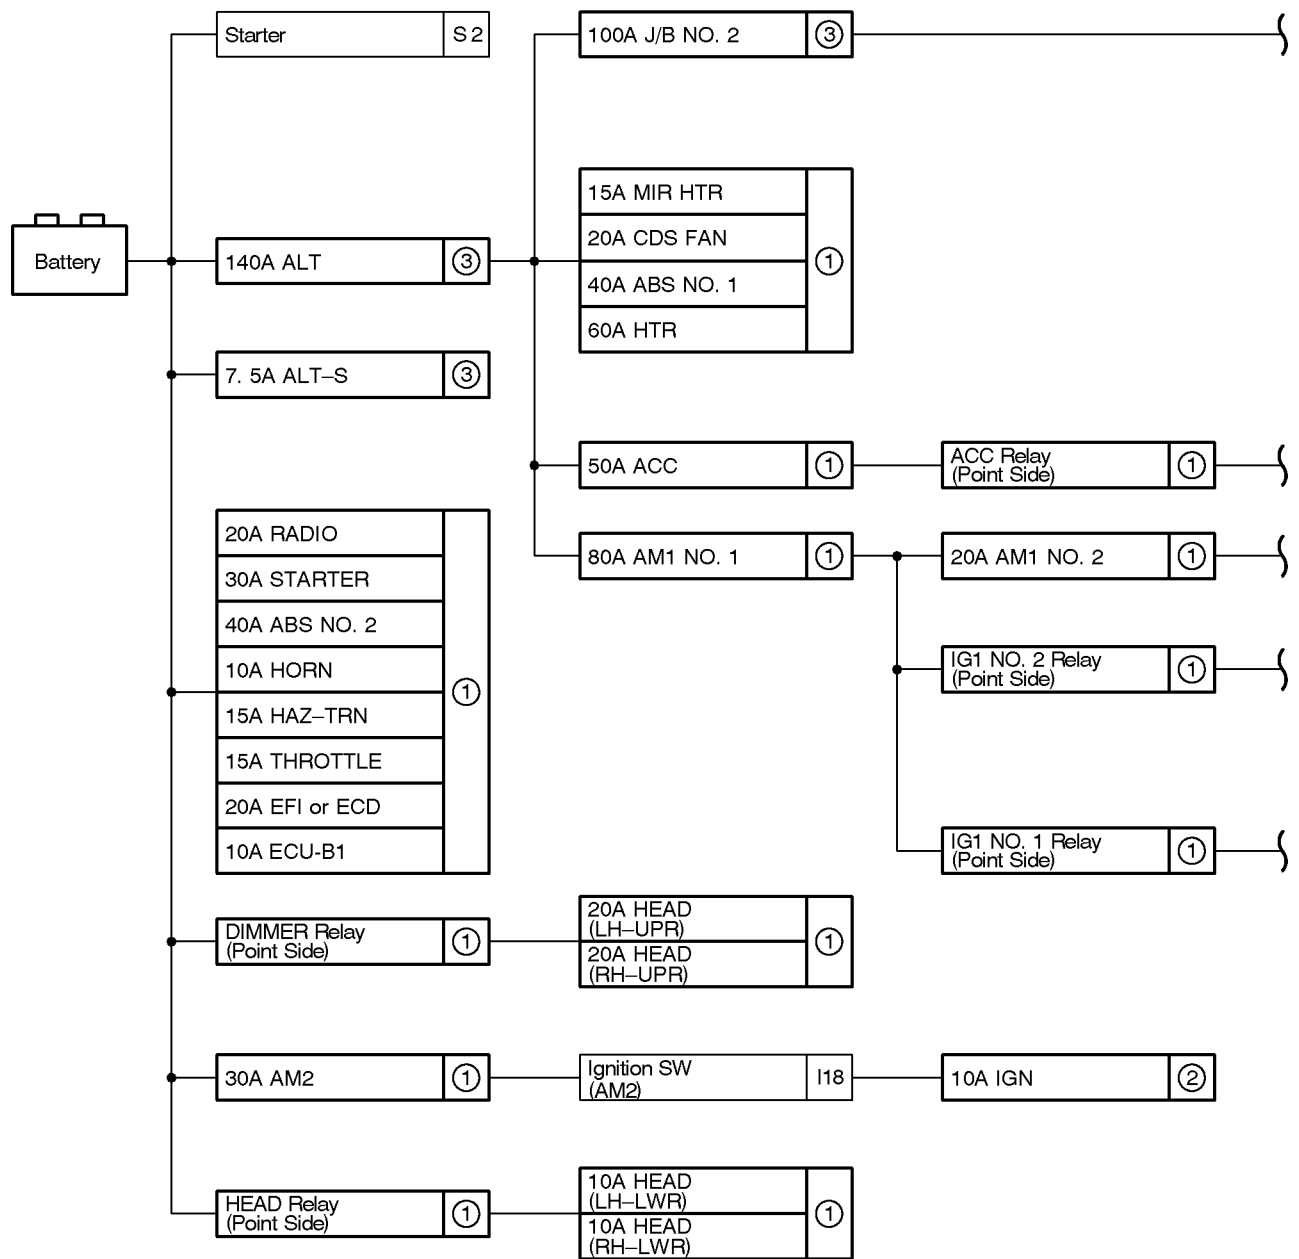

[LOCATION] ① : Engine Room J/B (See Page 20)

② : Cowl Side J/B LH (See Page 24)

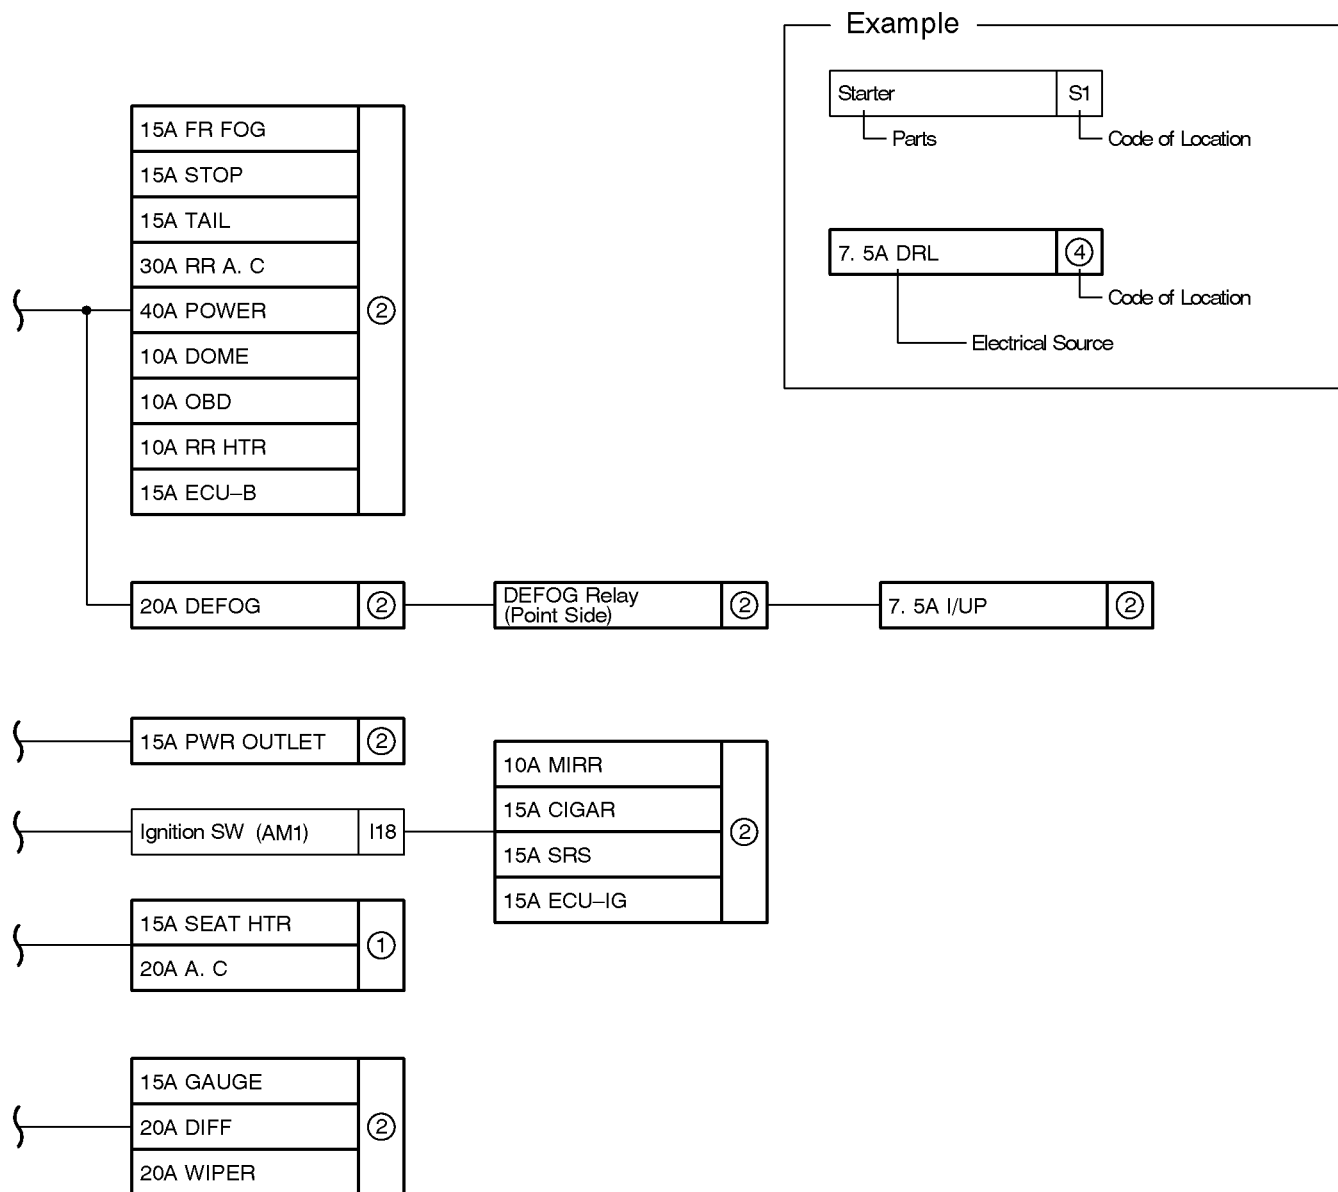

③ : Fusible Link Block (F 6 on See Page 34)

K POWER SOURCE (Current Flow Chart)

Engine Room J/B (See Page 20)

Fuse		System	Page
10A	ECU-B1	Automatic Light Control	124
		Combination Meter	262
		Door Lock Control	200
		Interior Light	110
		Key Reminder and Seat Belt Warning	248
		Light Auto Turn Off	128
		Moon Roof	194
		Power Window	188
		Theft Deterrent	220
		Wireless Door Lock Control	208
10A	HEAD (LH-LWR)	Front Fog Light	94
		Headlight	88
10A	HEAD (RH-LWR)	Headlight	88
10A	HORN	Horn	146
		Theft Deterrent	220
15A	HAZ-TRN	Theft Deterrent	220
		Turn Signal and Hazard Warning Light	96
15A	MIR HTR	Rear Window Defogger and Mirror Heater	244
15A	SEAT HTR	Seat Heater	242
15A	THROTTLE	Cruise Control	158
		Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
20A	A.C	Condenser Fan and Front Air Conditioning	270
		Key Reminder and Seat Belt Warning	248
		Rear Air Conditioning	278
		Rear Heater (w/o Rear Air Conditioning)	258
20A	AM1 NO.2	Turn Signal and Hazard Warning Light	96
20A	CDS FAN	Condenser Fan and Front Air Conditioning	270
20A	EFI or ECD	Cruise Control	158
		Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
20A	HEAD (LH-UPR)	Headlight	88
20A	HEAD (RH-UPR)	Headlight	88
20A	RADIO	Auto Antenna	252
		Radio and Player	254
30A	AM2	Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
		Ignition	68
		Starting	66
30A	STARTER	Starting	66
40A	ABS NO.1	ABS	166

* These are the page numbers of the first page on which the related system is shown.

40A	ABS NO.2	ABS	166
60A	HTR	Condenser Fan and Front Air Conditioning	270
80A	AM1 NO.1	Rear Window Defogger and Mirror Heater	244
		Turn Signal and Hazard Warning Light	96

Cowl Side J/B LH (See Page 24)

Fuse		System	Page
7.5A	I/UP	Rear Window Defogger and Mirror Heater	244
10A	DOME	Interior Light	110

Cowl Side J/B LH (See Page 24)

Fuse		System	Page
10A	IGN	ABS	166
		Charging	72
		Combination Meter	262
		Cruise Control	158
		Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
		SRS	173
10A	MIRR	Remote Control Mirror	236
10A	OBD	Cruise Control	158
		Engine Control and Engine Immobiliser System	74
10A	RR HTR	Rear Air Conditioning	278
		Rear Heater (w/o Rear Air Conditioning)	258
15A	CIGAR	Auto Antenna	252
		Cigarette Lighter	142
		Clock	140
		Condenser Fan and Front Air Conditioning	270
		Radio and Player	254
		Rear Air Conditioning	278
		Shift Lock	178

* These are the page numbers of the first page on which the related system is shown.

15A	ECU-B	Clock	140
		Combination Meter	262
		Condenser Fan and Front Air Conditioning	270
		Headlight	88
		Power Tilt and Power Telescopic	232
		Rear Air Conditioning	278
		SRS	173
15A	ECU-IG	ABS	166
		Auto Antenna	252
		Automatic Light Control	124
		Door Lock Control	200
		Interior Light	110
		Light Auto Turn Off	128
		Moon Roof	194
		Power Tilt and Power Telescopic	232

K POWER SOURCE (Current Flow Chart)

Fuse		System	Page
15A	ECU-IG	Power Window	188
		Shift Lock	178
		Theft Deterrent	220
		Wireless Door Lock Control	208
15A	FR FOG	Front Fog Light	94
15A	GAUGE	ABS	166
		Back-Up Light	122
		Center Differential Lock	180
		Charging	72
		Combination Meter	262
		Cruise Control	158
		Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
		Headlight	88
		Key Reminder and Seat Belt Warning	248
		Power Rear Quarter Window	240
		Rear Differential Lock	184
		Rear Window Defogger and Mirror Heater	244
		Wireless Door Lock Control	208
15A	PWR OUTLET	Power Outlet	144
15A	SRS	SRS	173
15A	STOP	ABS	166
		Cruise Control	158
		Electronically Controlled Transmission and A/T Indicator	148
		Engine Control and Engine Immobiliser System	74
		Shift Lock	178
		Stop Light	118
15A	TAIL	Automatic Light Control	124
		Illumination	104
		Light Auto Turn Off	128
		Taillight	100
		Theft Deterrent	220
		Wireless Door Lock Control	208
20A	DEFOG	Rear Window Defogger and Mirror Heater	244
20A	DIFF	Center Differential Lock	180
		Rear Differential Lock	184
20A	WIPER	Front Wiper and Washer	132
		Rear Wiper and Washer	136
30A	RR A.C	Rear Air Conditioning	278
40A	POWER	Door Lock Control	200
		Moon Roof	194
		Power Seat	228
		Power Tilt and Power Telescopic	232

* These are the page numbers of the first page on which the related system is shown.

40A	POWER	Power Window	188
		Wireless Door Lock Control	208

Fusible Link Block (F6 on See Page 34)

Fuse		System	Page
7.5A	ALT-S	Charging	72
100A	J/B NO.2	Automatic Light Control	124
		Light Auto Turn Off	128
140A	ALT	Automatic Light Control	124
		Charging	72
		Light Auto Turn Off	128
		Turn Signal and Hazard Warning Light	96

* These are the page numbers of the first page on which the related system is shown.