



POWER SOURCE

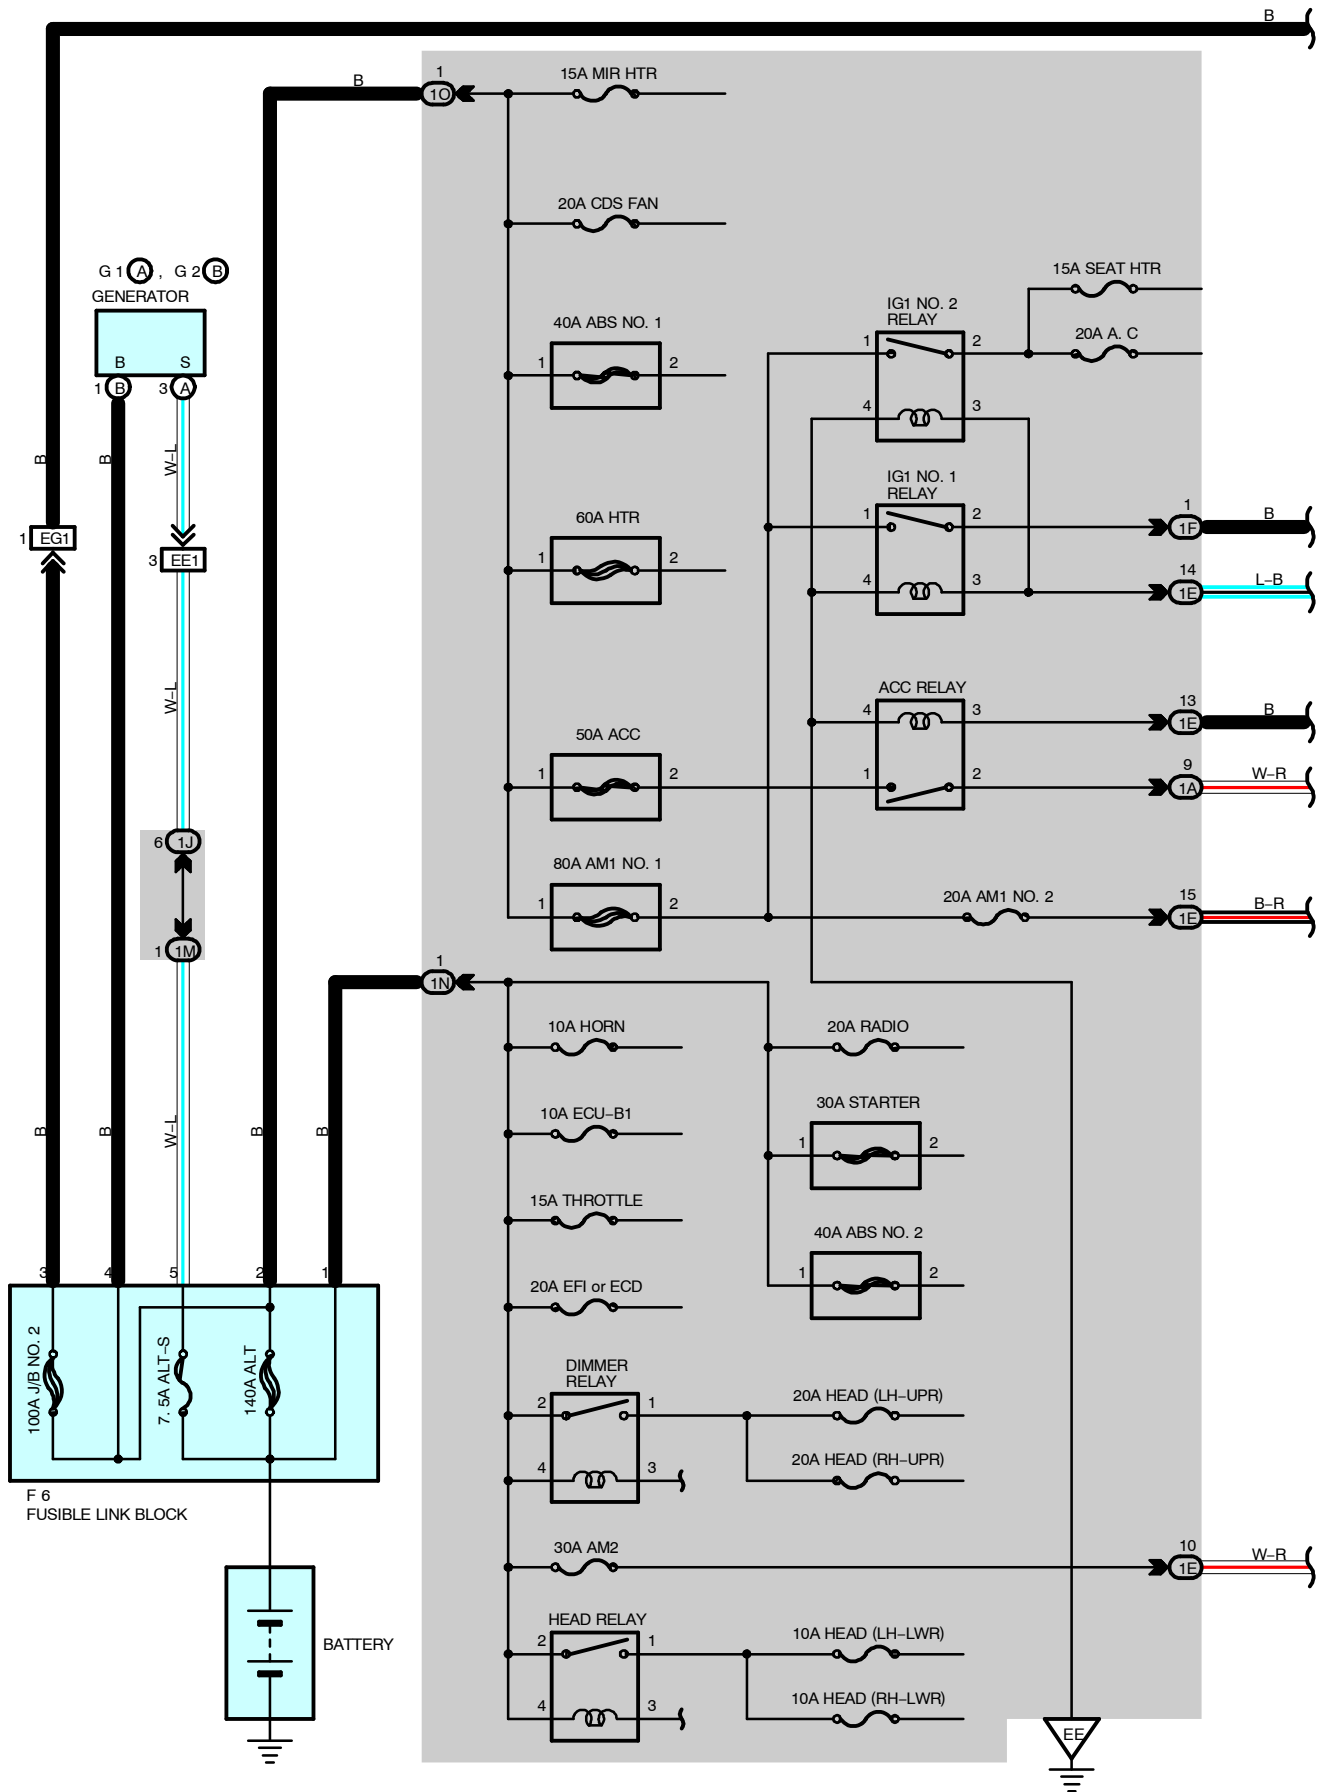

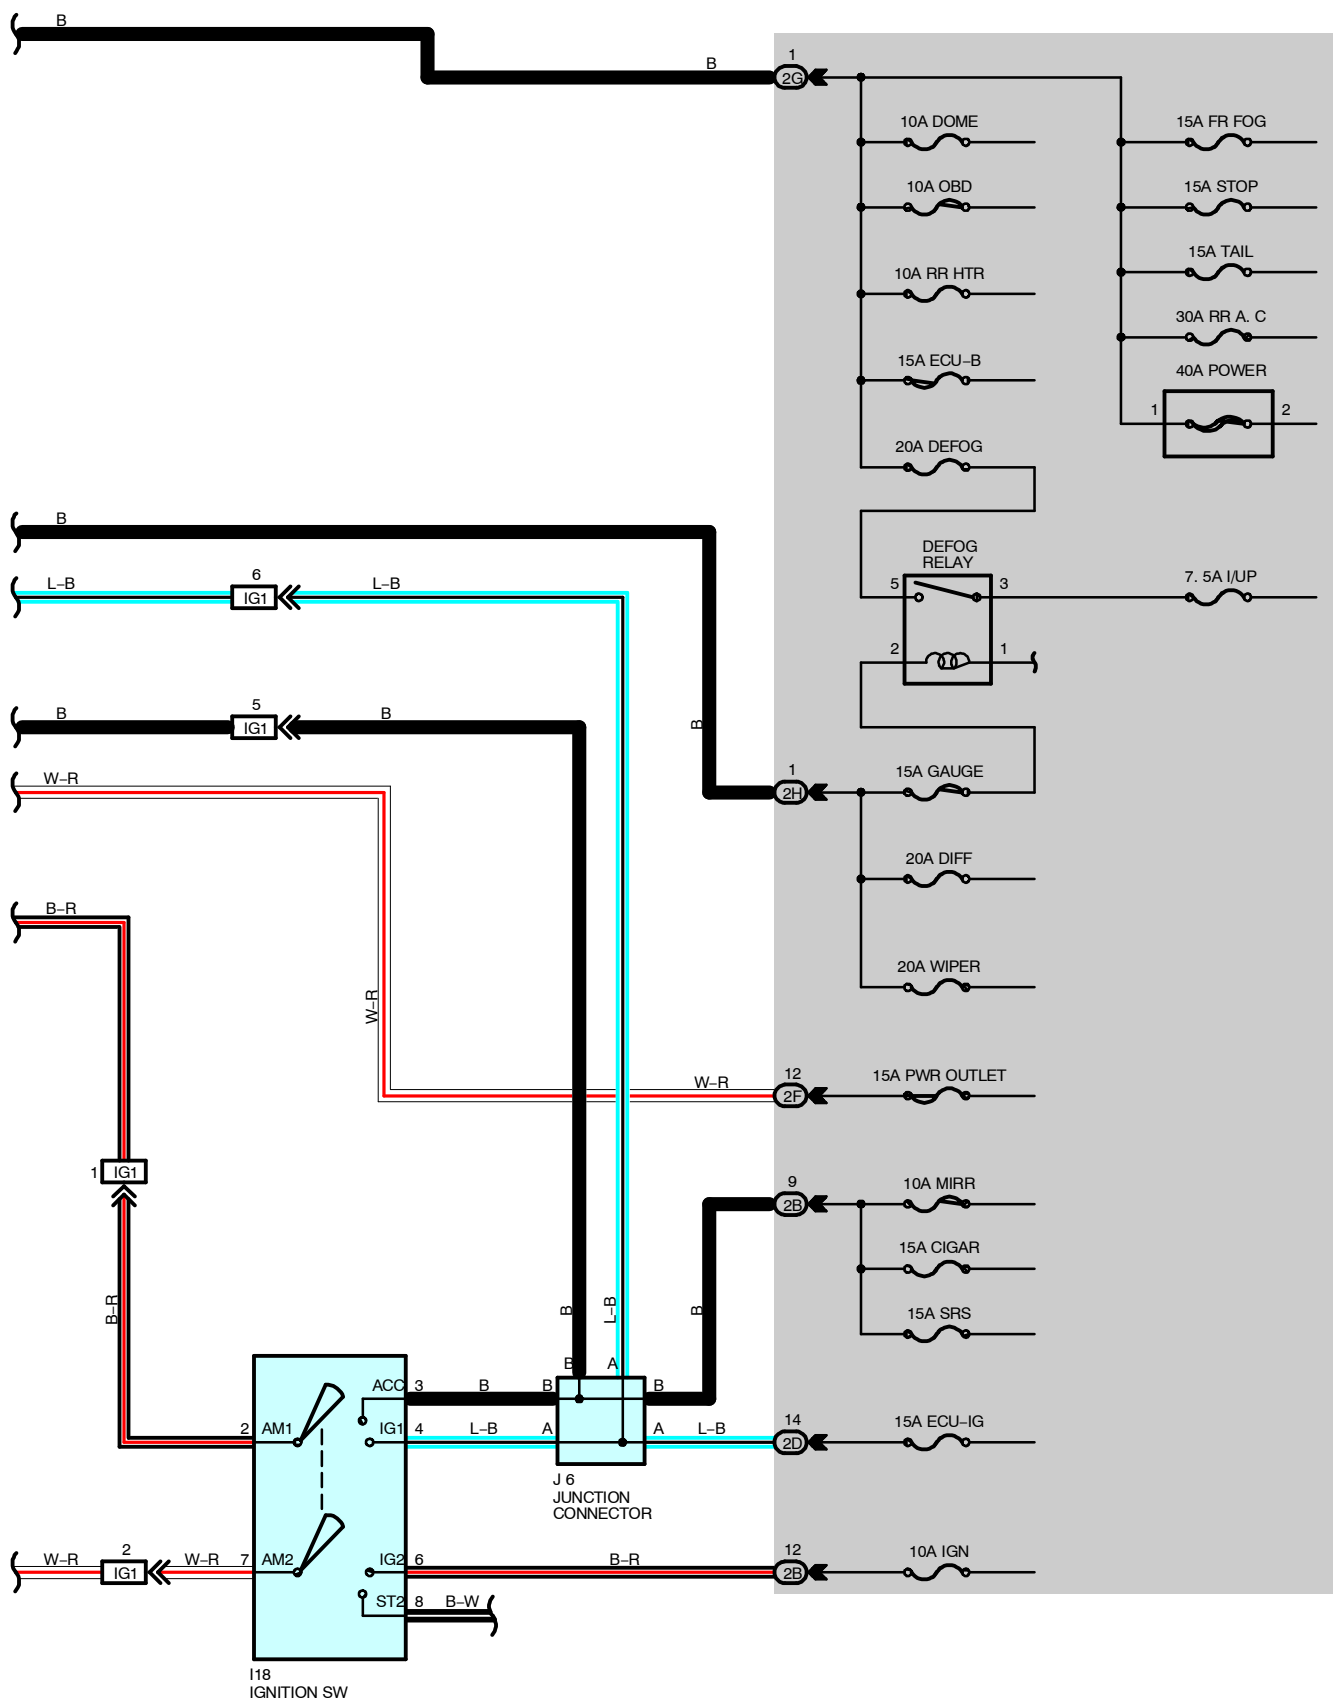

POWER SOURCE

SERVICE HINTS

HEAD RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position
(When the light auto turn off system does not operate)

DIMMER RELAY

1-2 : Closed with daytime running light operation
: Closed with light control SW at **HEAD** position and dimmer SW at **HIGH** position
: Closed with dimmer SW at **FLASH** position

I18 IGNITION SW

2-3 : Closed with ignition SW at **ACC** or **ON** position
2-4 : Closed with ignition SW at **ON** or **ST** position
7-6 : Closed with ignition SW at **ON** or **ST** position
7-8 : Closed with ignition SW at **ST** position

○ : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
F6		36		G2	B	36		J6	39		
G1	A	36		I18		38					

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1F		
1J	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1M	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
1N		
1O		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	44	Engine Room Main Wire and Alternator Wire (Near the Battery)
EG1	44	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EE	44	Front Left Side of Fender Apron


F6

(See Page 34)


G1 (A)
BLACK

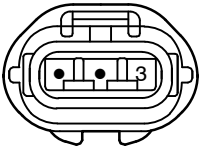


G2 (B)

 

I18

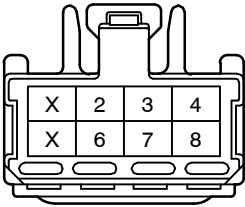

J6
BLUE

 

(Hint : See Page 7)