



IGNITION

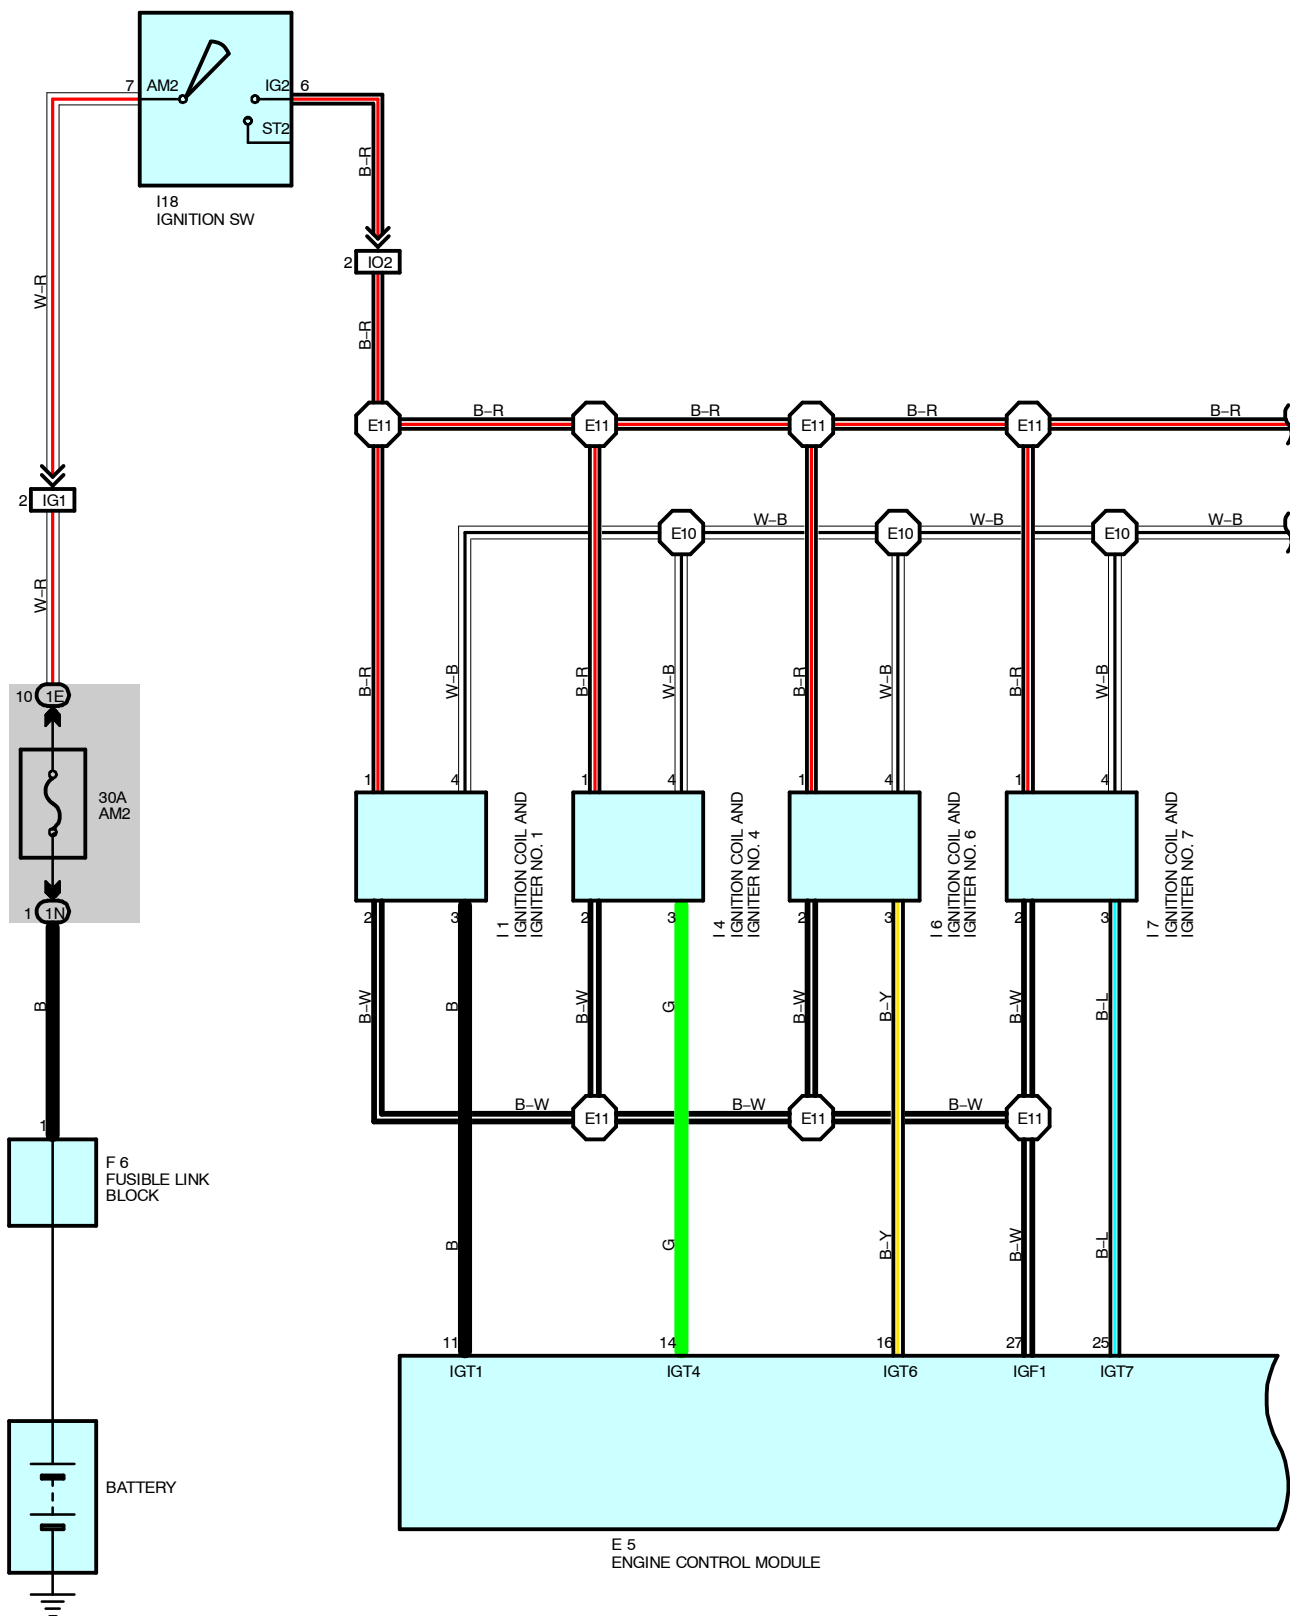

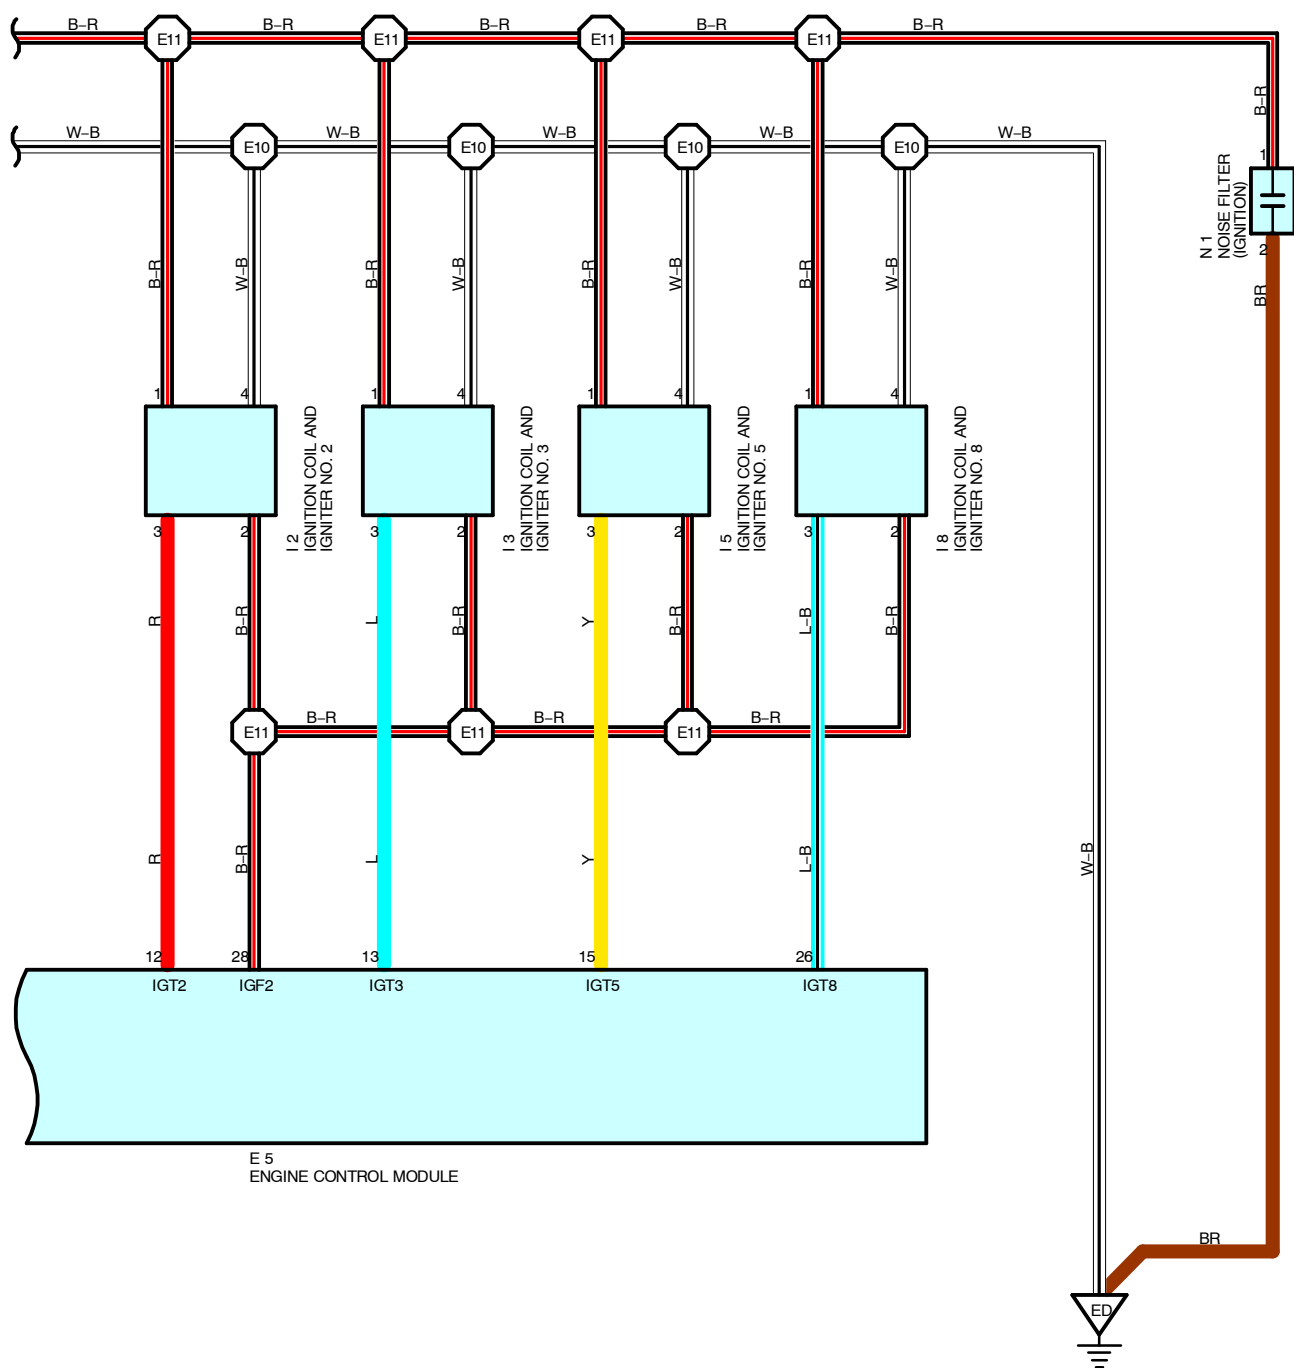

IGNITION

SERVICE HINTS

I18 IGNITION SW

7-6 : Closed with ignition SW at **ON** or **ST** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
E5	38	I3	37	I7	37
F6	36	I4	37	I8	37
I1	37	I5	37	I18	38
I2	37	I6	37	N1	37

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1N	21	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IO2	50	Engine Wire and Dash Wire (Behind the Glove Box)


: GROUND POINTS

Code	See Page	Ground Points Location
ED	44	Rear Bank of Left Cylinder Head

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	44	Engine Wire	E11	44	Engine Wire


E5

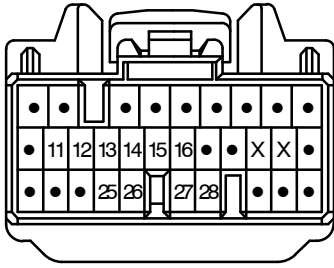


F6

(See Page 34)

 
I1
BLACK




I2
BLACK

 


I3
BLACK

 


I4
BLACK

 


I5
BLACK

 


I6
BLACK

 


I7
BLACK

 

I8
BLACK

 

I18

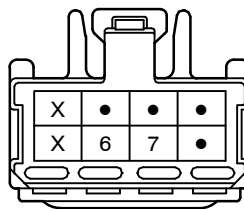

N1
GRAY

