


FRONT FOG LIGHT

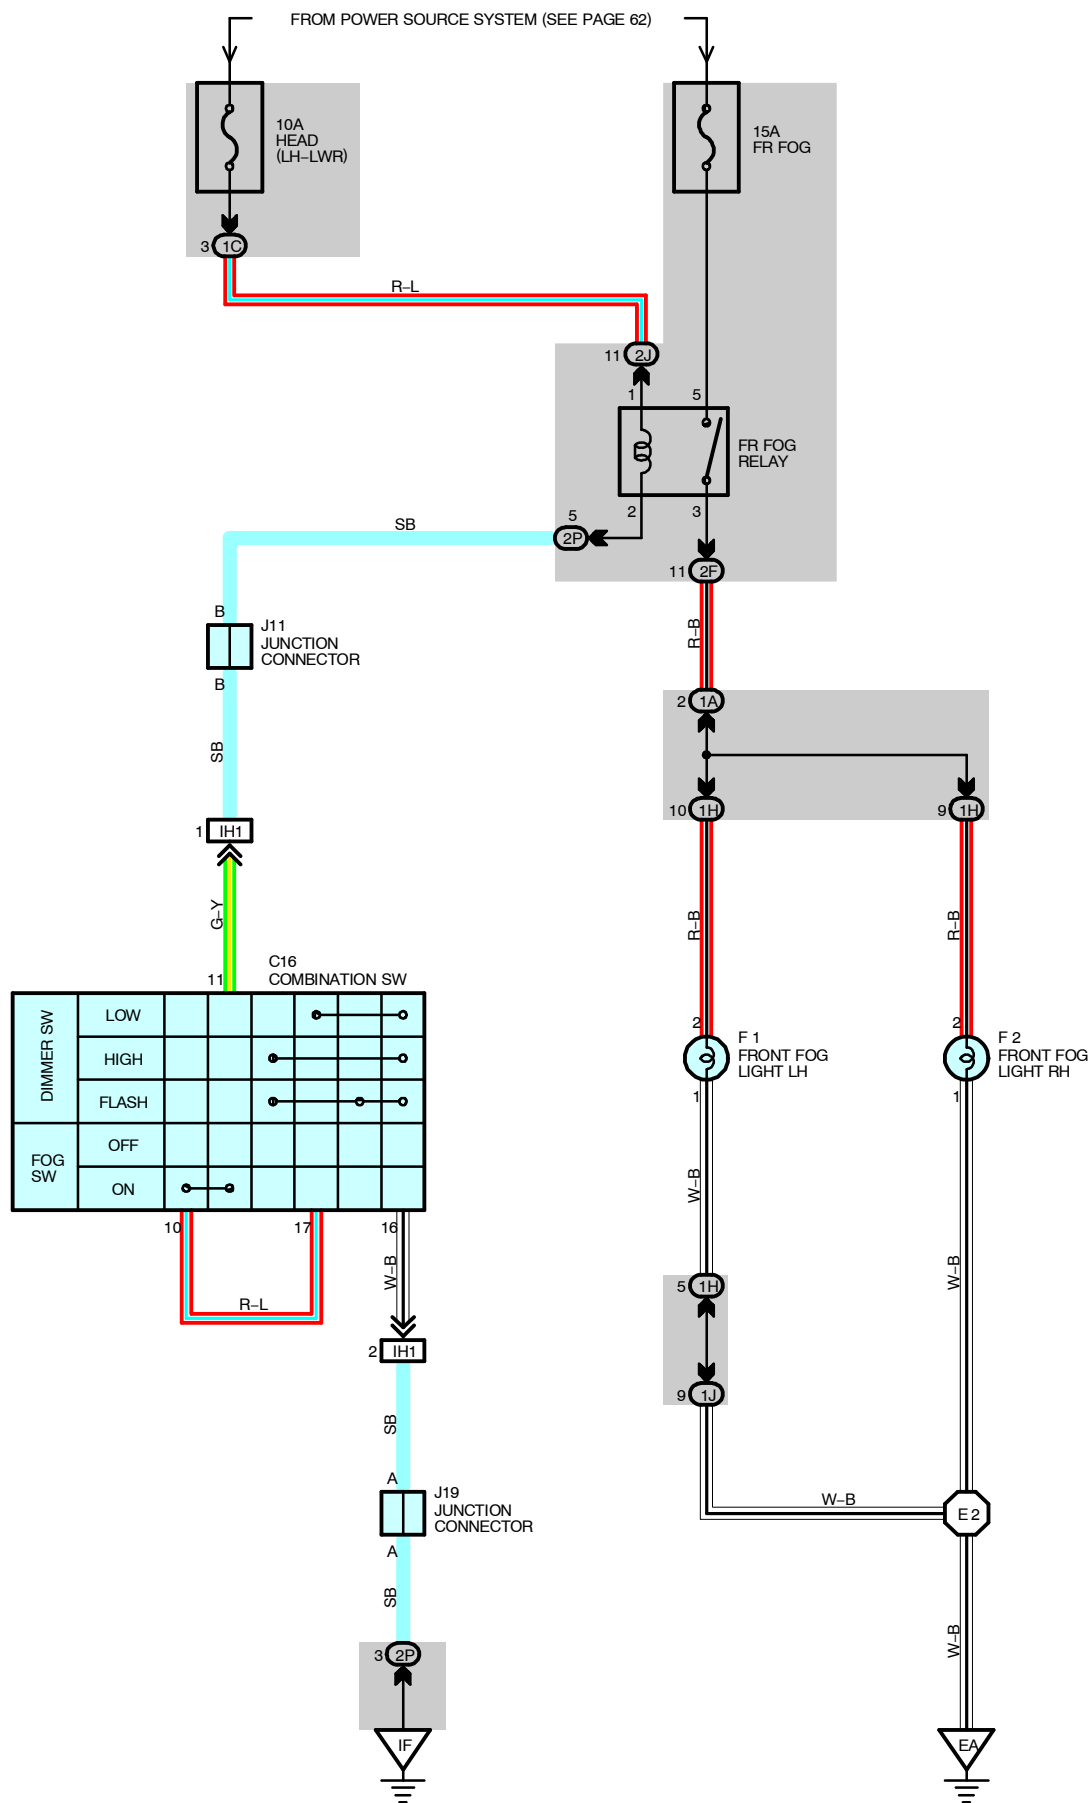

SERVICE HINTS

FR FOG RELAY

5-3 : Closed with light control SW at **HEAD** position, dimmer SW at **LOW** position and fog SW at **ON** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C16	38	F2	36	J19	39
F1	36	J11	39		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1H	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2J		
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
IF	46	Set Bolt of Cowl Side J/B LH


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	44	Engine Room Main Wire			


C16

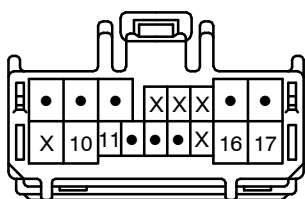


F1
BROWN

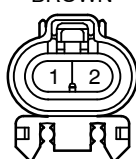

F2
BROWN

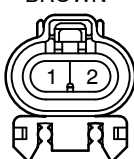


J11
GRAY

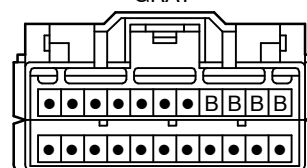

(Hint : See Page 7)

J19
GRAY

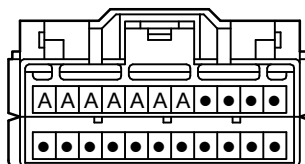

(Hint : See Page 7)