



# TURN SIGNAL AND HAZARD WARNING LIGHT

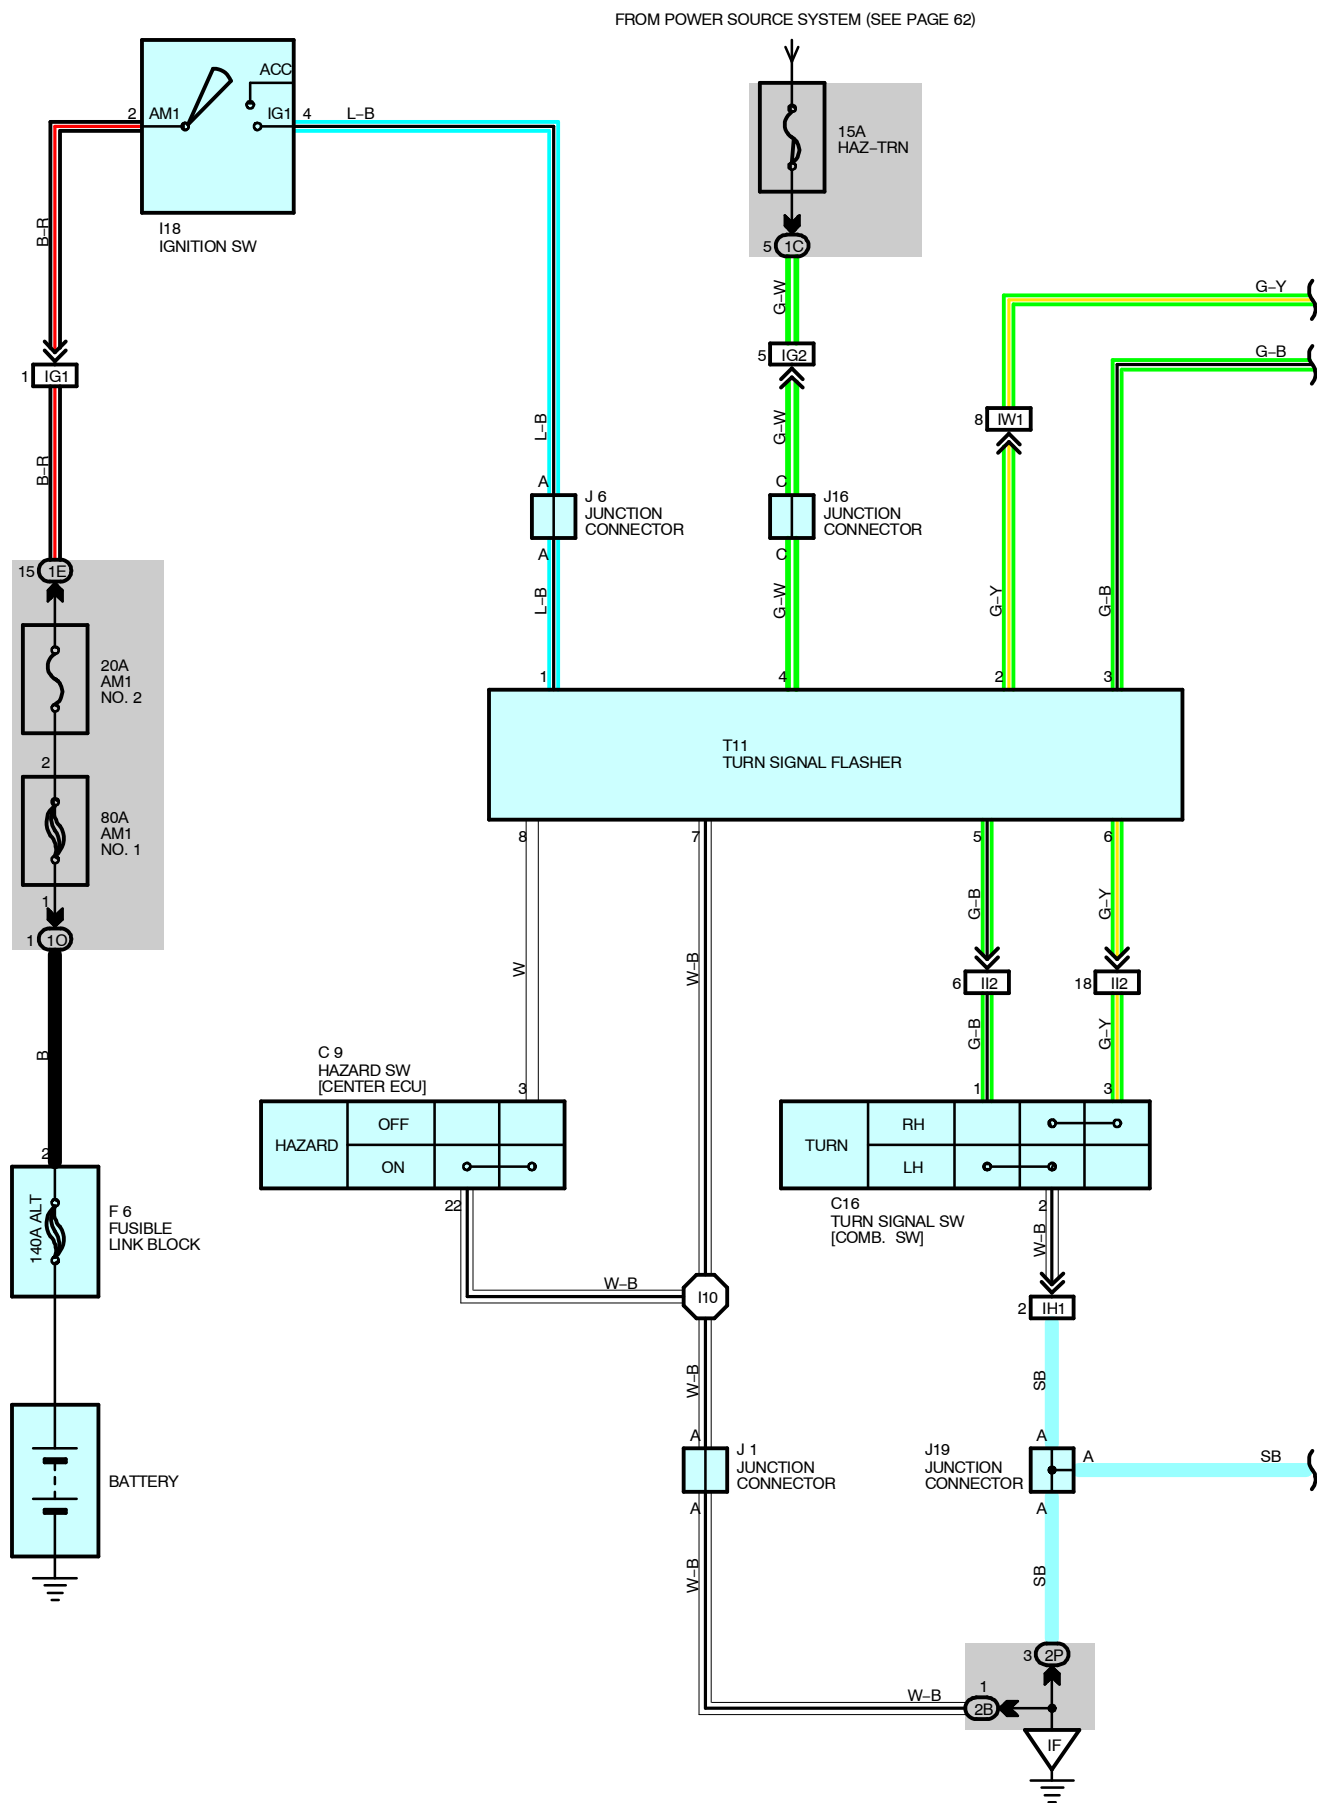

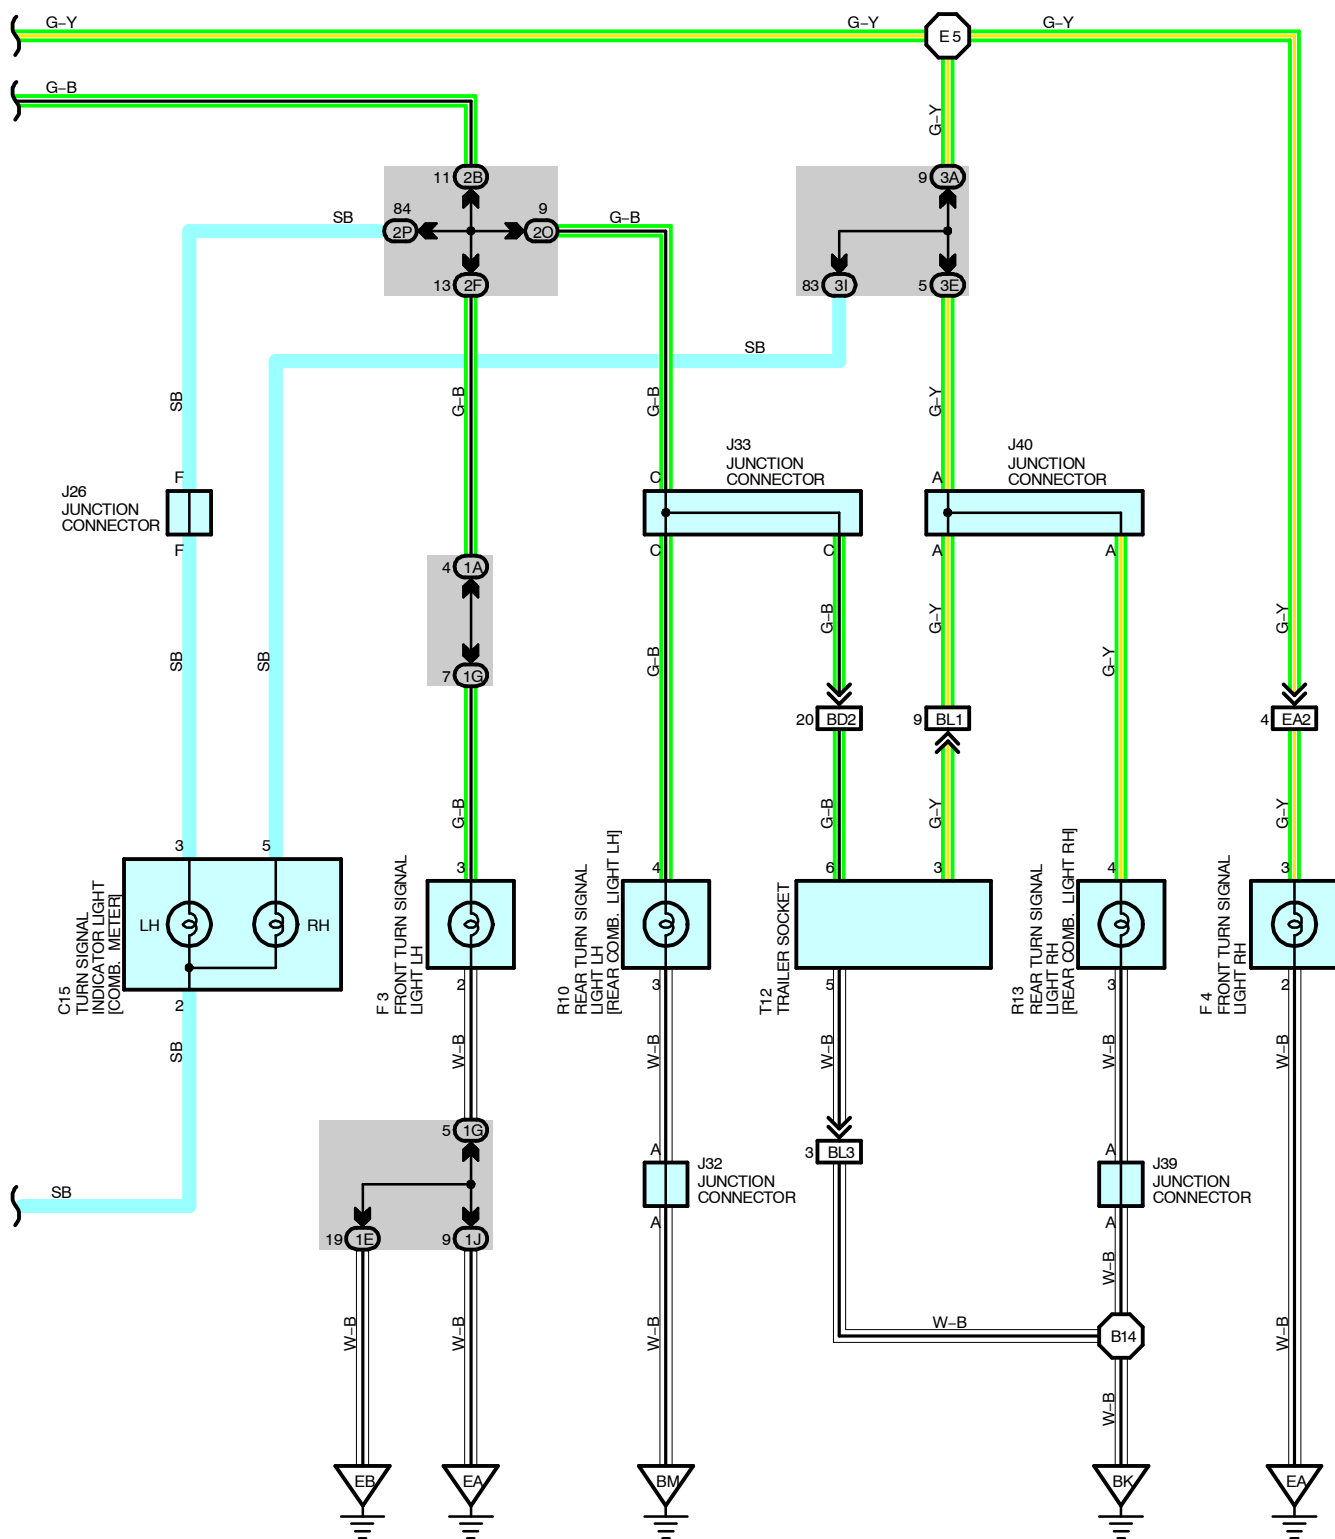

# TURN SIGNAL AND HAZARD WARNING LIGHT

## SERVICE HINTS

### T11 TURN SIGNAL FLASHER

- 4-GROUND : Always approx. **12** volts
- 1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 7-GROUND : Always continuity

## ○ : PARTS LOCATION

| Code | See Page           | Code | See Page           | Code | See Page           |
|------|--------------------|------|--------------------|------|--------------------|
| C9   | <a href="#">38</a> | J1   | <a href="#">39</a> | J39  | <a href="#">40</a> |
| C15  | <a href="#">38</a> | J6   | <a href="#">39</a> | J40  | <a href="#">40</a> |
| C16  | <a href="#">38</a> | J16  | <a href="#">39</a> | R10  | <a href="#">41</a> |
| F3   | <a href="#">36</a> | J19  | <a href="#">39</a> | R13  | <a href="#">41</a> |
| F4   | <a href="#">36</a> | J26  | <a href="#">39</a> | T11  | <a href="#">39</a> |
| F6   | <a href="#">36</a> | J32  | <a href="#">40</a> | T12  | <a href="#">41</a> |
| I18  | <a href="#">38</a> | J33  | <a href="#">40</a> |      |                    |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page           | Junction Block and Wire Harness (Connector Location)                      |
|------|--------------------|---------------------------------------------------------------------------|
| 1A   | <a href="#">21</a> | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)       |
| 1C   |                    |                                                                           |
| 1E   |                    |                                                                           |
| 1G   | <a href="#">21</a> | Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)       |
| 1J   |                    |                                                                           |
| 1O   | <a href="#">21</a> | Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)       |
| 2B   | <a href="#">24</a> | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                          |
| 2F   | <a href="#">24</a> | Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)              |
| 2O   | <a href="#">24</a> | Floor Wire and Cowl Side J/B LH (Left Kick Panel)                         |
| 2P   | <a href="#">26</a> | Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)  |
| 3A   | <a href="#">30</a> | Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)             |
| 3E   | <a href="#">30</a> | Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)                   |
| 3I   | <a href="#">30</a> | Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel) |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page           | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|--------------------|----------------------------------------------------------------------------|
| EA2  | <a href="#">44</a> | Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right) |
| IG1  | <a href="#">48</a> | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)         |
| IG2  |                    |                                                                            |
| IH1  | <a href="#">48</a> | Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)   |
| II2  | <a href="#">48</a> | Column Wire and Dash Wire (Near the Ignition SW)                           |
| IW1  | <a href="#">52</a> | Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)                 |
| BD2  | <a href="#">54</a> | Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)              |
| BL1  | <a href="#">56</a> | Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember) |
| BL3  |                    |                                                                            |

## ▽ : GROUND POINTS


| Code | See Page           | Ground Points Location                      |
|------|--------------------|---------------------------------------------|
| EA   | <a href="#">44</a> | Front Right Side of Fender Apron            |
| EB   |                    |                                             |
| IF   | <a href="#">46</a> | Set Bolt of Cowl Side J/B LH                |
| BK   | <a href="#">54</a> | Front Side Under the Front Passenger's Seat |
| BM   | <a href="#">54</a> | Left Rear Side Quarter Panel                |




## : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| E5   | 44       | Engine Room No.2 Wire           | B14  | 56       | Floor No.2 Wire                 |
| I10  | 48       | Dash Wire                       |      |          |                                 |


**C9**

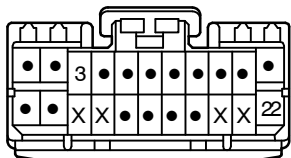

**C15**

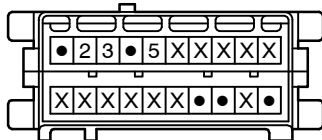

**C16**

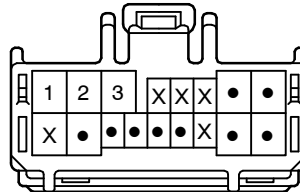

**F3**  
GRAY




**F4**  
GRAY




**F6**

(See Page 34)

**I18**

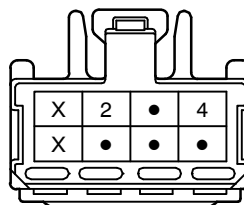


**J1**

 


(Hint : See Page 7)

 **J6**  
BLUE




(Hint : See Page 7)

 **J16**  
BLUE




(Hint : See Page 7)

**J19**  
GRAY

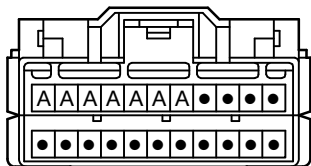


(Hint : See Page 7)

**J26**  
BLUE

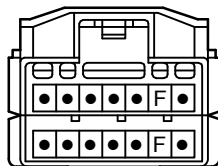


(Hint : See Page 7)

**J32**

 


(Hint : See Page 7)

 **J33**  
BLUE




(Hint : See Page 7)

**J39**

 


(Hint : See Page 7)

 **J40**  
BLUE




(Hint : See Page 7)

**R10**

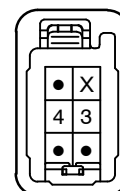

**R13**

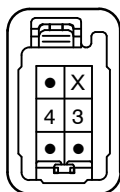

**T11**  
BLACK



**T12**  
GRAY

