



FROM POWER SOURCE SYSTEM (SEE PAGE 62)

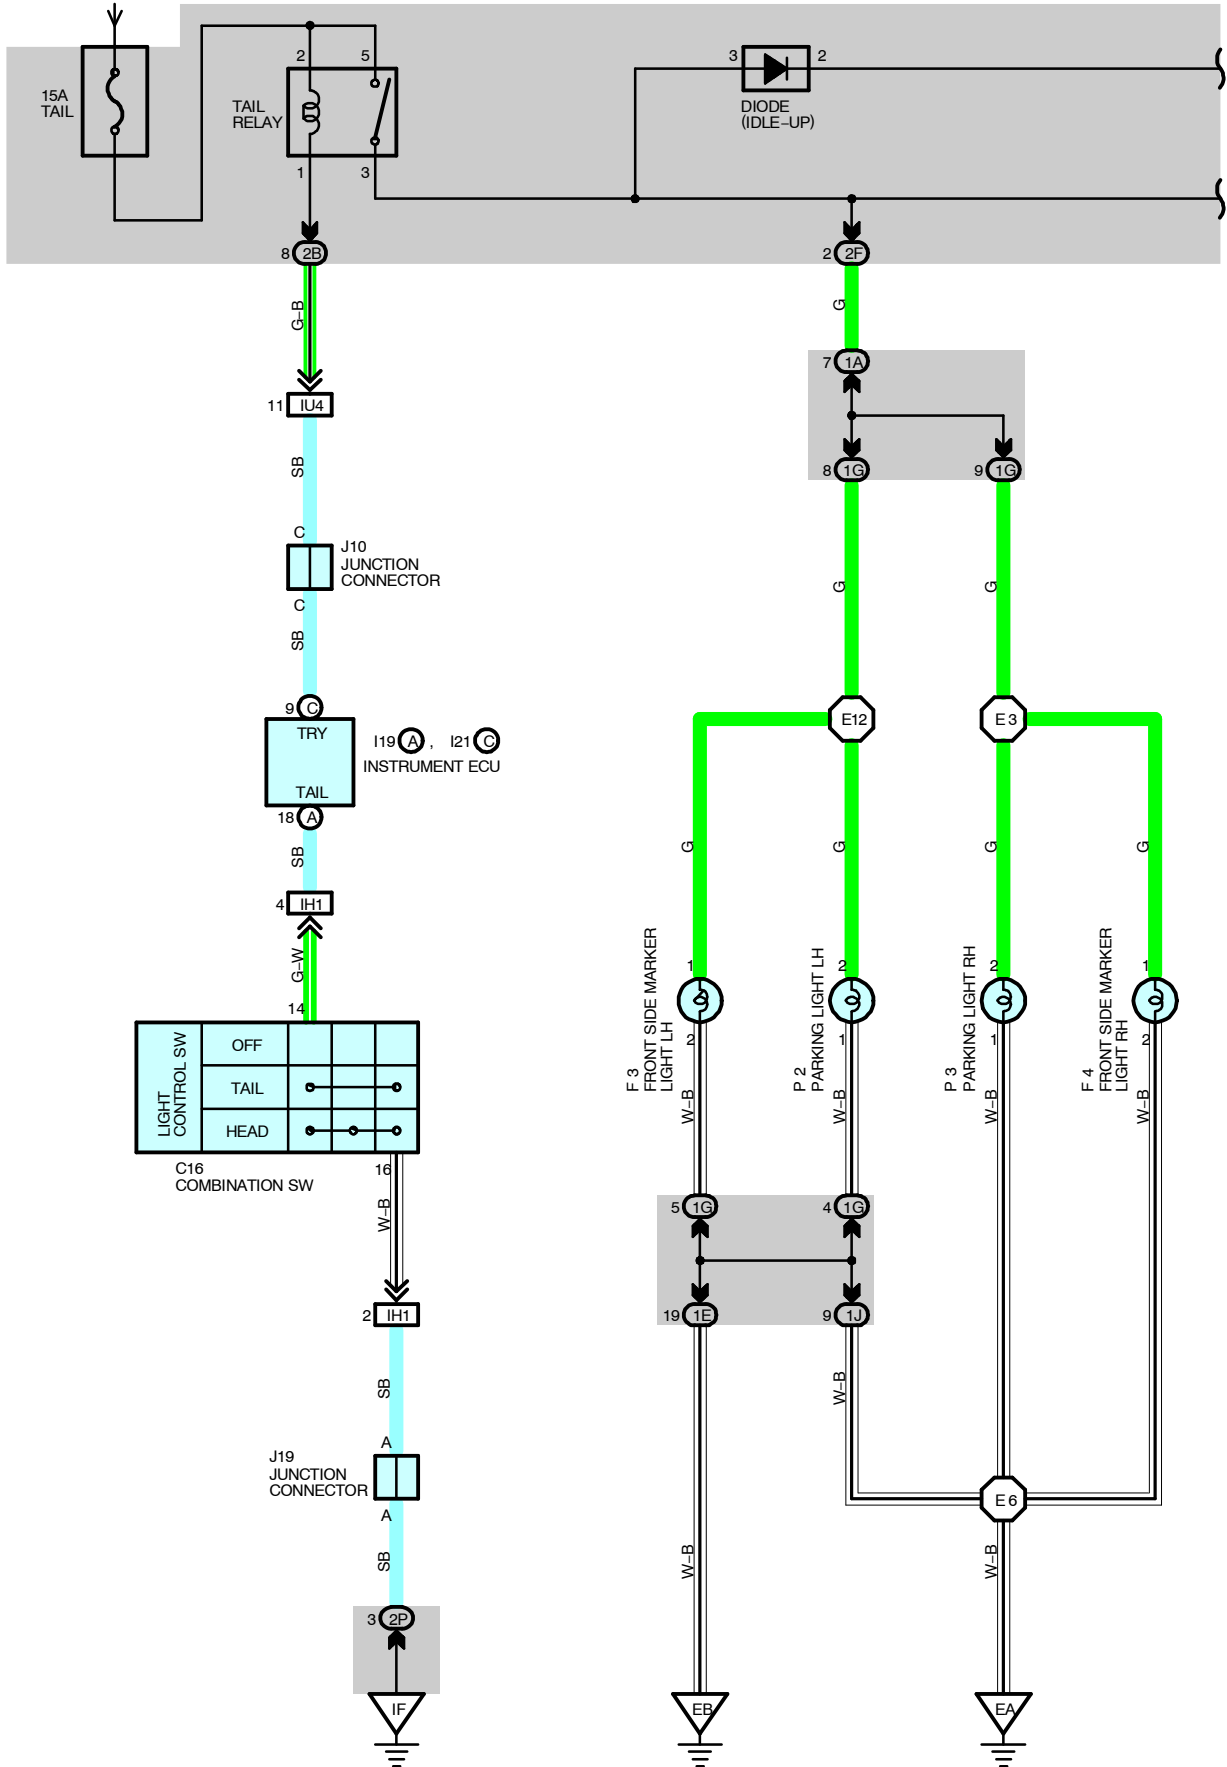

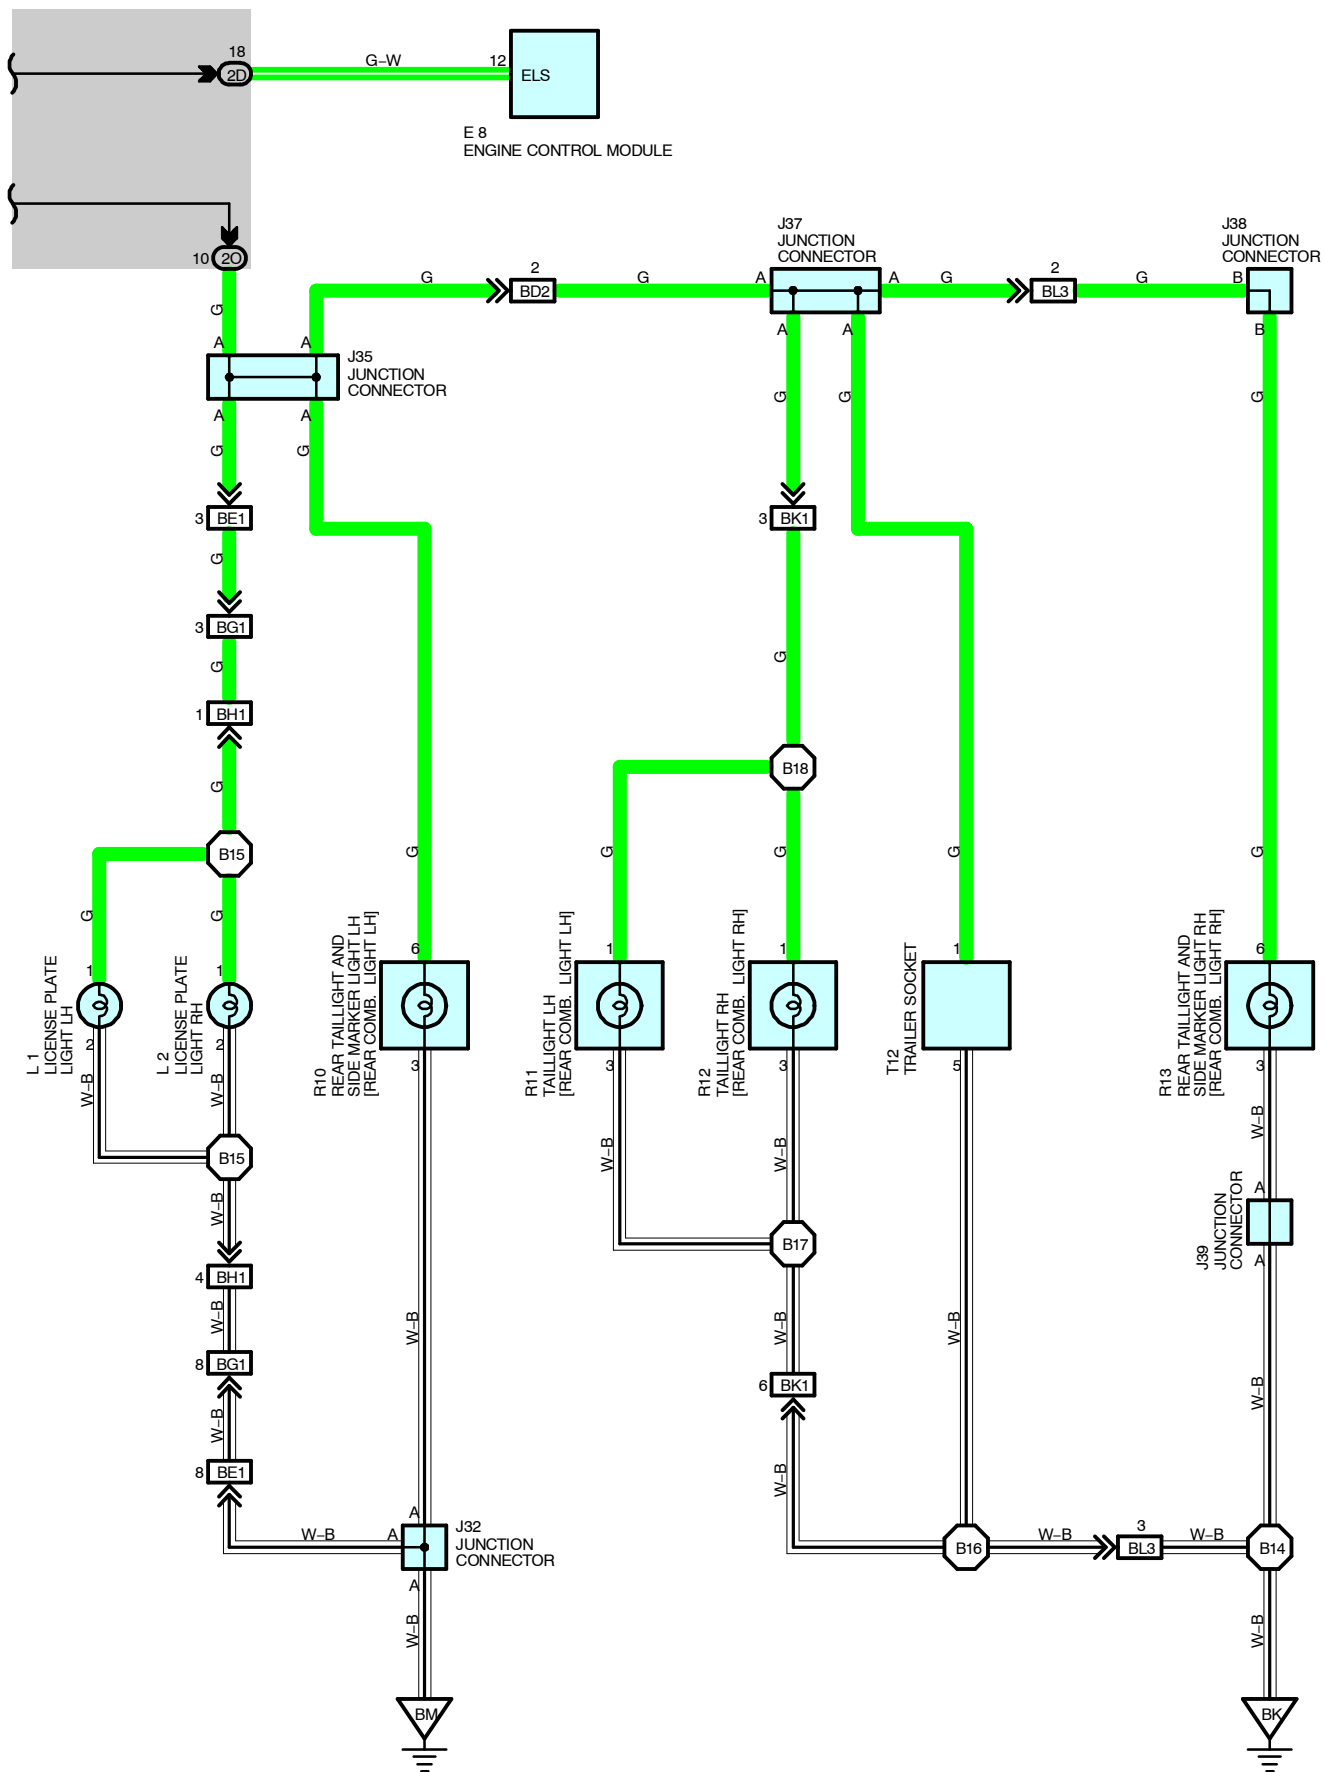

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C16 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C16	38	J32	40	P3	37
E8	38	J35	40	R10	41
F3	36	J37	40	R11	41
F4	36	J38	40	R12	41
I19	38	J39	40	R13	41
I21	38	L1	40	T12	41
J10	39	L2	40		
J19	39	P2	37		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU4	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
BD2	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BE1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BG1	56	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BH1	56	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK1	56	Back Door Lower Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BL3	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	44	Front Right Side of Fender Apron
EB		
IF	46	Set Bolt of Cowl Side J/B LH
BK	54	Front Side Under the Front Passenger's Seat
BM	54	Left Rear Side Quarter Panel


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	44	Engine Room Main Wire	B15	56	Back Door Upper Wire
E6			B16	56	Floor No.3 Wire
E12			B17	56	Back Door Lower Wire
B14	56	Floor No.2 Wire	B18		

C16

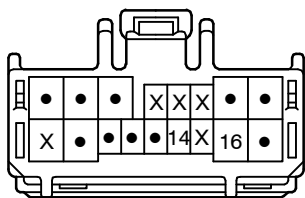


E8

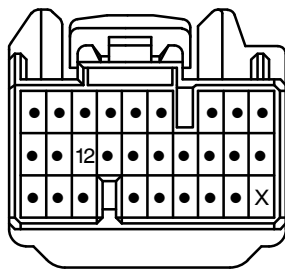


F3
GRAY



 
F4
GRAY




I19 (A)

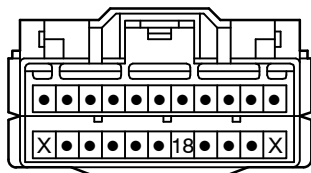

I21 (C)
BLUE

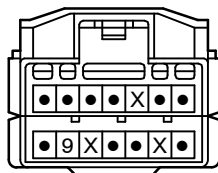


J10

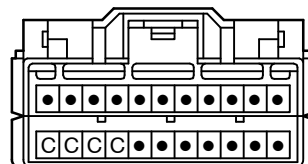


(Hint : See Page 7)

J19
GRAY

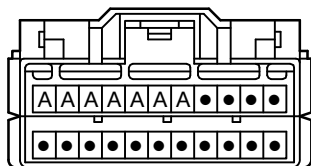


(Hint : See Page 7)

 J32




(Hint : See Page 7)

 J35
GREEN




(Hint : See Page 7)

 J37
GREEN




(Hint : See Page 7)

 J38
BLUE




(Hint : See Page 7)

 J39



(Hint : See Page 7)

 
L1




L2




P2
GRAY

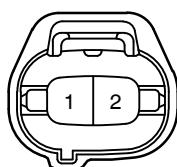


P3
GRAY

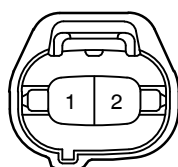


R10

 


R11

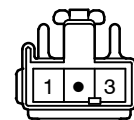

R12

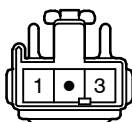

R13

 

T12
GRAY

