



ILLUMINATION

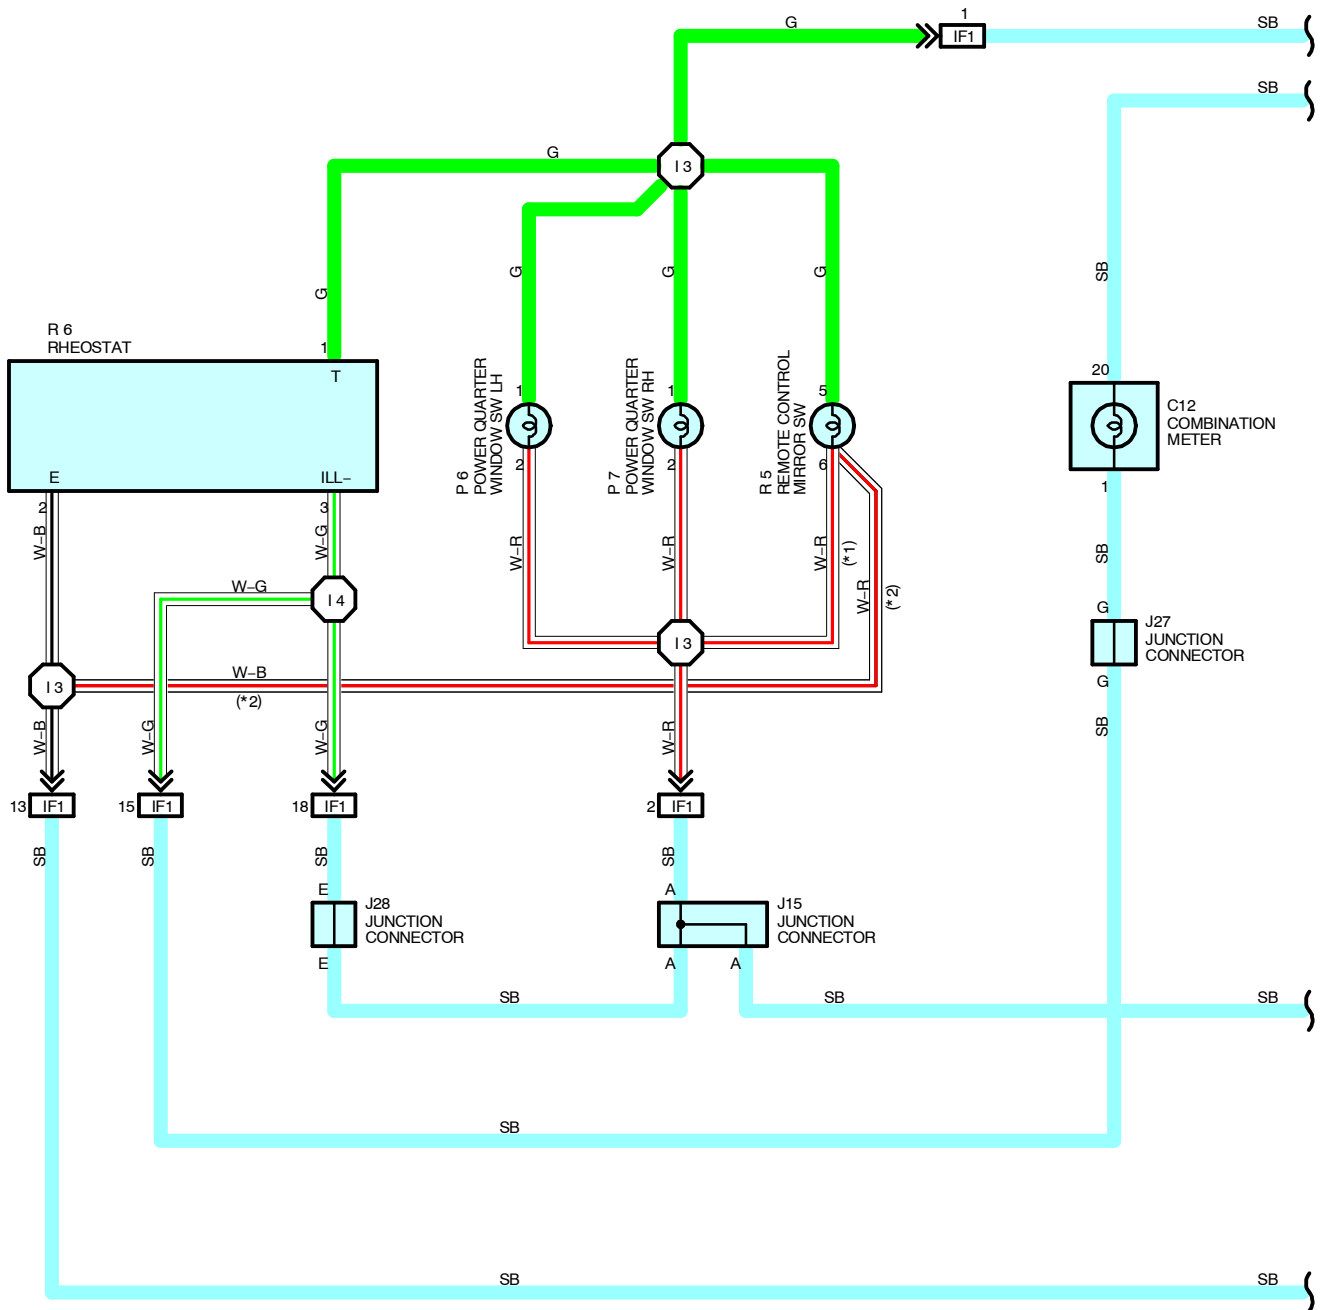

ILLUMINATION

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

* 3 : W/ REAR AIR CONDITIONING

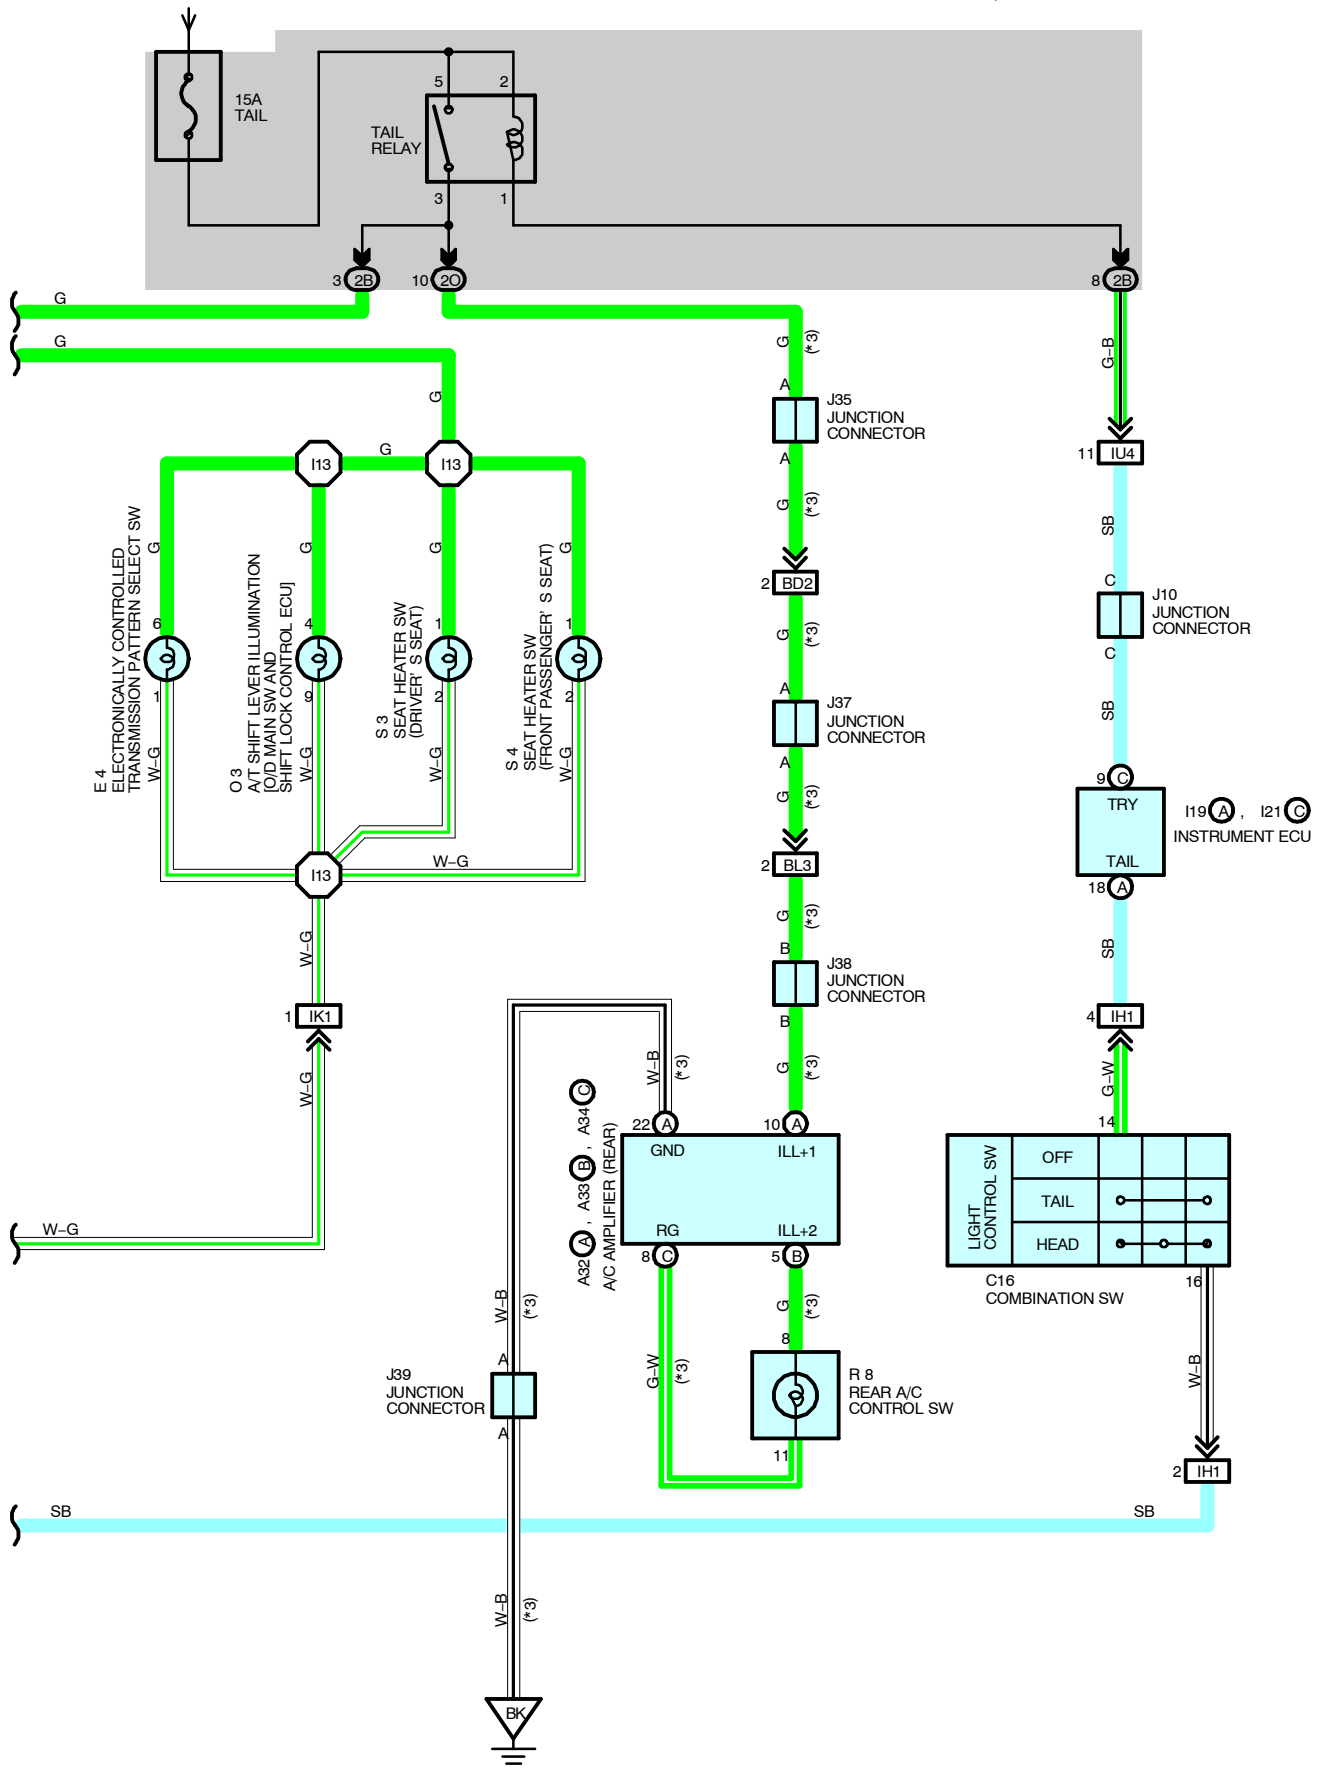

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C16 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A29	38	J10	39	P6	39
A32	40	J14	39	P7	39
A33	40	J15	39	R1	39
A34	40	J19	39	R4	39
C9	38	J26	39	R5	39
C11	38	J27	39	R6	39
C12	38	J28	39	R8	41
C16	38	J35	40	S3	39
E4	38	J37	40	S4	39
G3	38	J38	40	S7	41
I19	38	J39	40		
I21	38	O3	39		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IK1	48	Console Box Wire and Dash Wire (Left Side of Front Console)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	50	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IV2	52	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
BD2	54	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BL3	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

: GROUND POINTS


Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH
BK	54	Front Side Under the Front Passenger's Seat

: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire	I11	48	Dash Wire
I4			I13	48	Console Box Wire
I10	48	Dash Wire	I18	48	Rear Console Box Wire

ILLUMINATION

 
A29




A32 (A)

 


A33 (B)

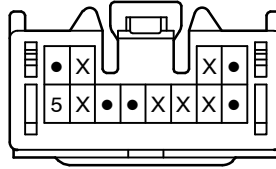

A34 (C)

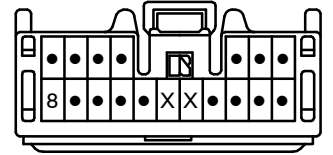


C9

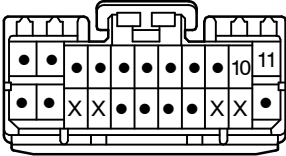


**C11
GRAY**




**C12
GRAY**

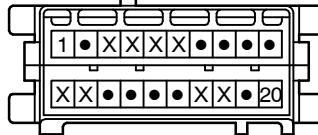

C16

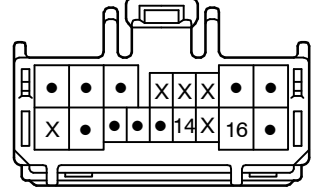


E4

 


G3




I19 (A)

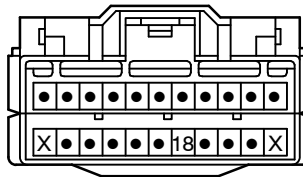

**I21 (C)
BLUE**

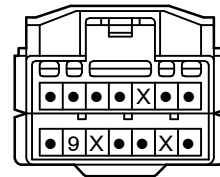


J10

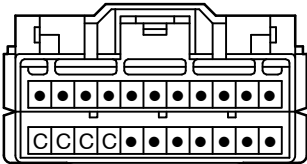


(Hint : See Page 7)

J14

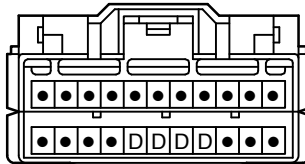


(Hint : See Page 7)

**J15
GRAY**

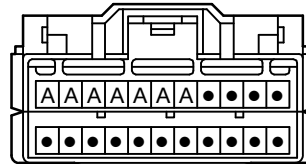


(Hint : See Page 7)

**J19
GRAY**

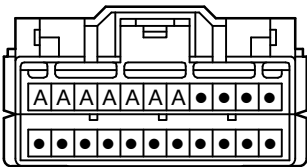


(Hint : See Page 7)

**J26
BLUE**

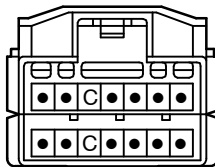


(Hint : See Page 7)

**J27
GRAY**

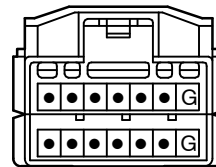


(Hint : See Page 7)

J28

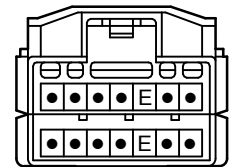


(Hint : See Page 7)

 **J35
GREEN**




(Hint : See Page 7)

 **J37
GREEN**




(Hint : See Page 7)

 **J38
BLUE**




(Hint : See Page 7)

 J39




(Hint : See Page 7)


O3

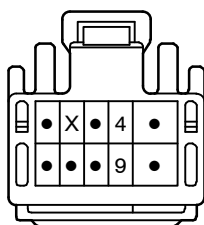


P6
BLACK

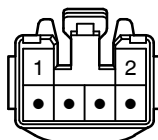


P7
BLACK

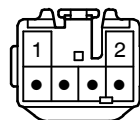


R1

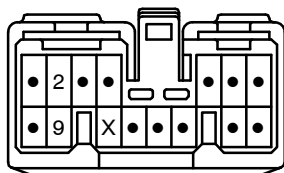


R4

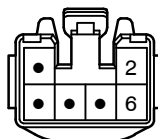


R5
BLACK

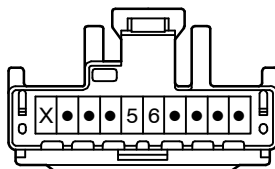


R6
(w/ Rear Diff. Lock)

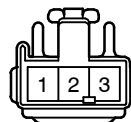


R6
(w/o Rear Diff. Lock) GRAY

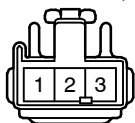


R8

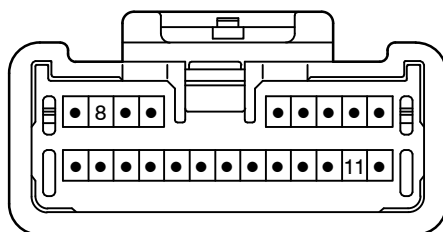

S3
BLACK

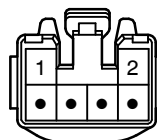

S4

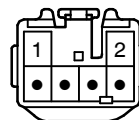

S7
GRAY

