


POWER OUTLET

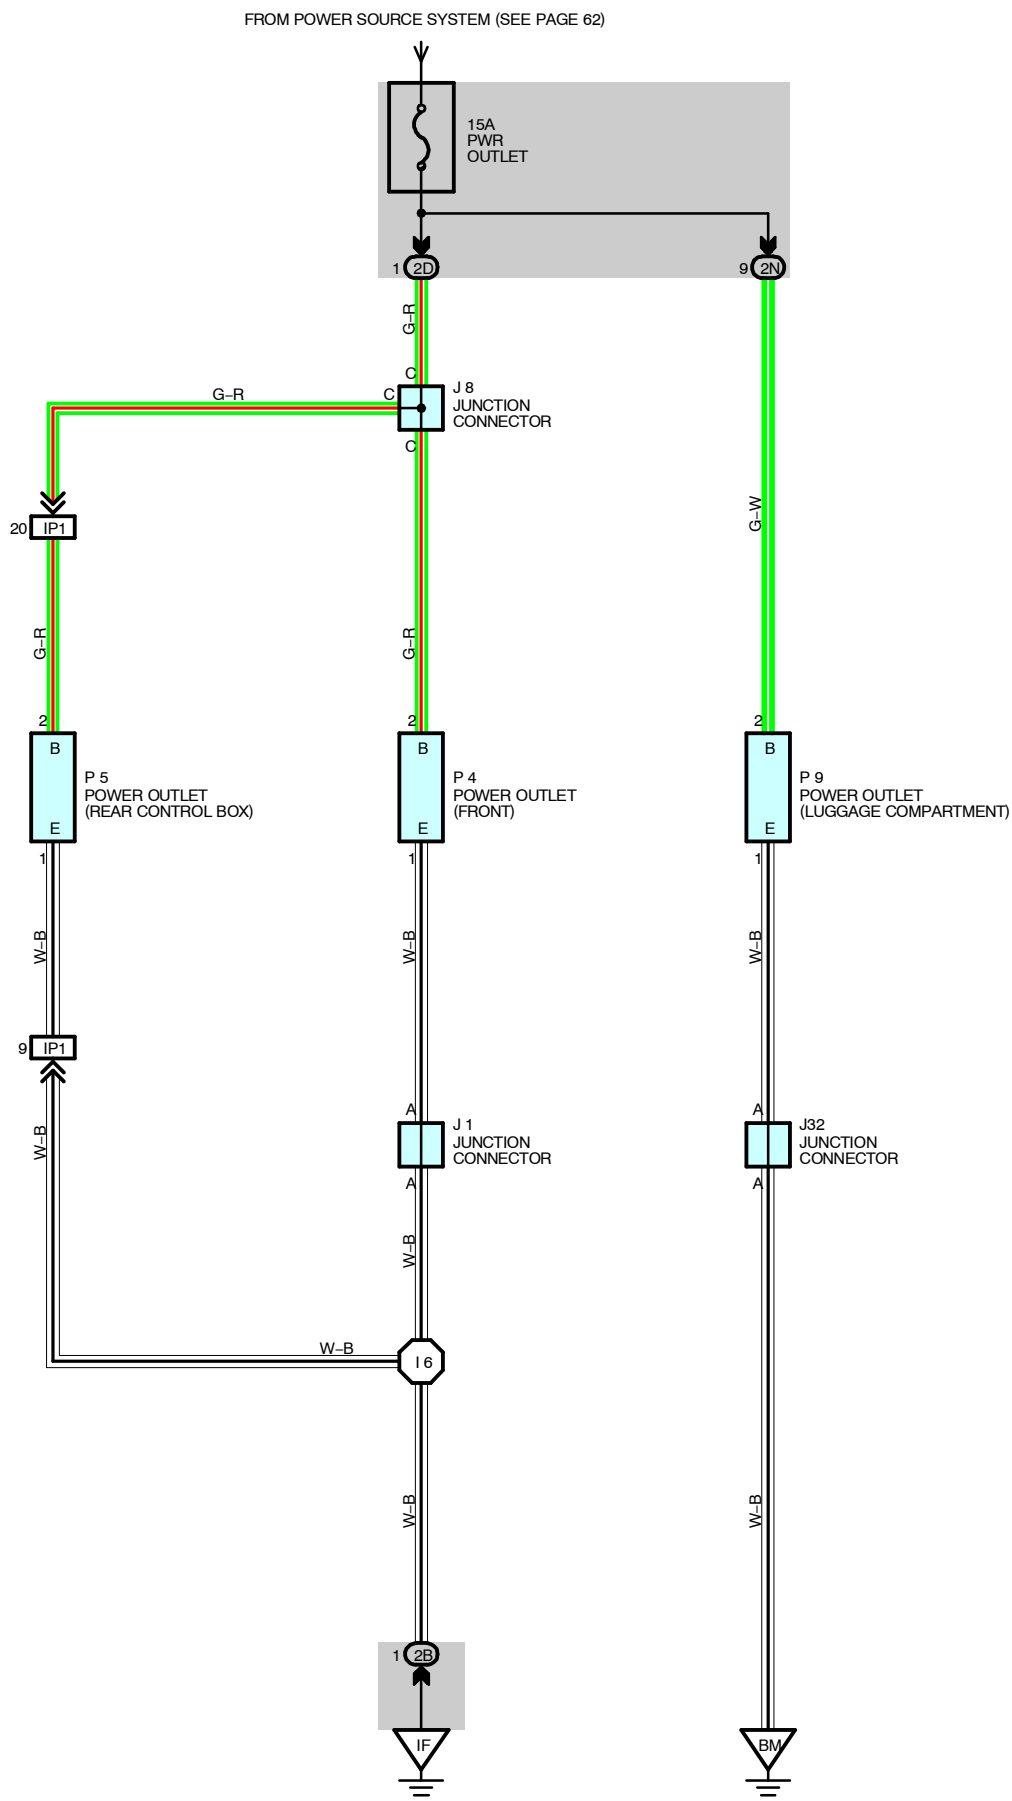

SERVICE HINTS

P4 POWER OUTLET (FRONT)

2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

P5 POWER OUTLET (REAR CONSOLE BOX)

2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

P9 POWER OUTLET (LUGGAGE COMPARTMENT)

2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	39	J32	40	P5	39
J8	39	P4	39	P9	41

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
BM	54	Left Rear Side Quarter Panel

○ : SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	48	Dash Wire			

 J1




(Hint : See Page 7)

 J8
BLUE



(Hint : See Page 7)

 J32



(Hint : See Page 7)

P4



P5



P9

