


HORN

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

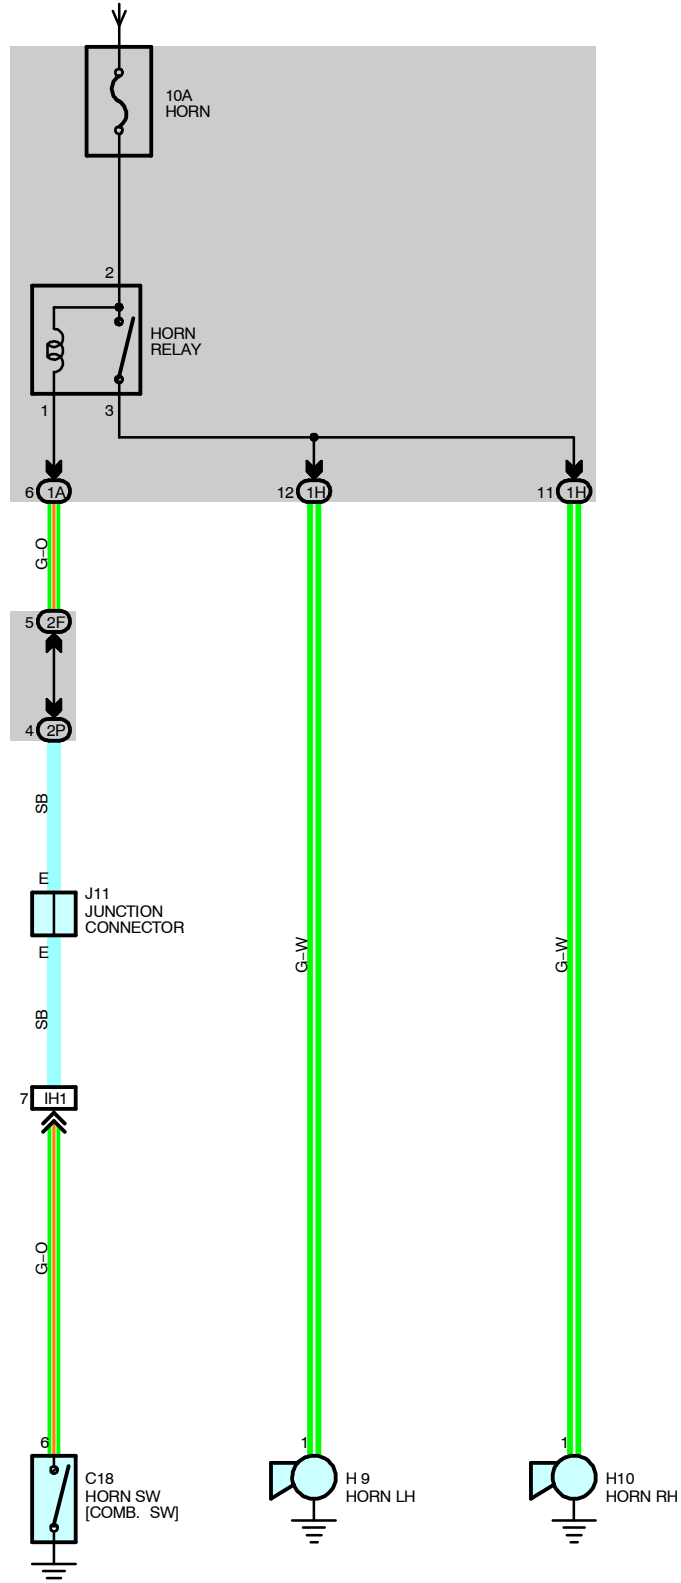

SERVICE HINTS

HORN RELAY

2-3 : Closed horn SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C18	38	H10	37		
H9	37	J11	39		


: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)

C18
BLACK

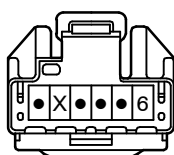


H9
BLACK



H10
BLACK



J11
GRAY

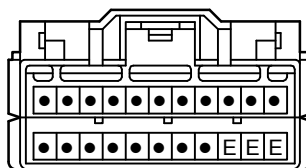

(Hint : See Page 7)