


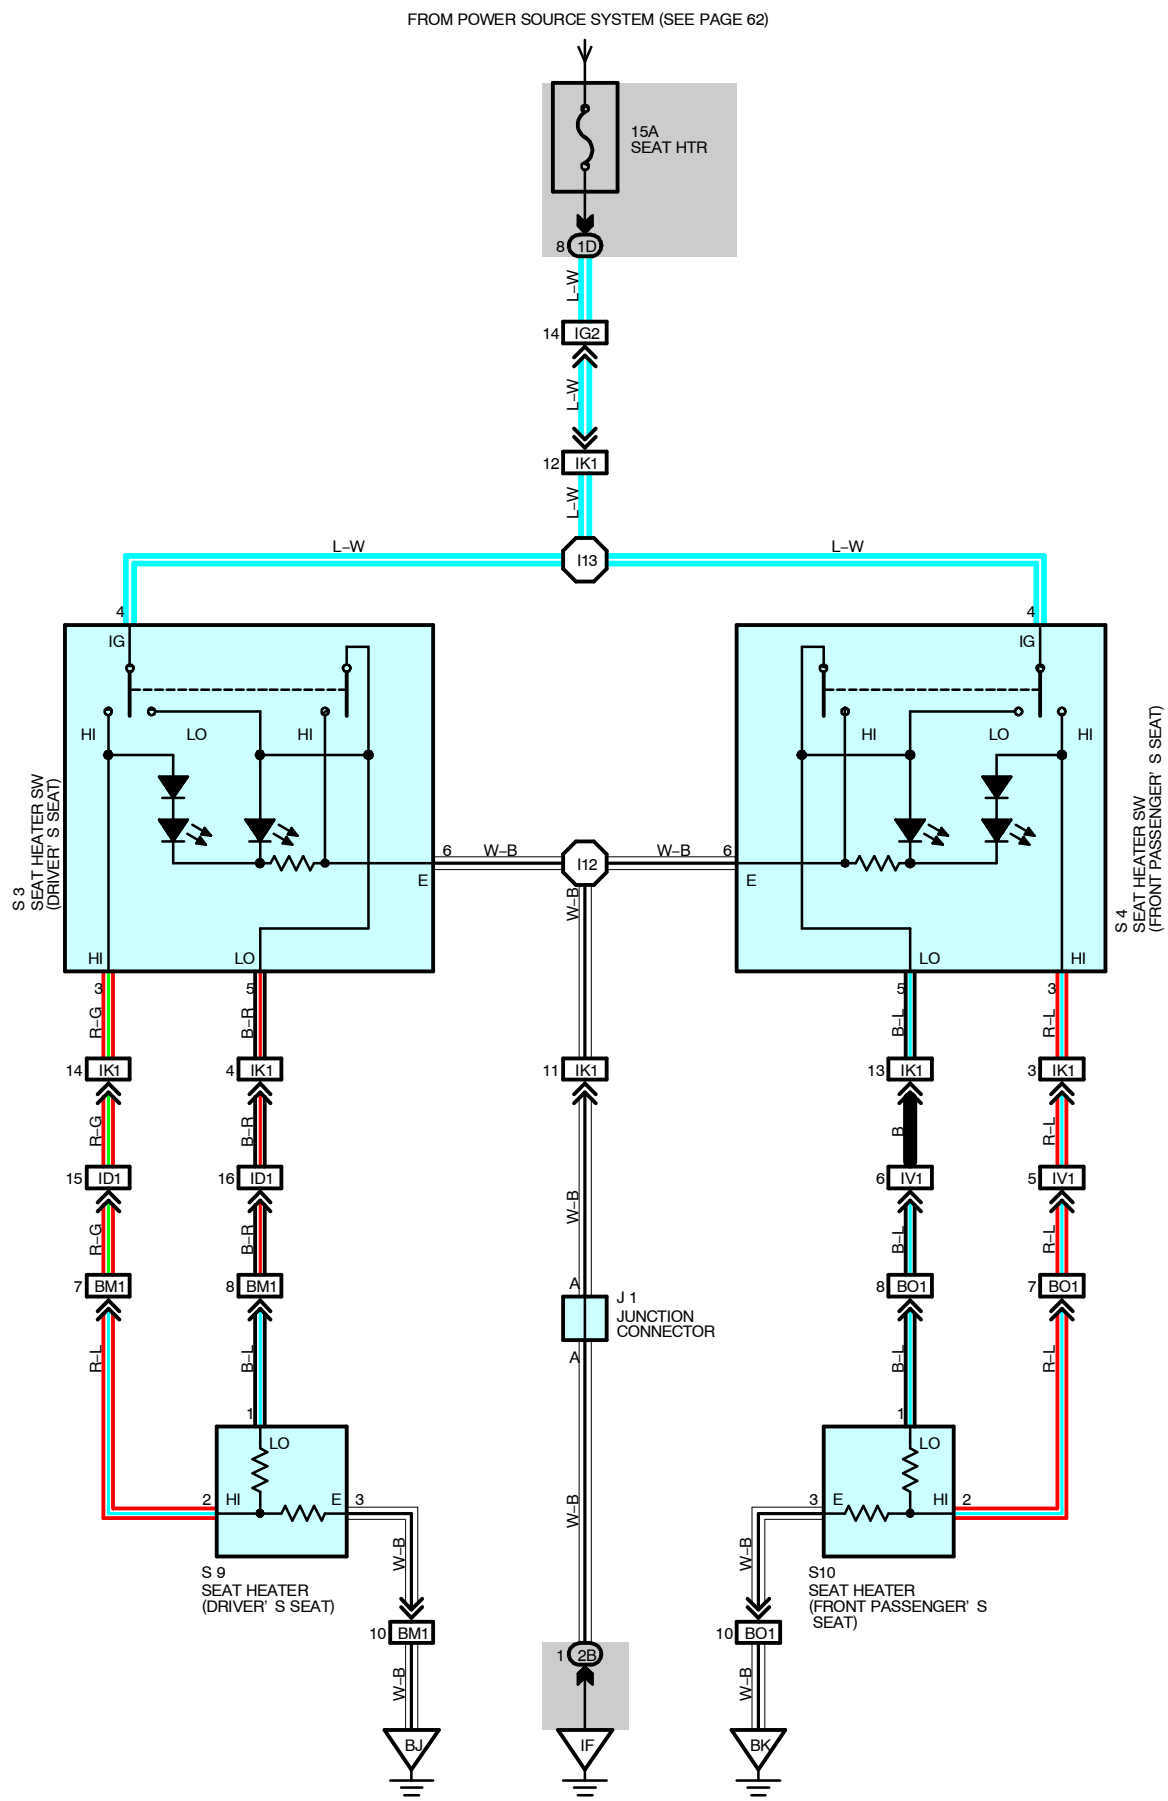

SERVICE HINTS

S3 SEAT HEATER SW (DRIVER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

S4 SEAT HEATER SW (FRONT PASSENGER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	39	S4	39	S10	42
S3	39	S9	42		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IG2	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IK1	48	Console Box Wire and Dash Wire (Left Side of Front Console)
IV1	52	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
BM1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BO1	58	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
BJ	54	Under the Driver's Seat
BK	54	Front Side Under the Front Passenger's Seat

○ : SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I12	48	Console Box Wire	I13	48	Console Box Wire

 J1




(Hint : See Page 7)


S3
BLACK

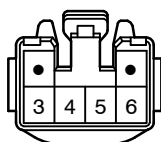

S4

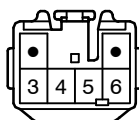

S9

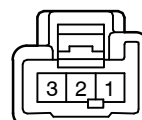

S10

