


AUTO ANTENNA

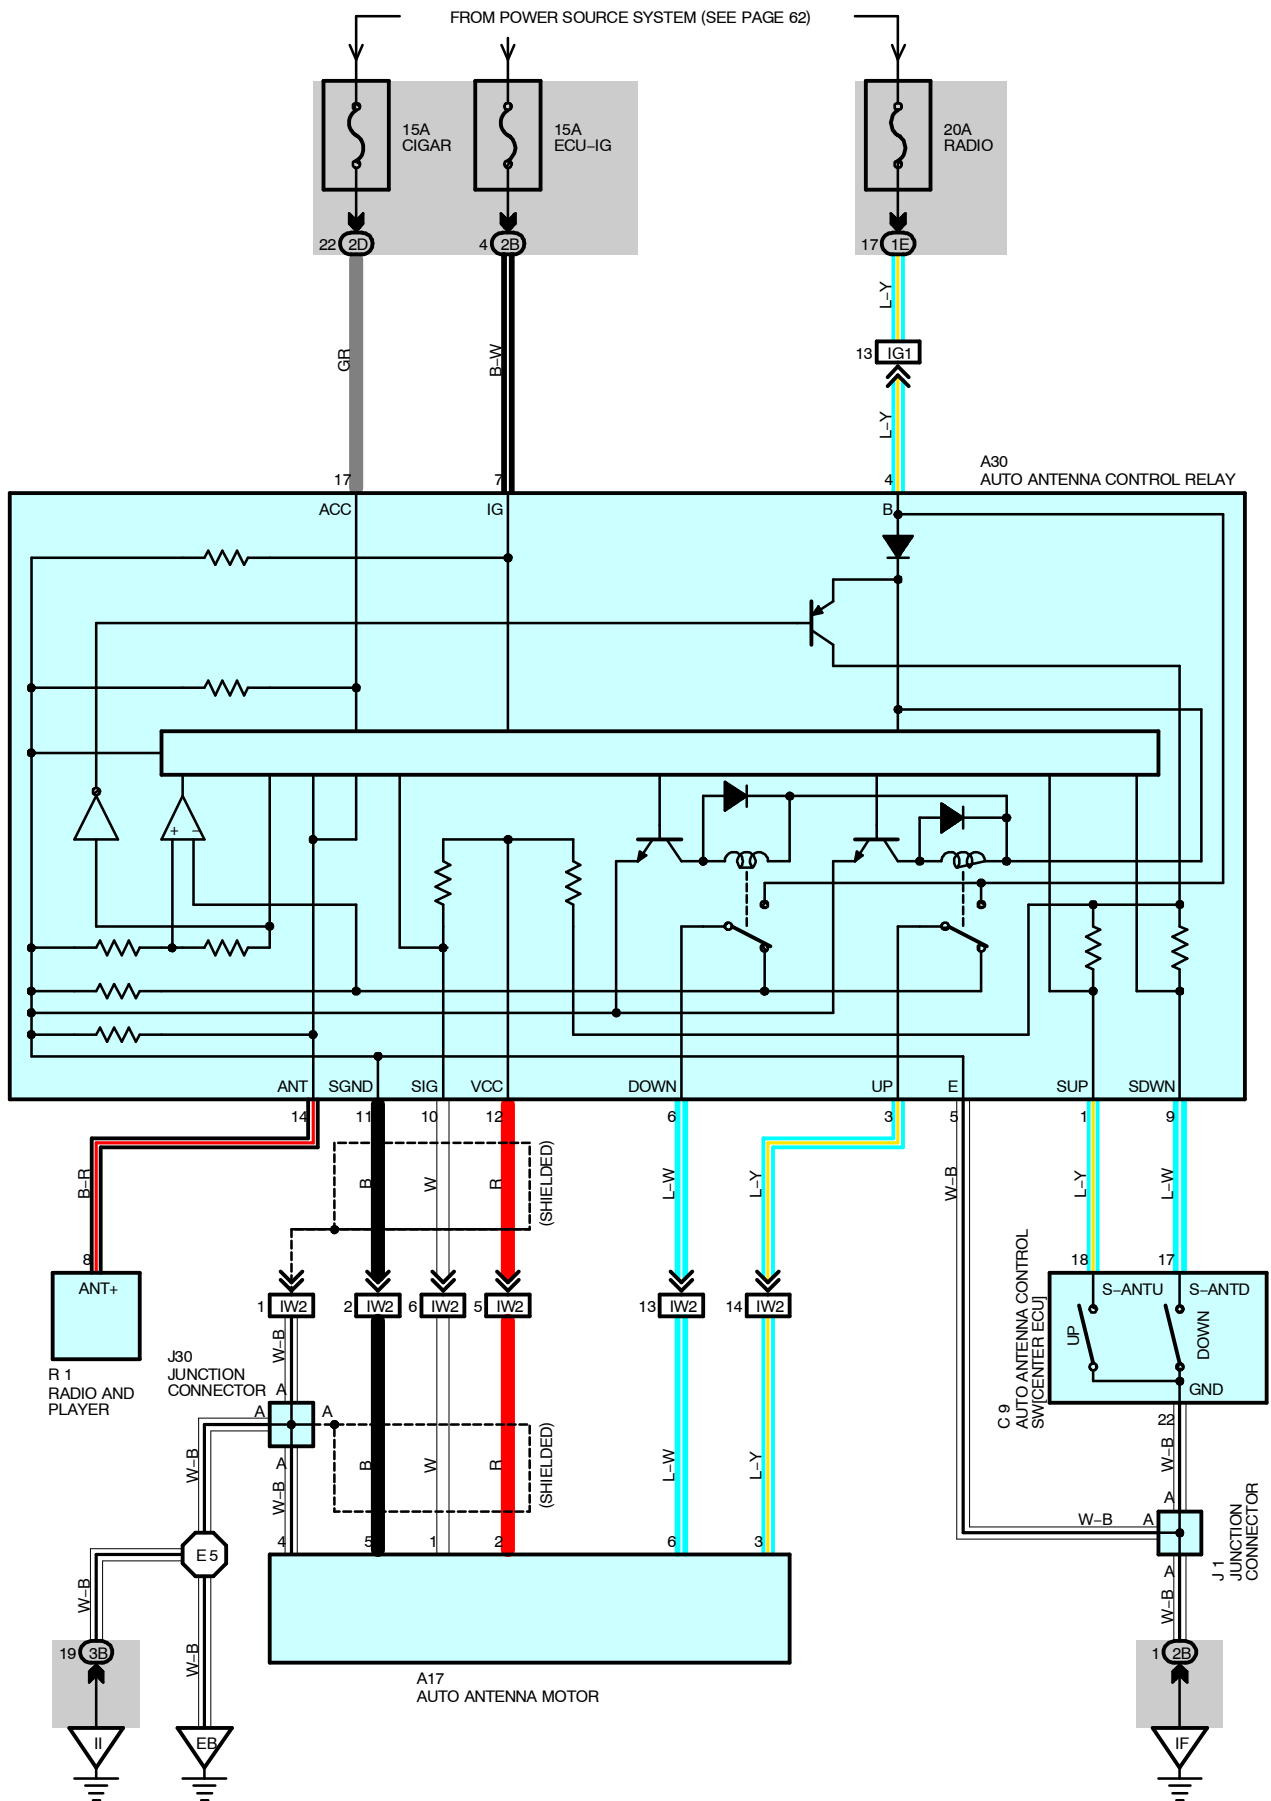

SERVICE HINTS

A30 AUTO ANTENNA CONTROL RELAY

- 4-GROUND : Always approx. **12** volts
- 7-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 17-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A17	36	C9	38	J30	39
A30	38	J1	39	R1	39

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
3B	30	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IW2	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	44	Front Right Side of Fender Apron
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH


○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	44	Engine Room No.2 Wire			


A17

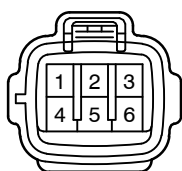


A30

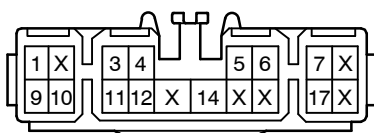

C9

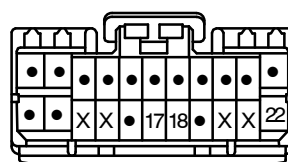


J1

 

(Hint : See Page 7)

 J30
BLUE



(Hint : See Page 7)

R1

