



RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

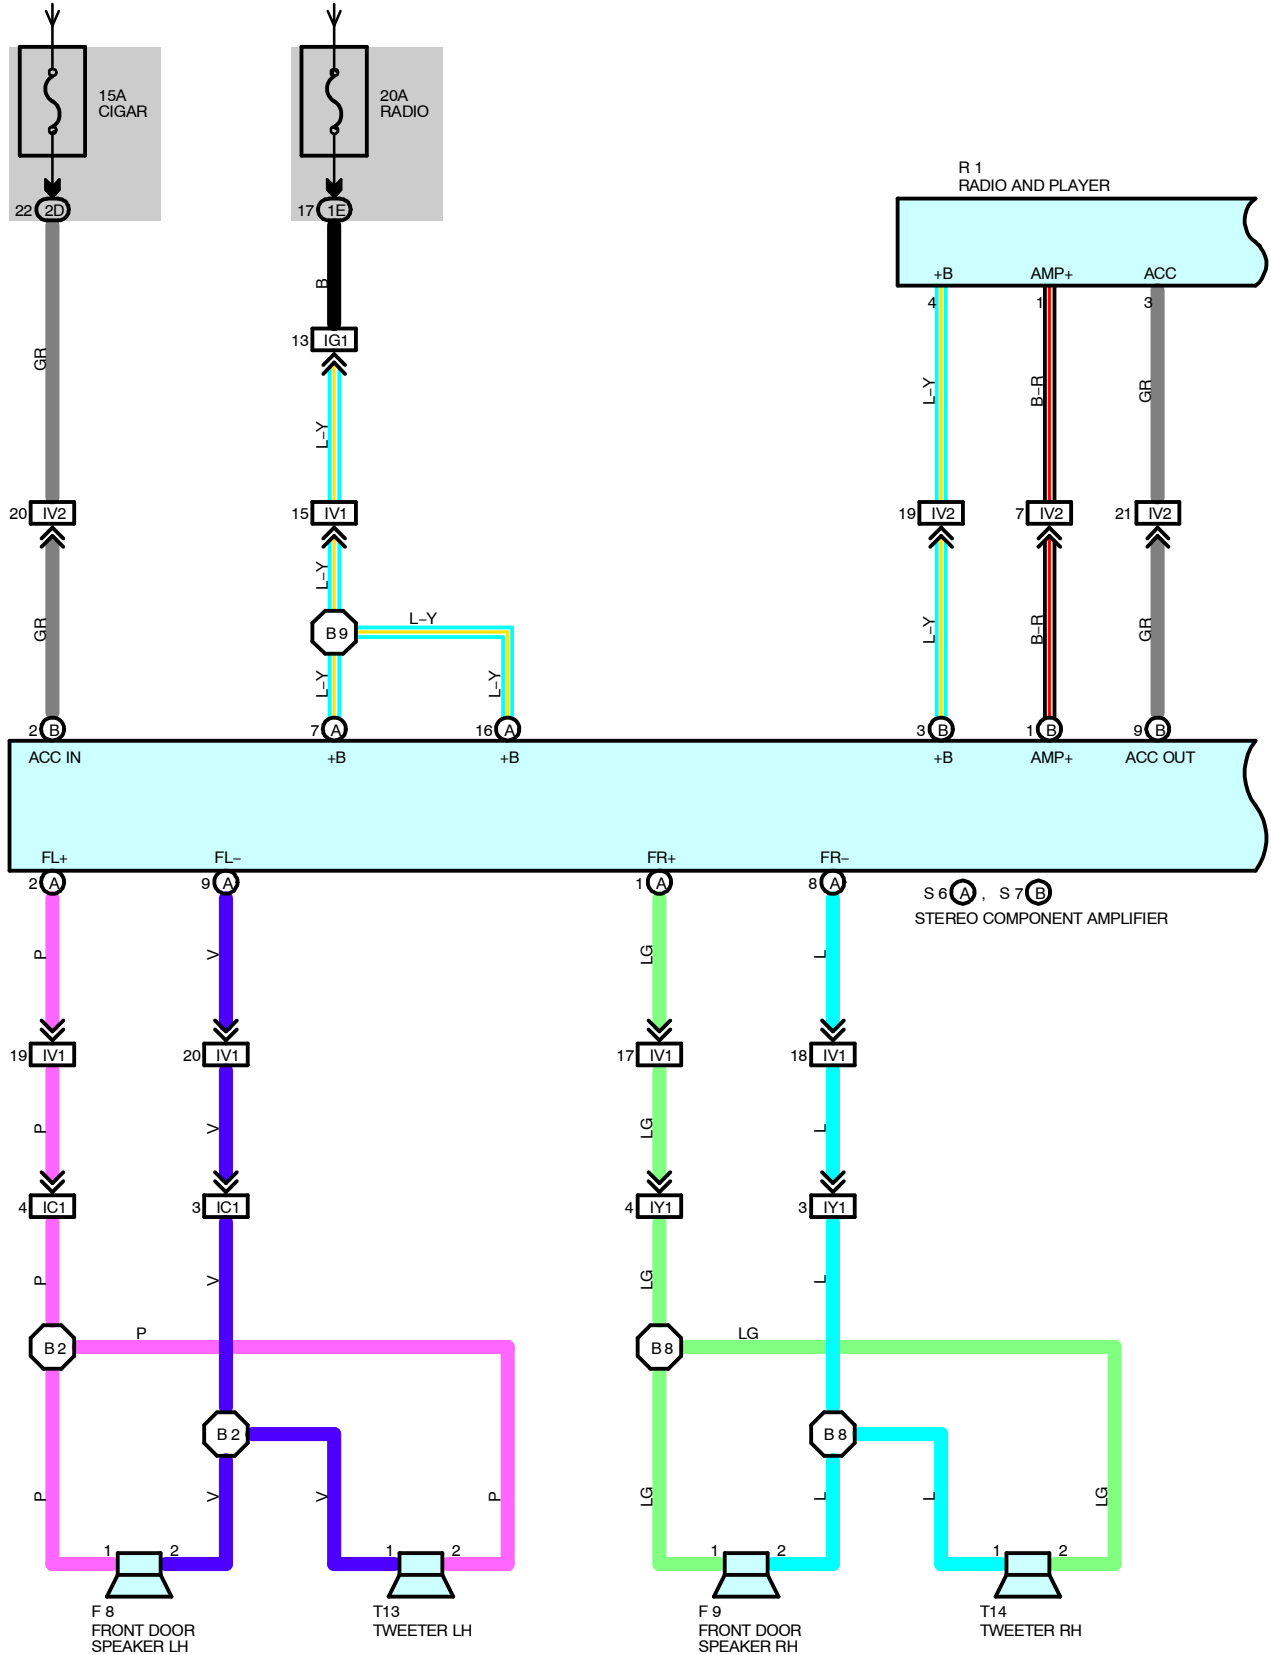

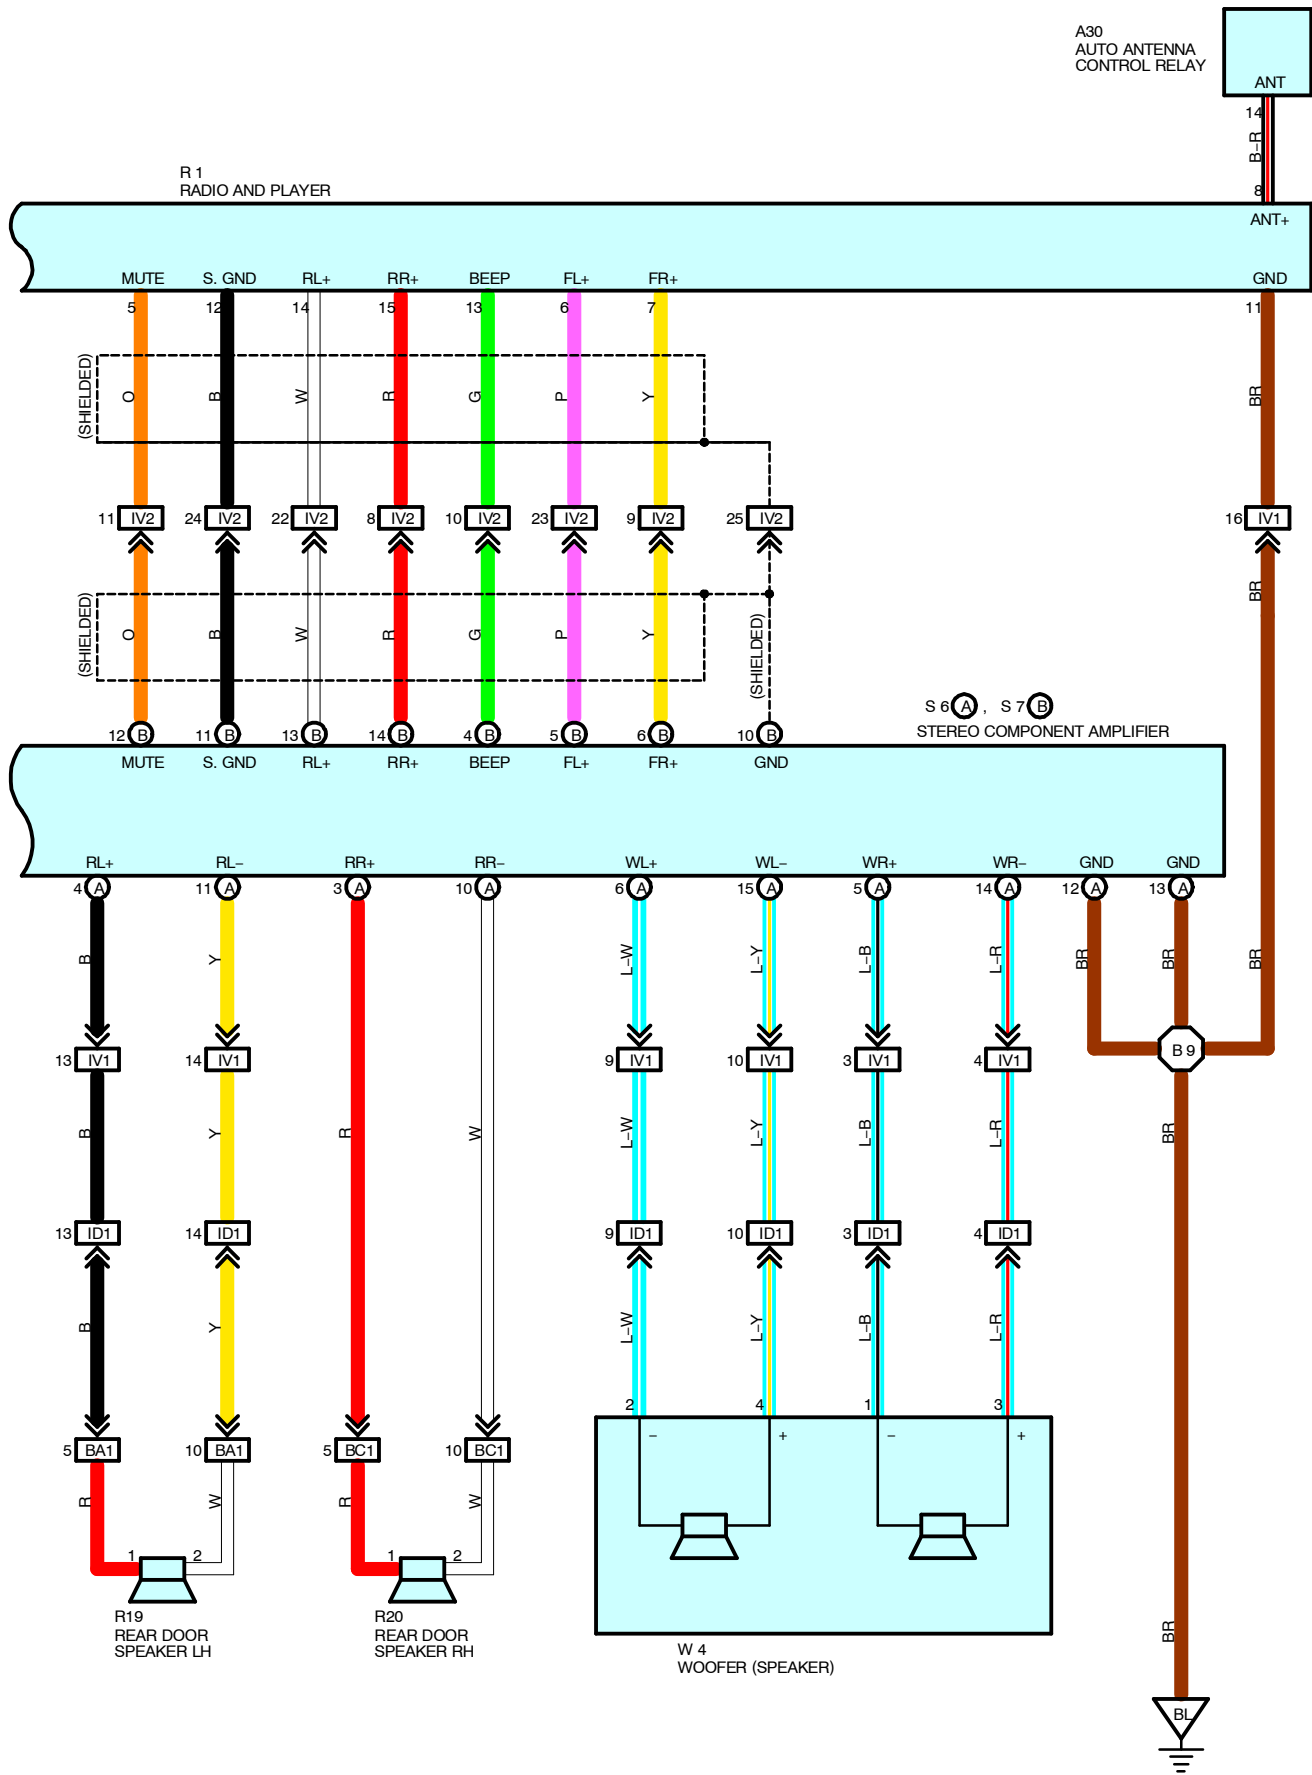

RADIO AND PLAYER

SERVICE HINTS

R1 RADIO AND PLAYER

11-GROUND : Always continuity

S6 (A), S7 (B) STEREO COMPONENT AMPLIFIER

(B) 2-GROUND : Approx. 12 volts with ignition SW at **ACC** or **ON** position

(A) 7, (A) 16-GROUND : Always approx. 12 volts

(A) 12, (A) 13-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A30	38	R19	41	T13	41
F8	40	R20	41	T14	41
F9	40	S6	A 41	W4	41
R1	39	S7	B 41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IV1	52	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV2		
IY1	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA1	54	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BC1	54	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)


▽ : GROUND POINTS

Code	See Page	Ground Points Location
BL	54	Rear Side Under the Front Passenger's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B2	56	Front Door LH Wire	B9	56	Floor No.2 Wire
B8	56	Front Door RH Wire			

A30

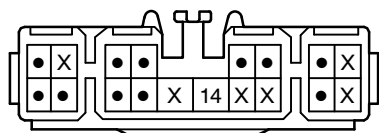


F8



F9




R1

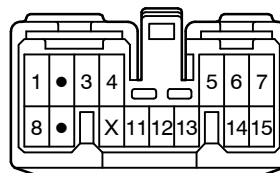


R19



 
R20




S6 (A)
GRAY

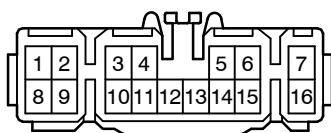

S7 (B)
GRAY

 

T13

 

T14



W4

