


REAR HEATER (w/o REAR AIR CONDITIONING)

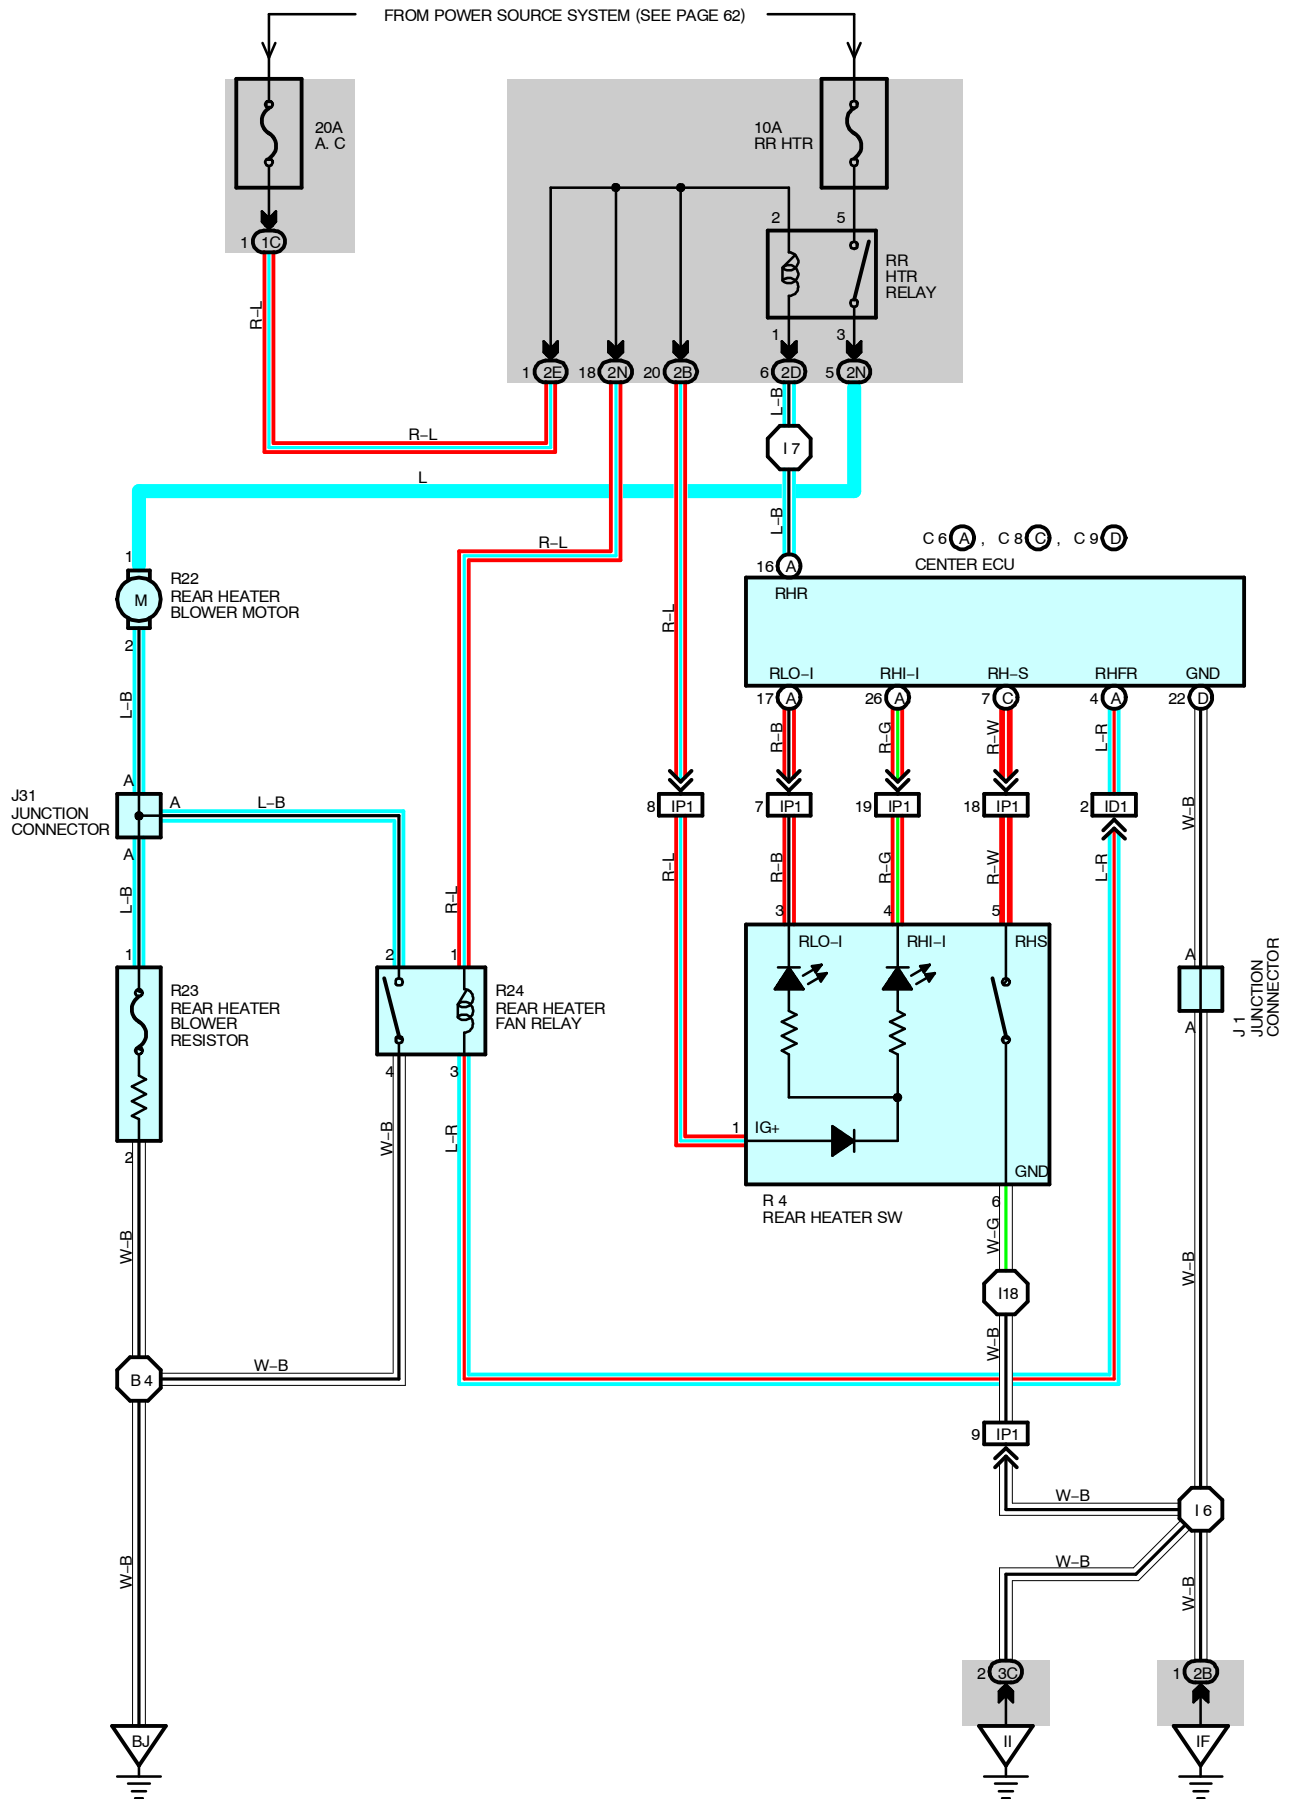

SERVICE HINTS

RR HTR RELAY

5-3 : Closed with the ignition SW at **ON** position and the rear heater SW on

R4 REAR HEATER SW

1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

5-6 : Continuity with rear heater SW at **LO** or **HI** position

6-GROUND : Always continuity

: PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
C6	A	38	J1	39	R22	41
C8	C	38	J31	40	R23	41
C9	D	38	R4	39	R24	41

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2E	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3C	30	Dash Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	46	Dash Wire and Floor Wire (Left Kick Panel)
IP1	50	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)

: GROUND POINTS


Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
II	46	Set Bolt of Cowl Side J/B RH
BJ	54	Under the Driver's Seat

: SPLICE POINTS


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	48	Dash Wire	I18	48	Rear Console Box Wire
I7			B4	56	Floor Wire

REAR HEATER (w/o REAR AIR CONDITIONING)


C6 (A)

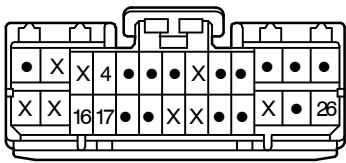


C8 (C)

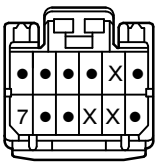

C9 (D)

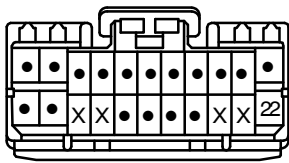


J1

 


(Hint : See Page 7)

 J31
BLUE




(Hint : See Page 7)


R4

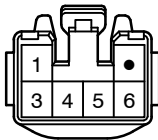

R22

 

R23

 

R24

