




COMBINATION METER

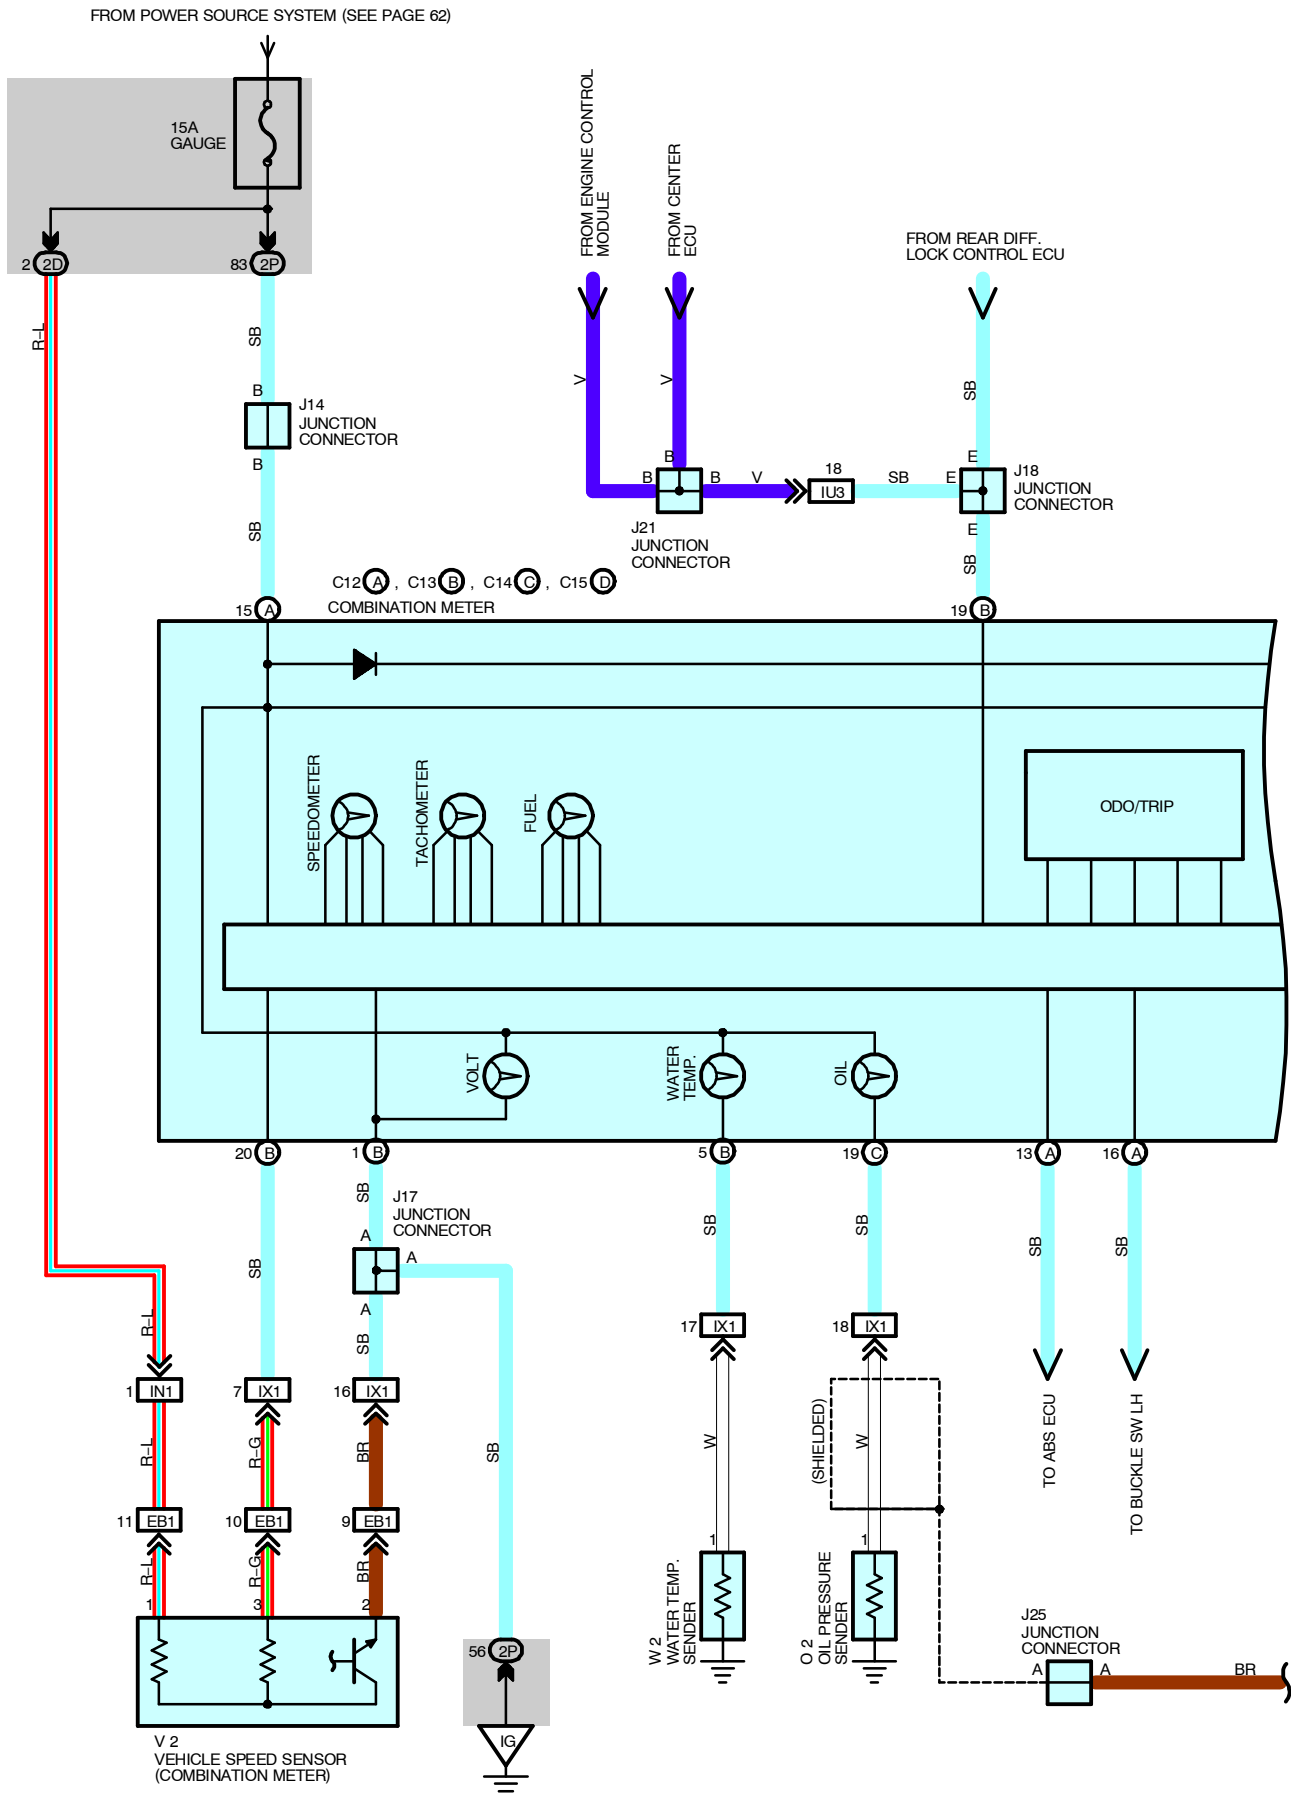


FROM POWER SOURCE SYSTEM (SEE PAGE 62)

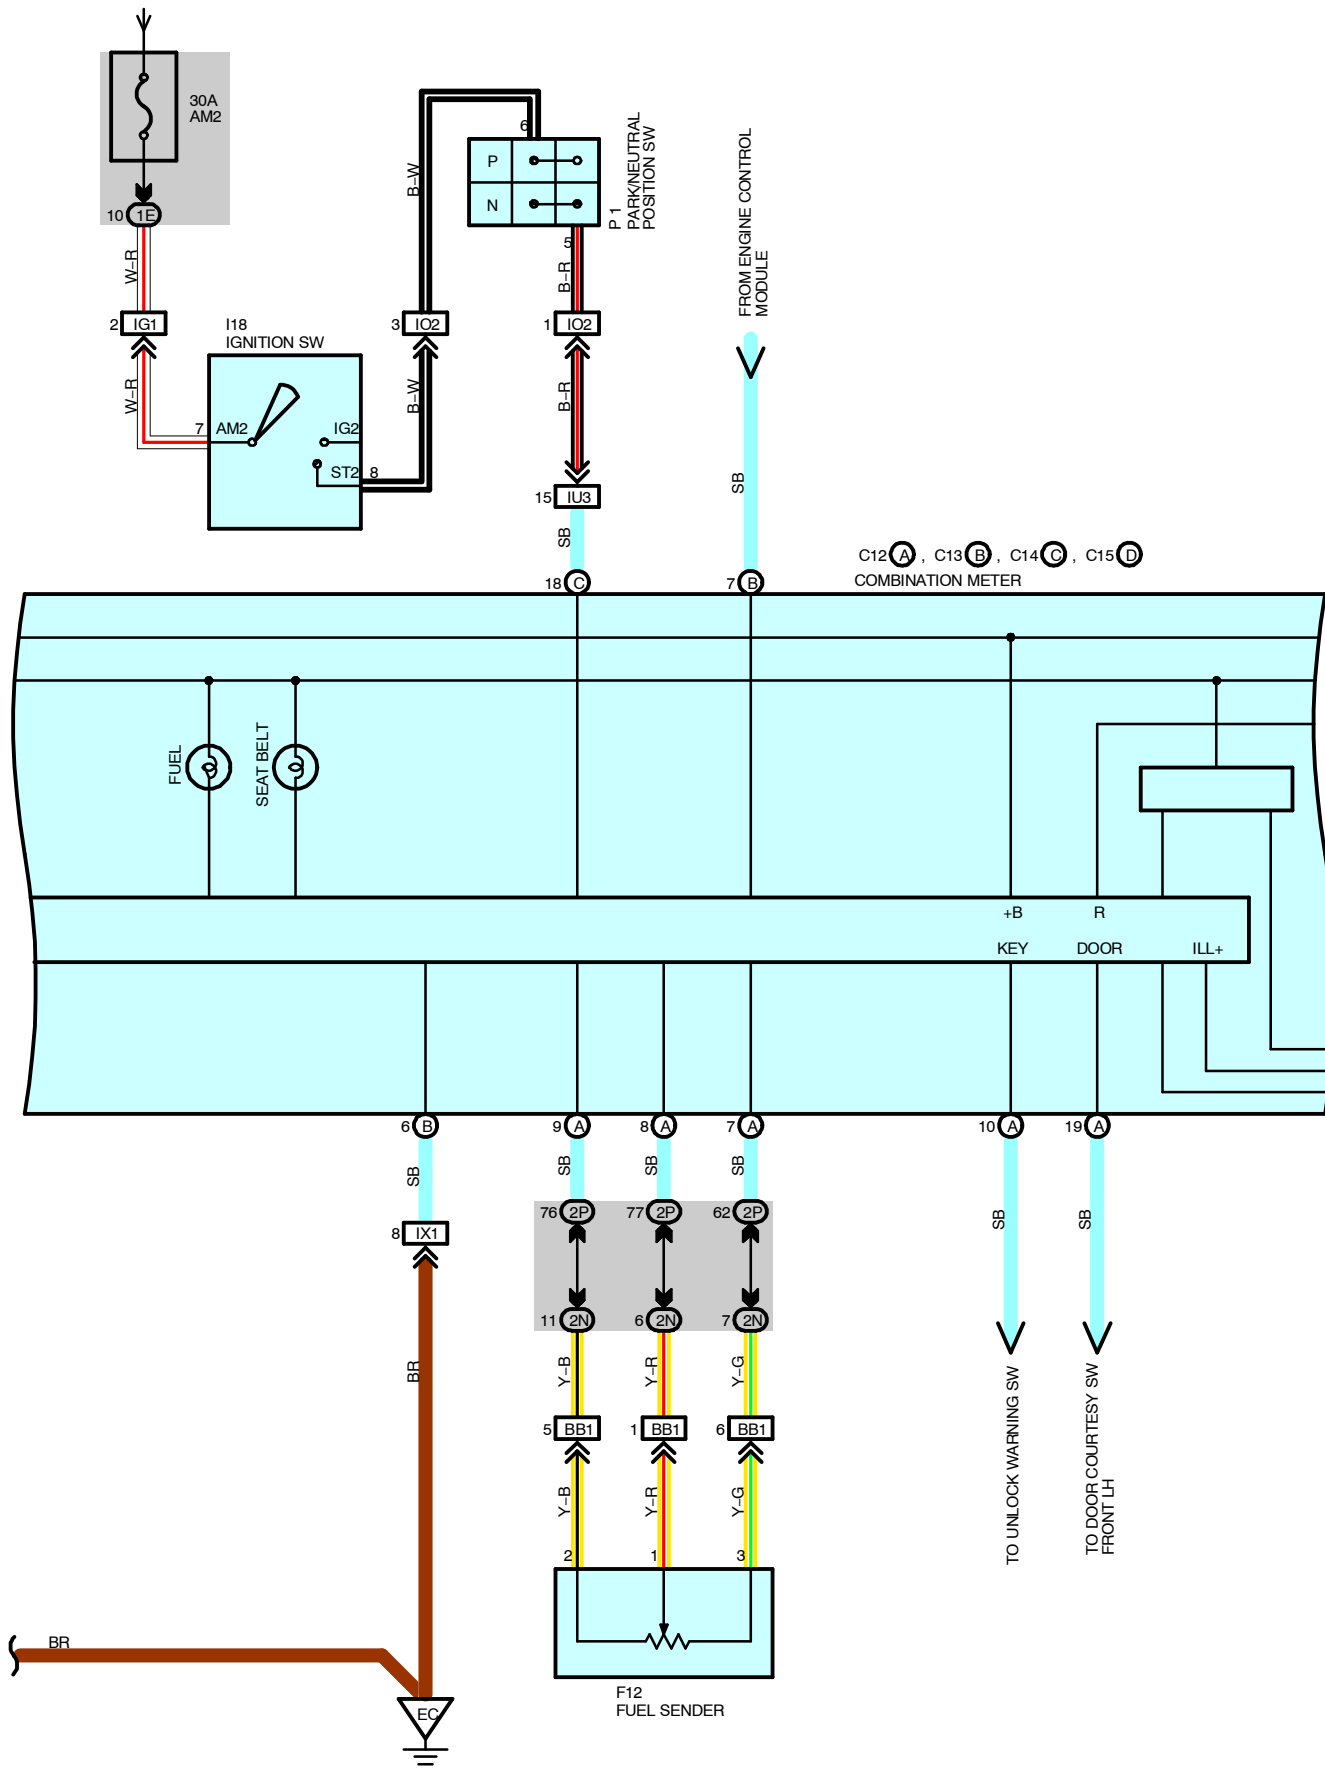


COMBINATION METER

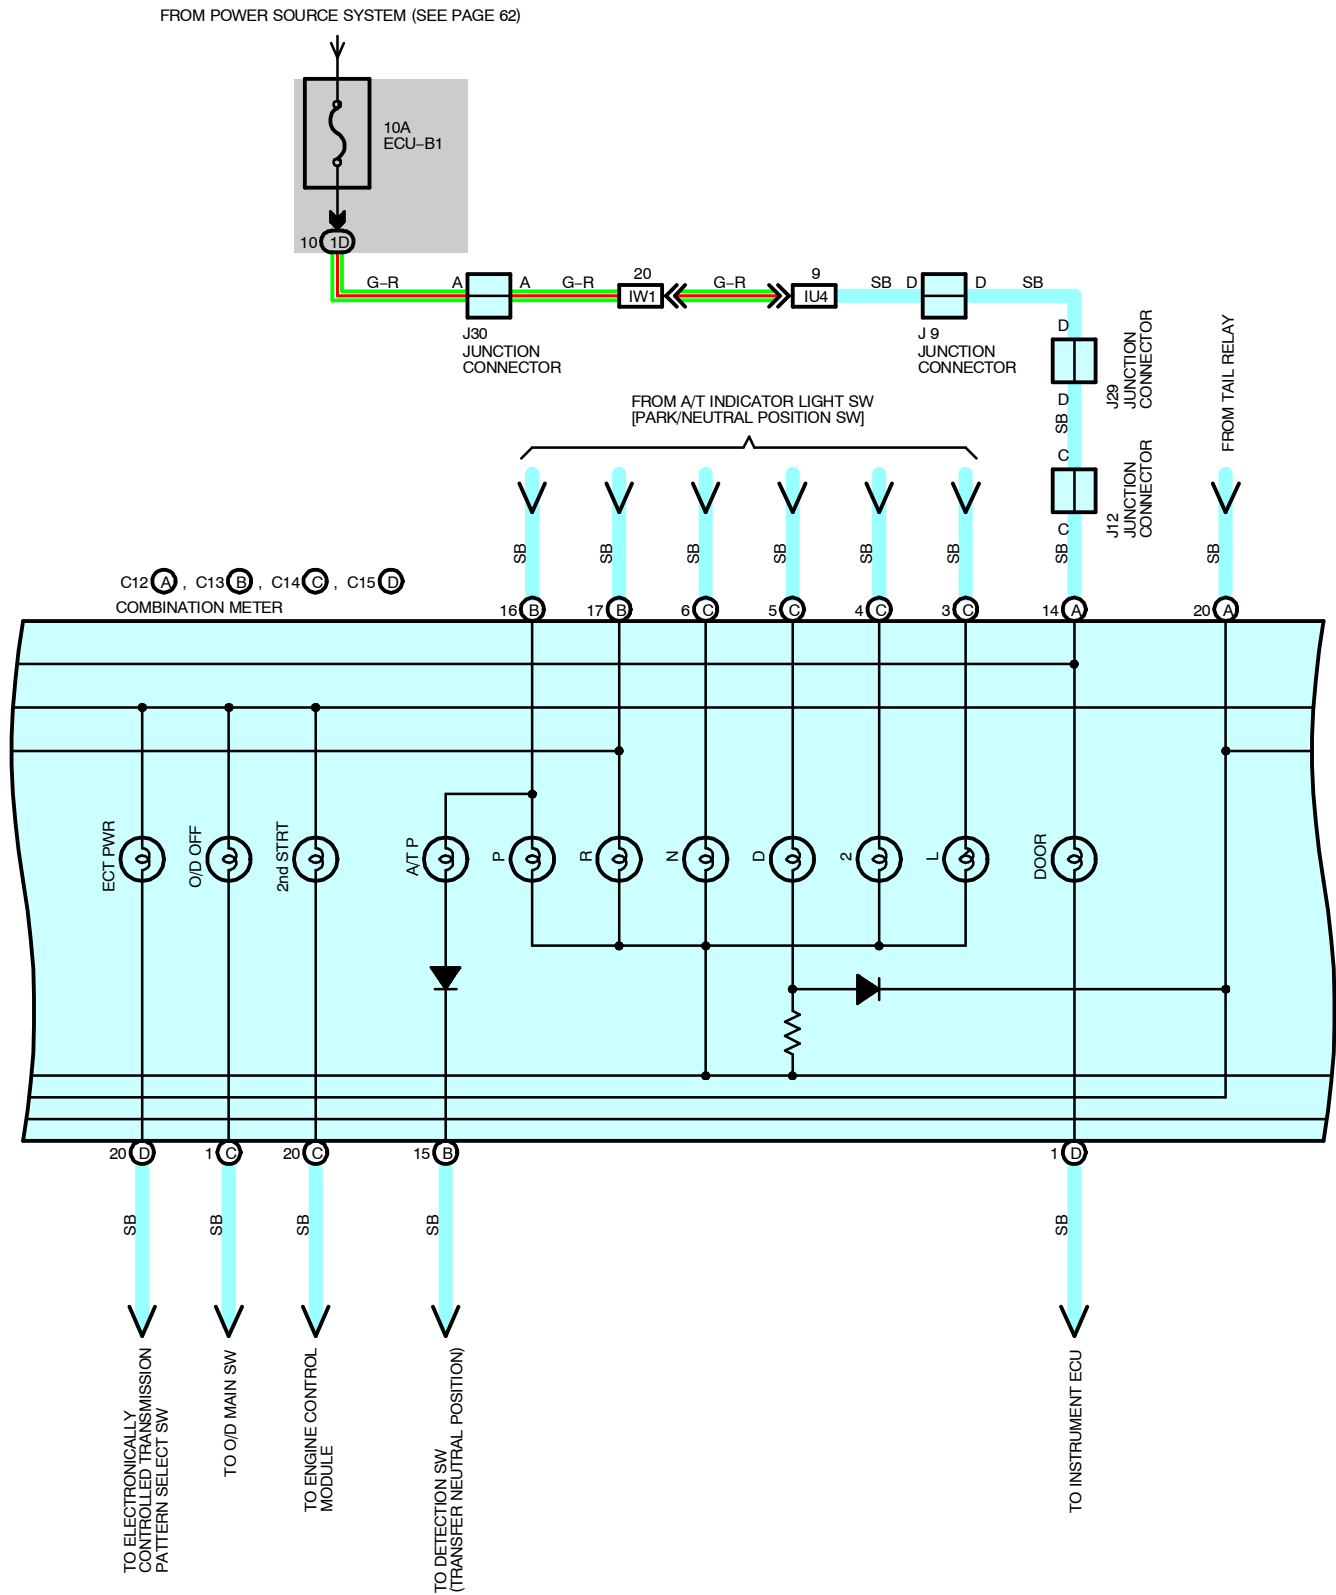

FROM POWER SOURCE SYSTEM (SEE PAGE 62)

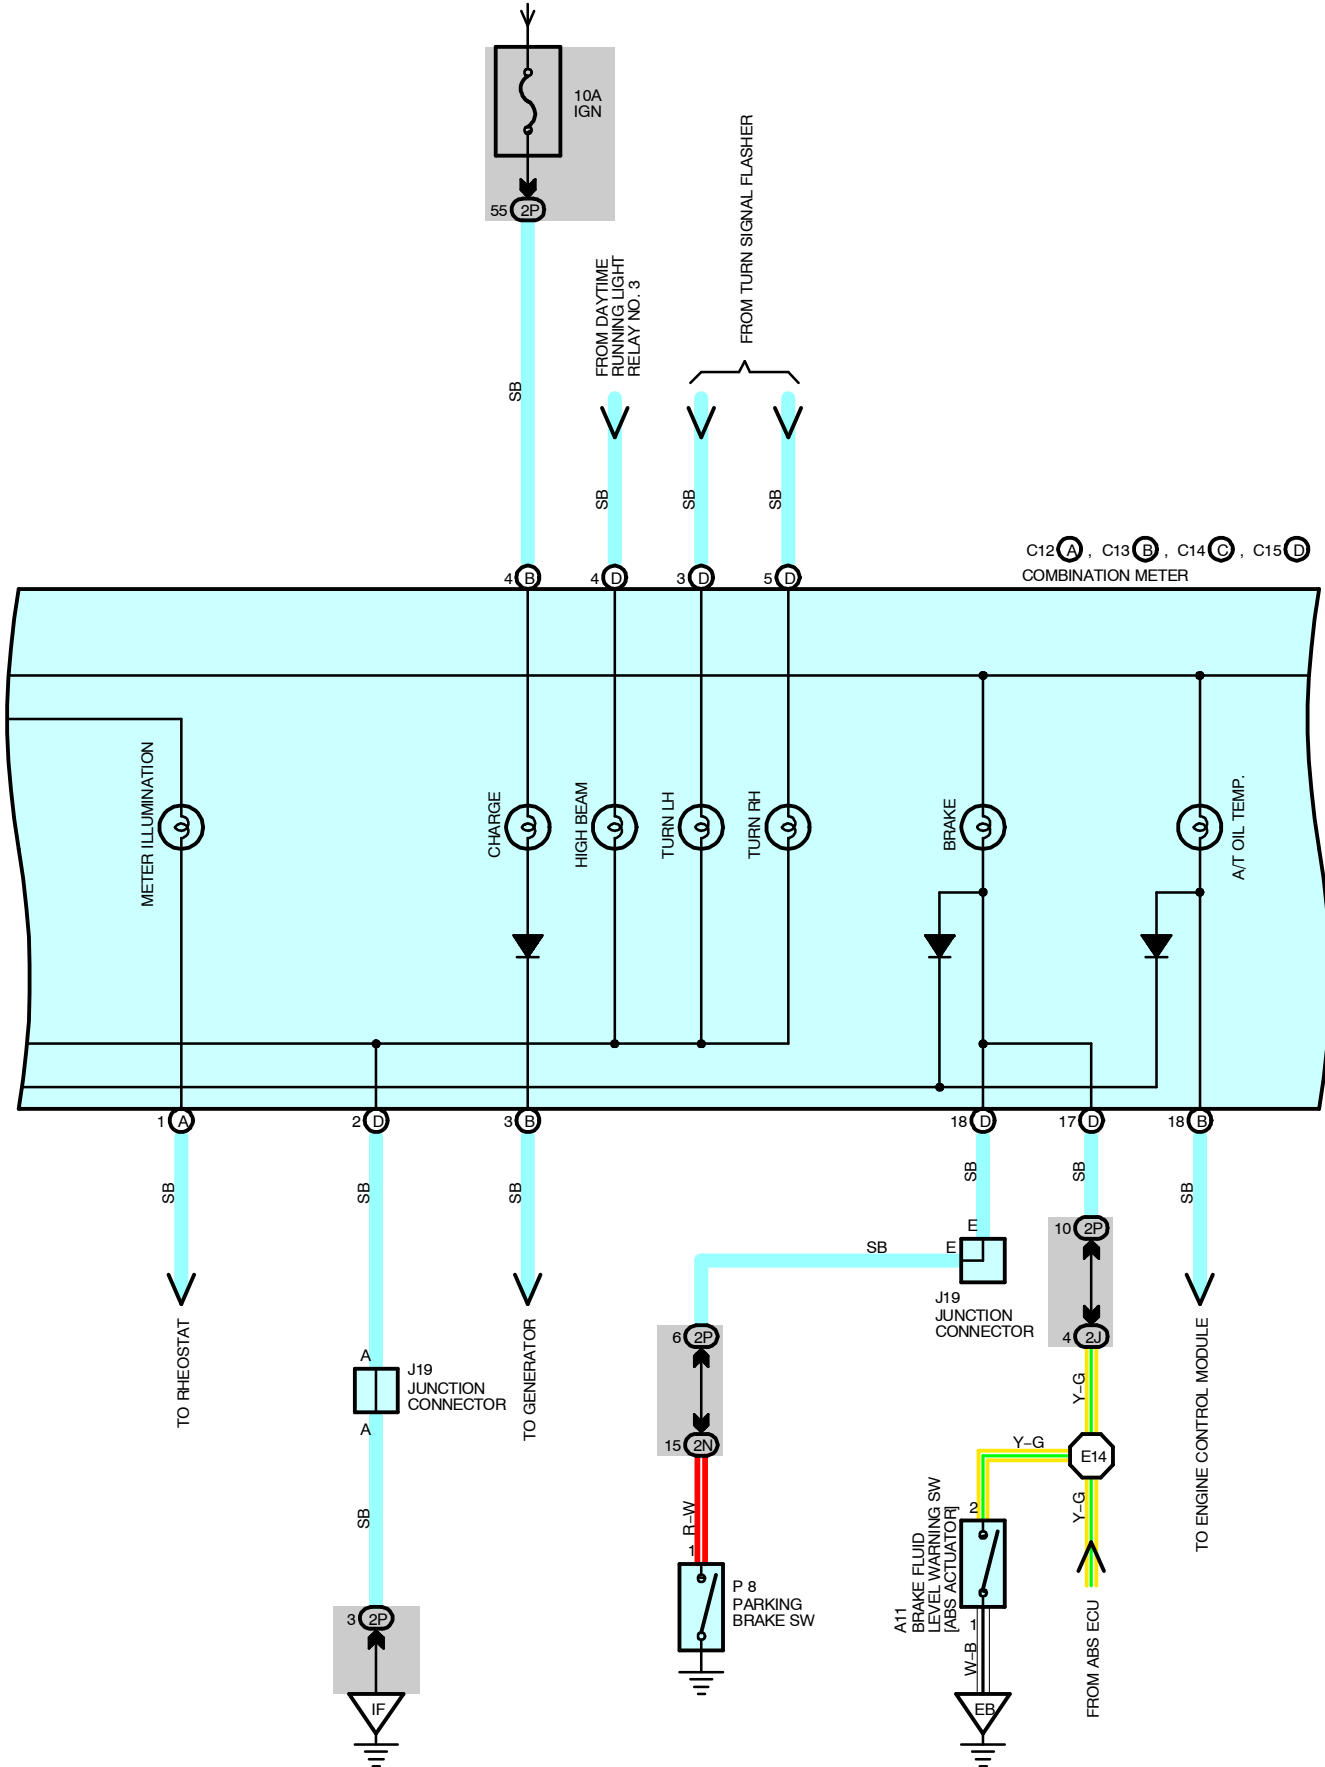

COMBINATION METER

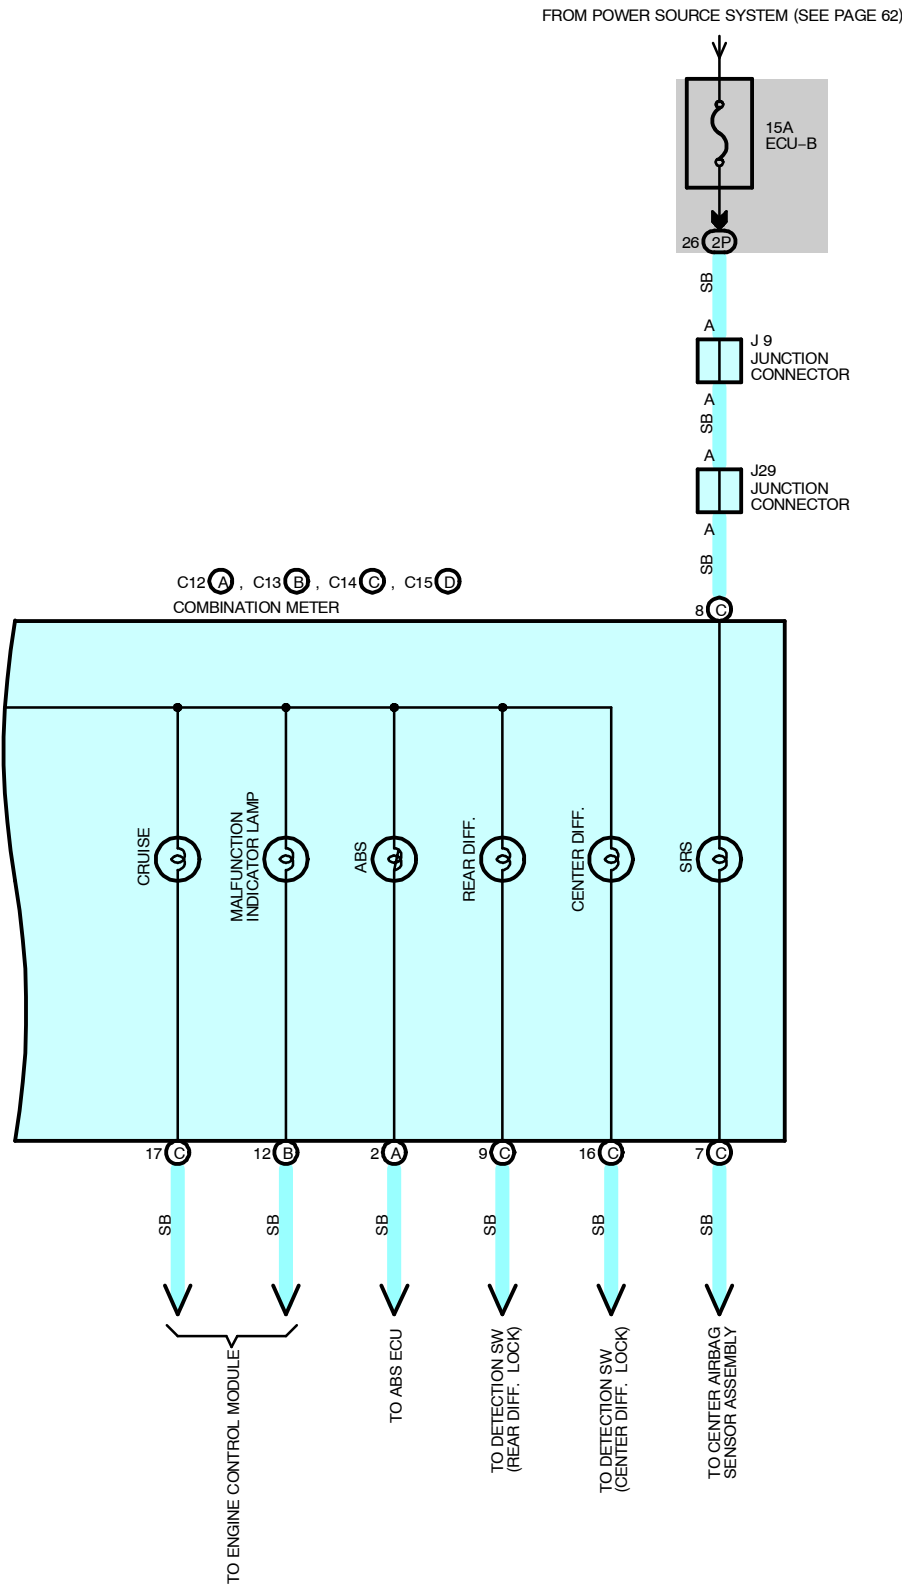

SERVICE HINTS

A11 BRAKE FLUID LEVEL WARNING SW [ABS ACTUATOR]

1-2 : Closed with float down

P8 PARKING BRAKE SW

1-GROUND : Closed with parking brake lever pulled up

C12 (A), C13 (B), C14 (C), C15 (D) COMBINATION METER

(A) 14, (C) 8-GROUND : Always approx. 12 volts

(A) 15, (B) 4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

(B) 1, (B) 6, (D) 2-GROUND : Always continuity

W2 WATER TEMP. SENDER

1-GROUND : Approx. 160-240 Ω (50°C, 122°F)

: Approx. 17.1-21.2 Ω (120°C, 248°F)

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A11	36	J12	39	J30	39
C12	A 38	J14	39	O2	37
C13	B 38	J17	39	P1	37
C14	C 38	J18	39	P8	41
C15	D 38	J19	39	V2	37
F12	40	J21	39	W2	37
I18	38	J25	39		
J9	39	J29	39		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2D	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2J	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	44	Engine Wire and Transmission Wire (On the Transmission)
IG1	48	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
IO2		
IU3	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IW1	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	52	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BB1	54	Floor Wire and Fuel Tank Wire (Near the Fuel Tank)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	44	Front Right Side of Fender Apron
EC	44	Rear Bank of Right Cylinder Head
IF	46	Set Bolt of Cowl Side J/B LH
IG		

COMBINATION METER


 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E14	44	Engine Room No.2 Wire			


A11
GRAY




C12 (A)
GRAY

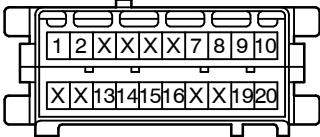


C13 (B)

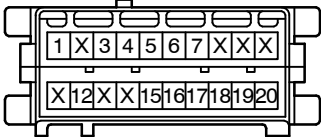


C14 (C)
GRAY

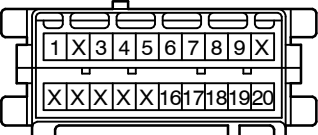


C15 (D)

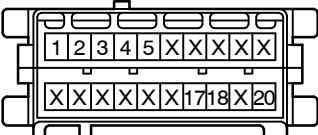


F12
DARK GRAY

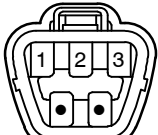

I18

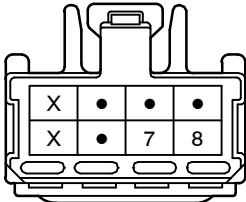


J9
GRAY

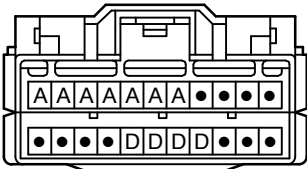


(Hint : See Page 7)

J12
BLUE

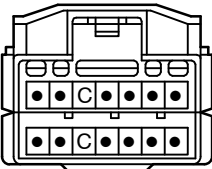


(Hint : See Page 7)

J14

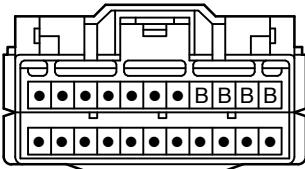


(Hint : See Page 7)

J17

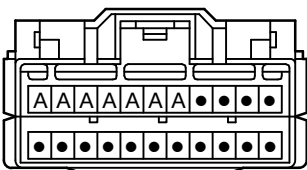


(Hint : See Page 7)

J18
GRAY

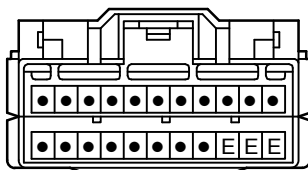


(Hint : See Page 7)

J19
GRAY

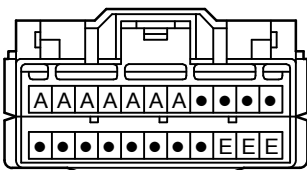


(Hint : See Page 7)

 J21
BLUE




(Hint : See Page 7)

 J25
RED




(Hint : See Page 7)

J29

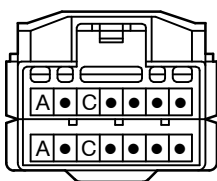

(Hint : See Page 7)

 J30
BLUE




(Hint : See Page 7)

O2
BLACK



P1
GRAY

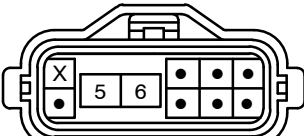

P8



V2
BLACK



W2
GRAY



