


DTC	C1340 / 47	Center Differential Lock Circuit
------------	-------------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1240 / 47	Open or short circuit in center differential lock circuit.	- Center differential lock system - Center differential lock circuit

WIRING DIAGRAM

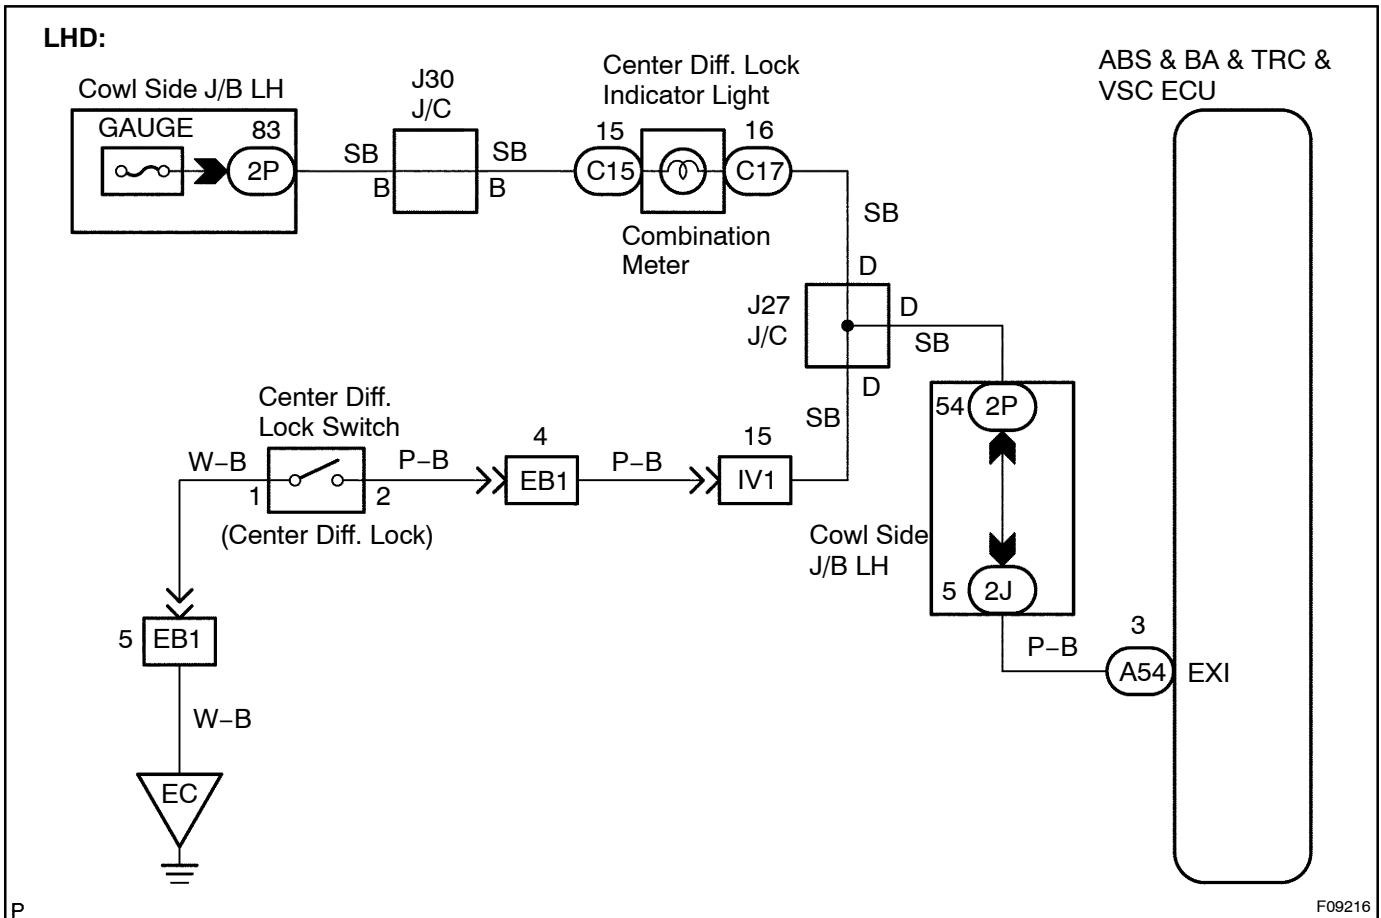



INSPECTION PROCEDURE

- 1 Check the center differential is free and center diff. lock switch is OFF.**

Repair the center differential lock system.

OK

- ## 2 Is DTC output?

Check DTC on [page DI-4](#).

Normal.

YES

3 Check that bulb for center diff. lock indicator light is not burnt out.

YES

Replace indicator light.

NO

4 Check for open circuit in harness and connector between battery and center diff. lock indicator light, center diff. lock indicator light and ABS & BA & TRC & VSC ECU (See page IN-35).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRC & VSC ECU.