


## SLIP Indicator Light Circuit

### CIRCUIT DESCRIPTION

The SLIP indicator blinks during VSC operation.

### WIRING DIAGRAM

LHD:

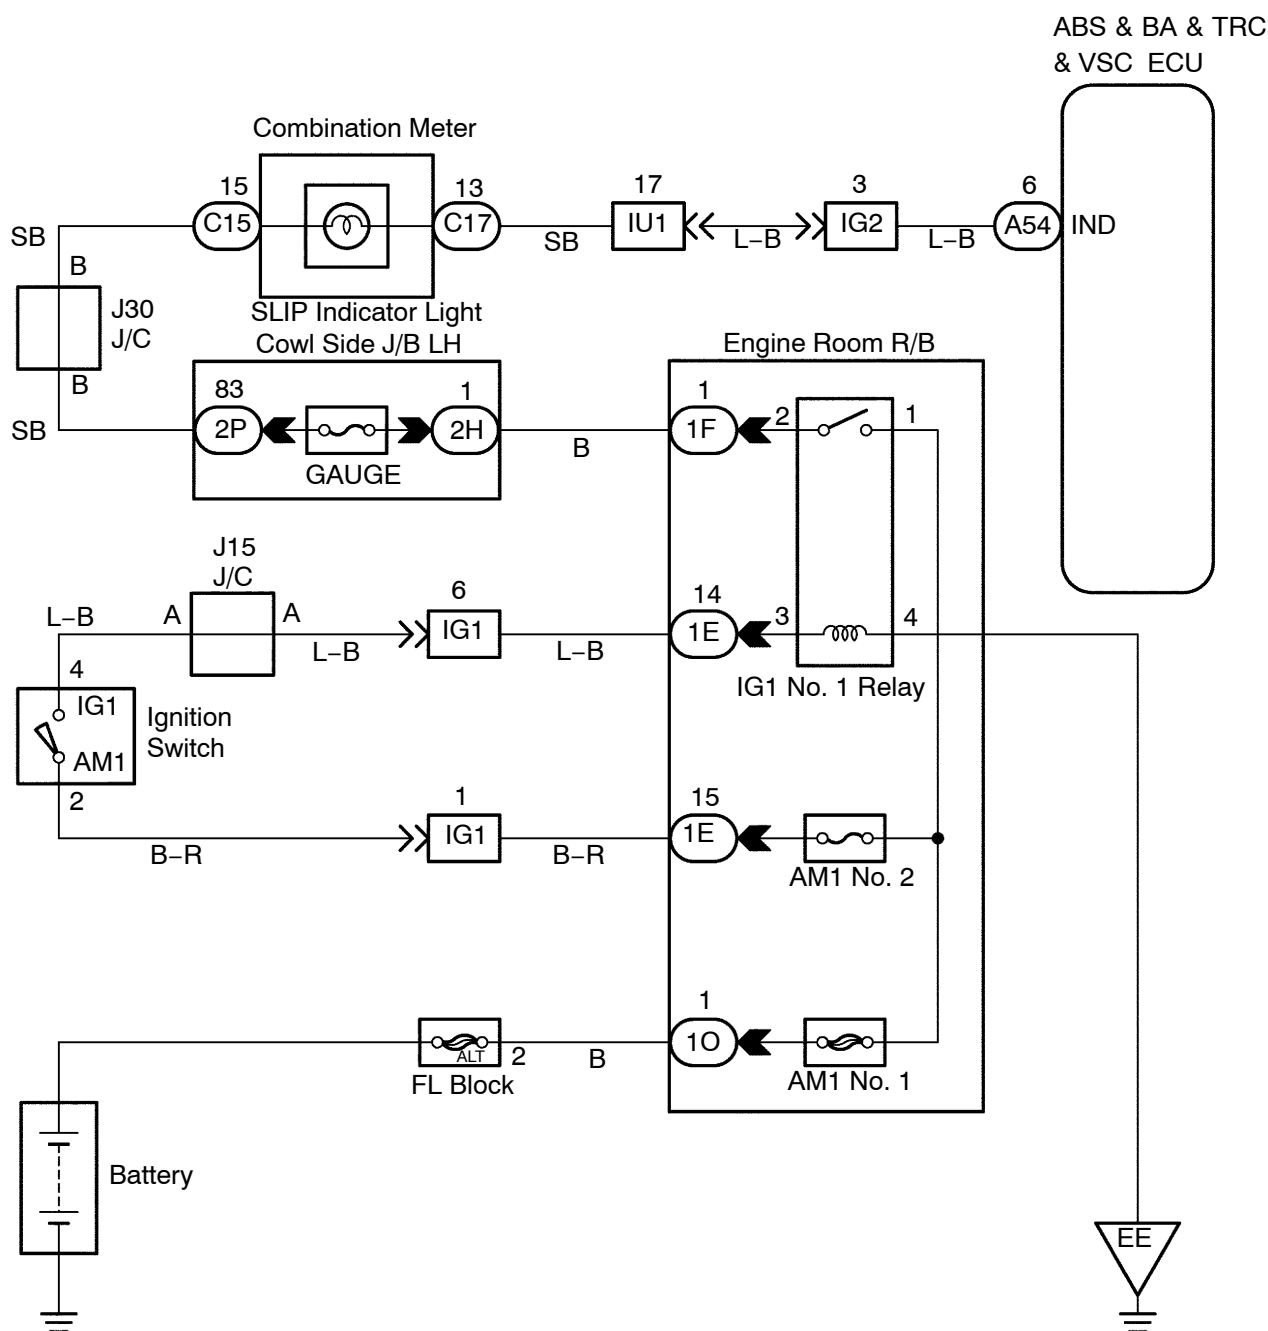



## INSPECTION PROCEDURE


1 Does the warning lights other than SLIP indicator lights up?

YES

Go to step 3.

NO

2 Check IG1 No. 1 relay.

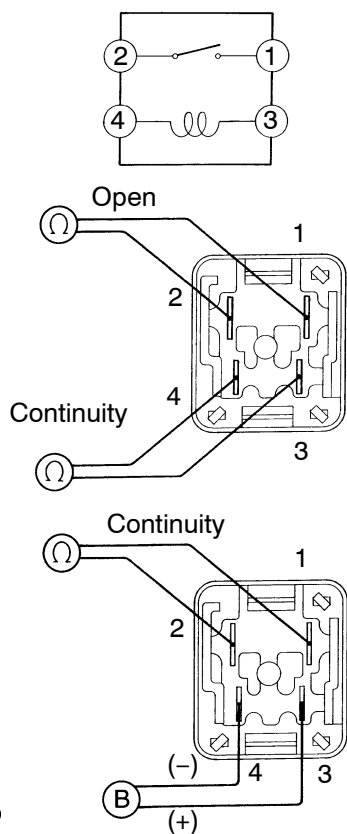

BE1840  
R15257  
R15258

F00044

### PREPARATION:

Remove IG1 No. 1 relay from engine room J/B.

### CHECK:

Check continuity between each pair of terminal of IG1 No. 1 relay.

### OK:

|                   |            |
|-------------------|------------|
| Terminals 3 and 4 | Continuity |
| Terminals 1 and 2 | Open       |

### CHECK:

- (a) Apply battery voltage between terminals 3 and 4.
- (b) Check continuity between terminals.

### OK:

|                   |            |
|-------------------|------------|
| Terminals 1 and 2 | Continuity |
|-------------------|------------|

NG

Replace IG1 No. 1 relay.

OK

Check for open circuit in harness and connector between IG1 No. 1 relay and combination meter (See page IN-35).

**3 Check SLIP indicator light.**

Open circuit in the combination meter ([See page BE-1](#)).

**NG****Repair SLIP indicator light bulb or combination meter assembly.****OK****4 Check for short circuit in harness and connector between SLIP indicator light and ABS & BA & TRC & VSC ECU ([See page IN-35](#)).****NG****Repair or replace harness or connector.****OK****Check and repair ABS & BA & TRC & VSC ECU.**