


## Ts Terminal Circuit

### CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.


Connecting terminals Ts and E<sub>1</sub> of the check connector or Tc starts the check.

### WIRING DIAGRAM

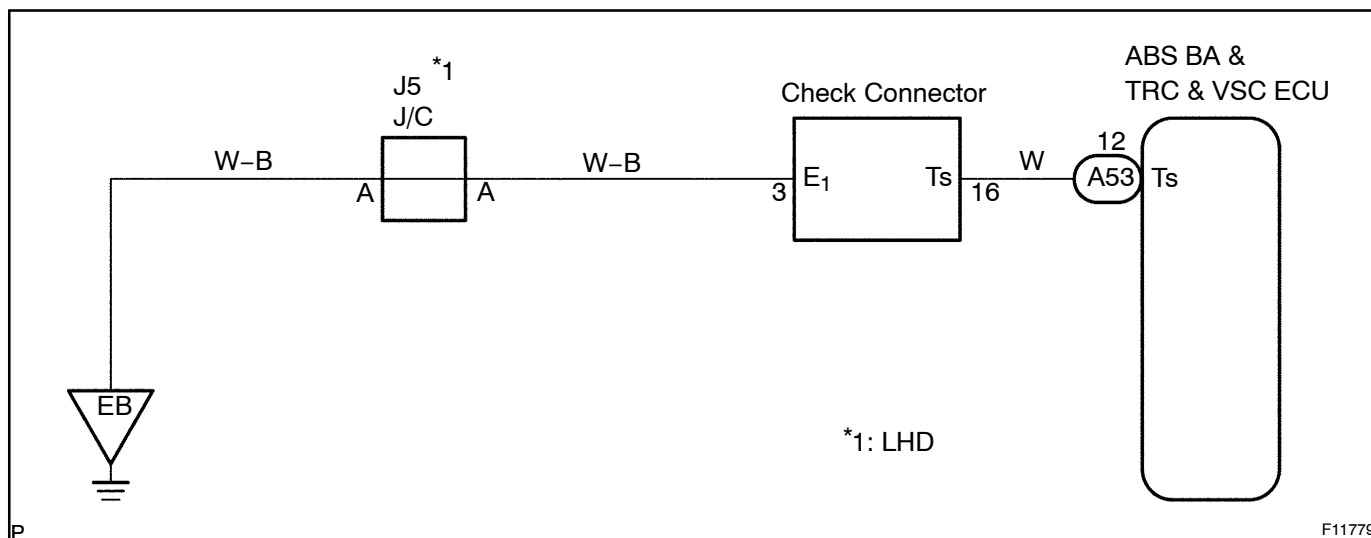

### INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E<sub>1</sub> of check connector.

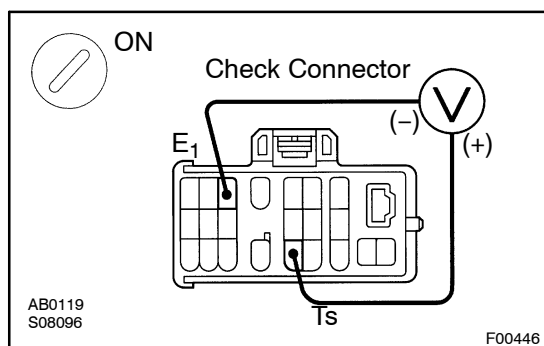

#### CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Ts and E<sub>1</sub> of check connector.

#### OK:

**Voltage: 10 – 14 V**

**OK**

If ABS warning light does not blink even after Ts and E<sub>1</sub> have been connected, the ECU may be defective.

**NG**

- |   |                                                                                                                                                                                                        |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 | IG switch OFF, and check for open and short circuit in harness and connector between ABS & BA & TRC & VSC ECU and check connector, check connector and body ground ( <a href="#">See page IN-35</a> ). |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRC & VSC ECU.