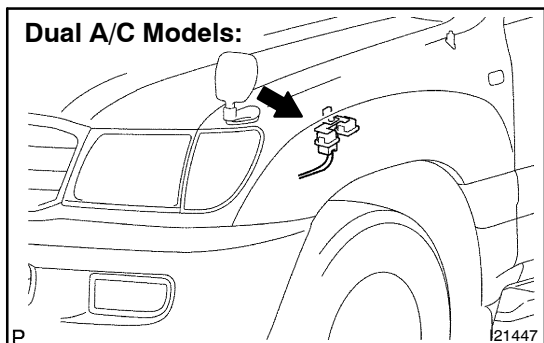
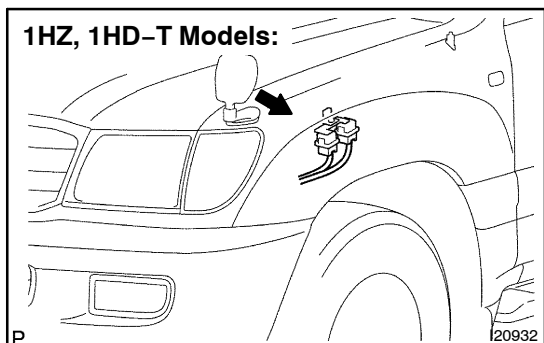


Dual A/C Models:**1HZ, 1HD-T Models:**

CONDENSER FAN RELAY INSPECTION

AC3AZ-01

- 1. REMOVE CONDENSER FAN RELAY**
 - (a) Remove the LH fender liner.
 - (b) Disconnect the connector.
 - (c) Release the claw and remove the relay.

2. INSPECT CONDENSER FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

3. INSTALL CONDENSER FAN RELAY

