


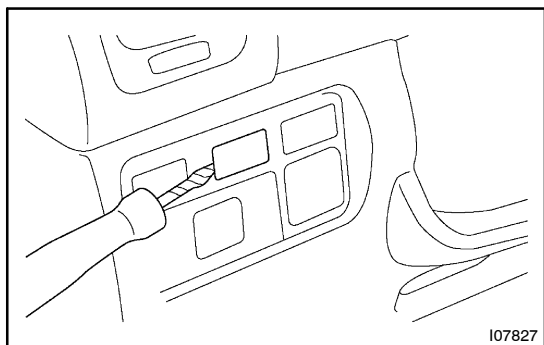


IDLE-UP SWITCH (1HZ, 1HD-T, 1HD-FTE)

INSPECTION

AC1UT-02

1. REMOVE IDLE-UP SWITCH


Using a screwdriver, pullout the switch then disconnect the connector.

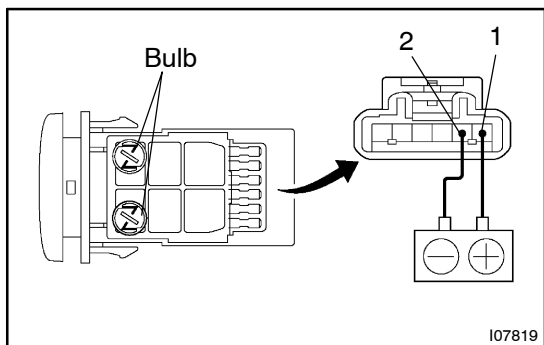

2. INSPECT IDLE-UP SWITCH


- (a) Inspect the illumination operation.
Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2 then check that the illumination lights up.

If operation is not as specified, check the bulb.

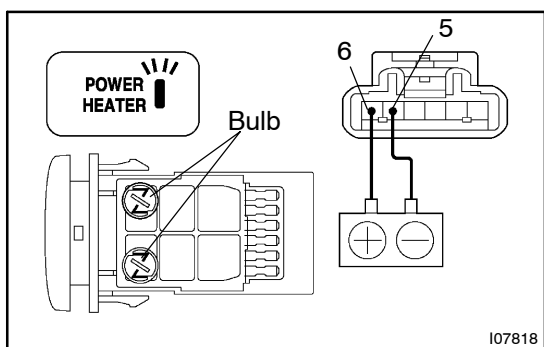

- (b) 1HD-FTE Engine w/ Viscous Heater:
Inspect power heater indicator operation.
Connect the positive (+) lead from the battery to terminal 6 and negative (-) lead to terminal 5 then check that the indicator lights up.

If operation is not as specified, check the bulb.

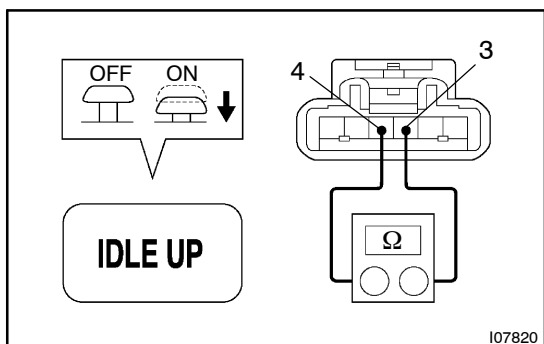

- (c) Inspect the idle-up switch continuity.
Check the continuity exists between terminals 3 and 4.
If no continuity exists, replace the switch.

3. INSTALL IDLE-UP SWITCH