



CIRCUIT DESCRIPTION

WIRING DIAGRAM

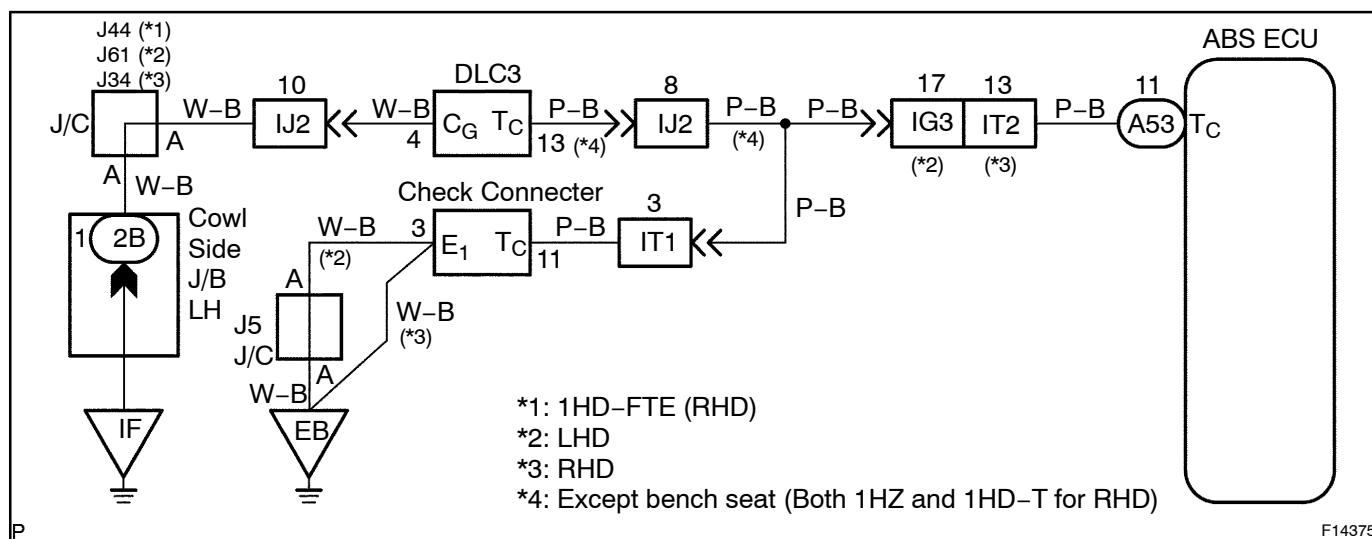

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and E₁ of check connector or Tc and CG of DLC3. |
|---|--|

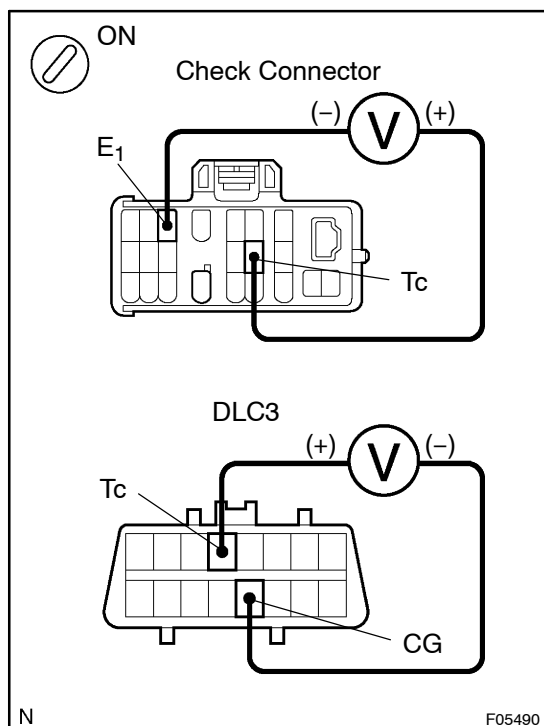**CHECK:**

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals Tc and E₁ of check connector or Tc and CG of DLC3.

OK:**Voltage: 10 – 14 V****OK**

If ABS warning light does not blink even after Tc and E₁ or Tc and CG have been connected, the ECU may be defective.

NG

- | | |
|---|---|
| 2 | IG switch OFF, and check for open and short circuit in harness and connector between ABS & BA & TRC & VSC ECU and check connector or DLC3, check connector or DLC3 and body ground (See page IN-35). |
|---|---|

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRC & VSC ECU.