


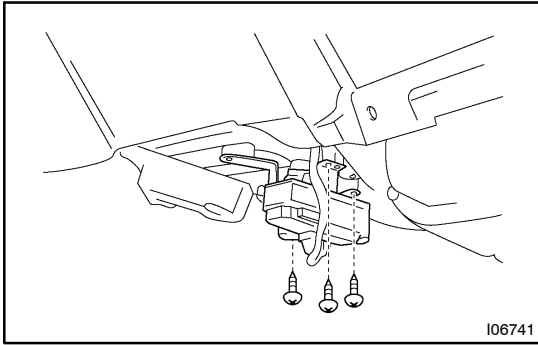

AIR MIX SERVOMOTOR INSPECTION

AC1X7-01

1. **REMOVE AIR MIX SERVOMOTOR**
 - (a) Disconnect the connector.
 - (b) Remove the 3 screws and servomotor.
2. **INSPECT AIR MIX SERVOMOTOR CIRCUIT**
(See page [DI-796](#))
3. **INSPECT AIR MIX DAMPER POSITION SENSOR CIRCUIT** (See page [DI-790](#))
4. **INSTALL SERVOMOTOR**
 - (a) Install the servomotor with the 3 screws.
 - (b) Connect the connector.