


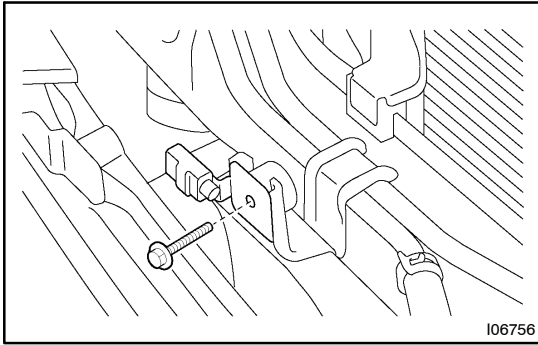

AMBIENT TEMPERATURE SENSOR INSPECTION

AC1XA-01

- 1. REMOVE AMBIENT TEMPERATURE SENSOR**
 - (a) Disconnect the connector.
 - (b) Remove the bolt and the sensor.

- 2. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page [DI-776](#))**

- 3. INSTALL AMBIENT TEMPERATURE SENSOR**
 - (a) Install the sensor to condenser upper bracket.
 - (b) Connect the connector.