



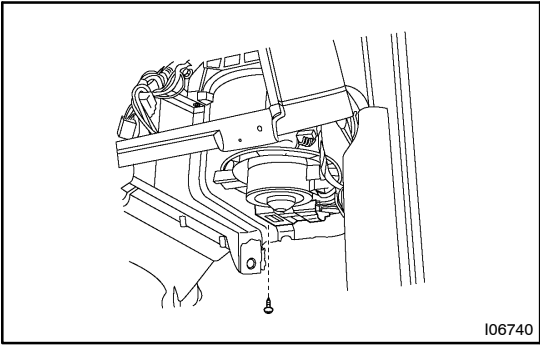

BLOWER MOTOR CONTROL RELAY INSPECTION

AC1J2-02

- 1. REMOVE BLOWER MOTOR CONTROL RELAY**
- (a) Disconnect the connectors.
 - (b) Remove the screw and relay.

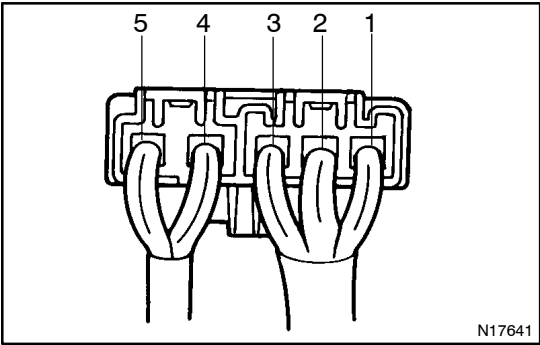

- 2. INSPECT BLOWER MOTOR CONTROL RELAY**
- Connect the connector to the relay and inspect the wire harness side connector from the back side as shown in the chart.
- Test condition:
- Turn ignition switch to ON
 - Blower speed: HI

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Constant	Battery positive voltage
3 – Ground	Constant	Battery positive voltage
4 – 5	Constant	Battery positive voltage

If circuit is not as specified, replace the relay.

- 3. INSTALL BLOWER MOTOR CONTROL RELAY**
- (a) Install the relay with the screw.
 - (b) Connect the connectors.