

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.


Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 650 ± 50g (22.93 ± 1.76 oz.)

2. DISCONNECT LIQUID AND SUCTION TUBES FROM COOLING UNIT (See page [AC-24](#))


3. REMOVE INSTRUMENT PANEL (See page [BO-92](#))

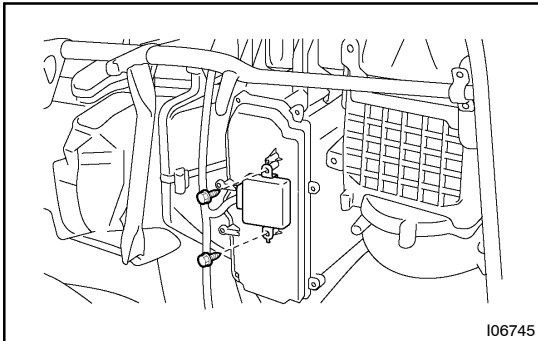

I06745

4. REMOVE ANTENNA RELAY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and relay.

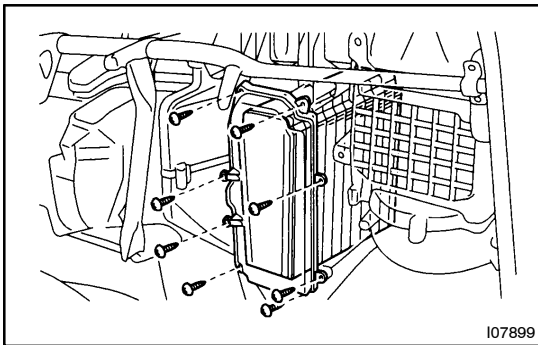

I07899

5. REMOVE EVAPORATOR

- (a) Disconnect the connector.
- (b) Disconnect the connector clamp.
- (c) Remove the 8 screws and No. 1 cooler cover.
- (d) Pull out the evaporator.