


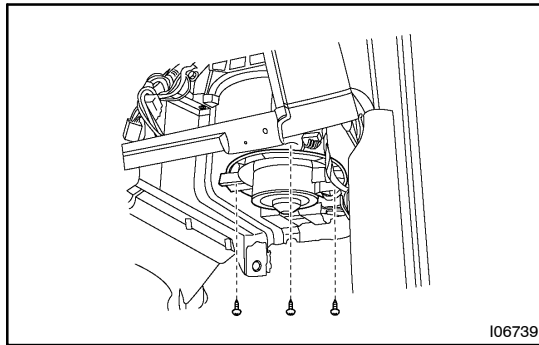


FRONT A/C BLOWER MOTOR INSPECTION

AC1J1-02

1. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.

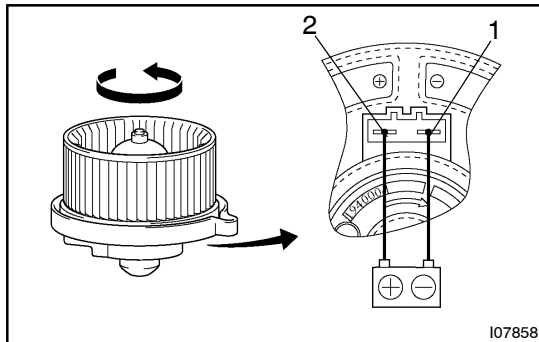

2. INSPECT BLOWER MOTOR CIRCUIT

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operations smoothly.

If operation is not as specified, replace the blower motor.

3. INSTALL BLOWER MOTOR

- (a) Install the blower motor with 3 screws.
- (b) Connect the connector.