



HEATER MAIN RELAY INSPECTION

AC1J9-02


1. REMOVE FRONT DOOR SCUFF PLATE RH
2. REMOVE COWL SIDE TRIM RH

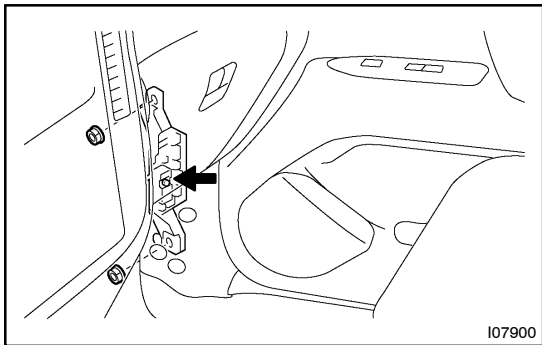

3. REMOVE HEATER MAIN RELAY
 - (a) Disconnect the connectors.
 - (b) Remove the 2 No. 3 junction block set nuts.
 - (c) Loosen the connector set bolt and disconnect the connector.
 - (d) Pull out the No. 3 junction block.

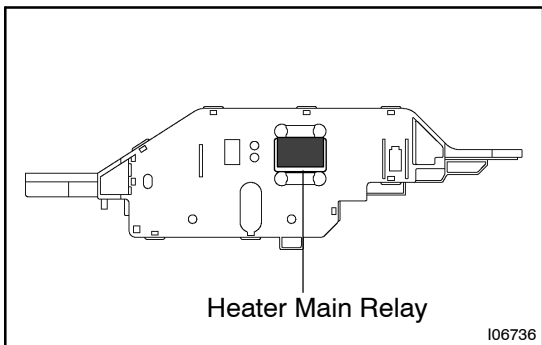

- (e) Remove the heater main relay from No. 3 junction block.

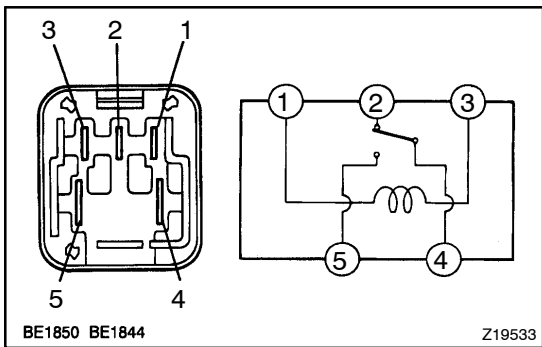

4. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 1	Continuity
Apply B+ between terminals 1 and 3.	5 - 4	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY
 - (a) Install the heater main relay to No. 3 junction block.
 - (b) Connect the connector and tighten the bolt.
 - (c) Install the 2 No. 3 junction block set nuts.
 - (d) Connect the connectors.
6. INSTALL COWL SIDE TRIM RH
7. INSTALL FRONT DOOR SCUFF PLATE RH