


PRESSURE SWITCH ON-VEHICLE INSPECTION


AC1JD-02

1. START ENGINE AND RACE ENGINE AT 1,500 RPM
2. TURN FAN SPEED SELECTOR TO "HI" POSITION
3. SET TEMPERATURE CONTROL TO "MAX. COOL"
4. PUSH IN A/C SWITCH
5. INSTALL MANIFOLD GAUGE SET

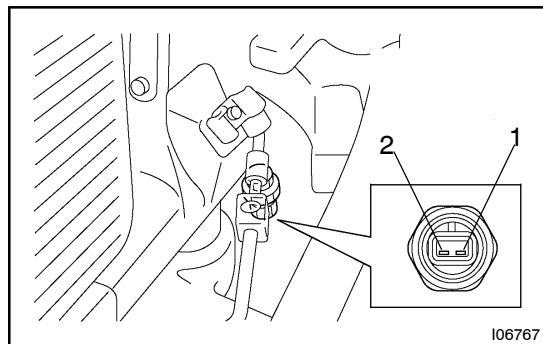

6. INSPECT PRESSURE SWITCH OPERATION

- (a) Disconnect the connector.

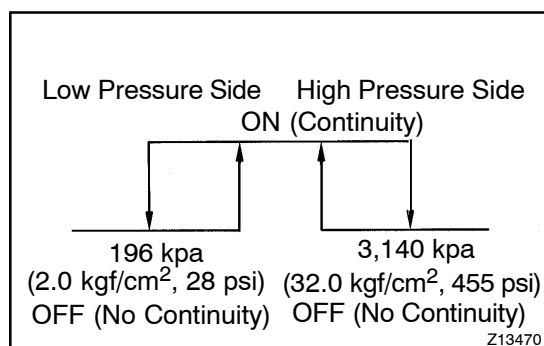

- (b) Inspect pressure switch continuity
 - (1) Connect the positive (+) lead from the ohmmeter to terminal 2 and the negative (-) lead to terminal 1.
 - (2) Check continuity between terminals when refrigerant pressure is changed, as shown in the illustration.

If continuity is not as specified, replace the pressure switch.