



REAR HEATER RELAY INSPECTION


- 1. REMOVE FRONT DOOR SCUFF PLATE LH
- 2. REMOVE COWL SIDE TRIM LH

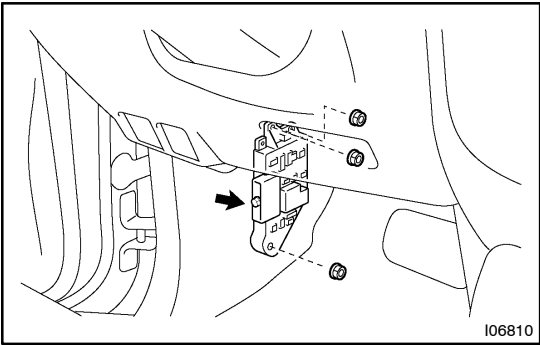

- 3. REMOVE REAR HEATER RELAY
 - (a) Disconnect the connectors.
 - (b) Remove the 3 No.2 junction block set nuts.
 - (c) Loosen the connector set bolt and disconnect the connector.
 - (d) Pull out the junction block.

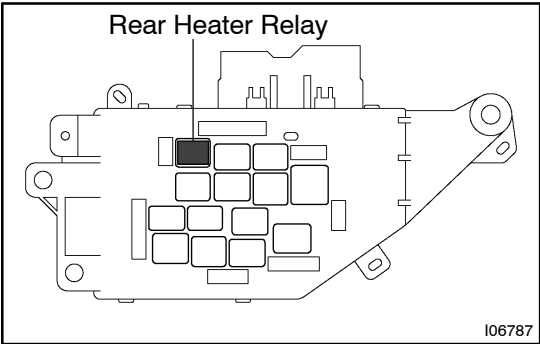

- (e) Remove the rear heater relay.

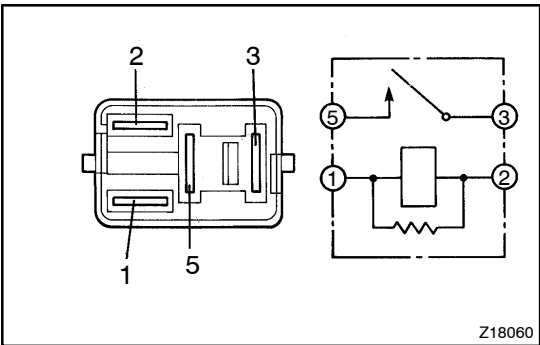

4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

- 5. INSTALL REAR HEATER RELAY
 - (a) Install the rear heater relay.
 - (b) Install the 2 No. 2 junction block set nuts.
 - (c) Connect the connectors.
 - (d) Tighten the connector set bolt.
- 6. INSTALL COWL SIDE TRIM LH
- 7. INSTALL FRONT DOOR SCUFF PLATE LH