


## REMOVAL

### 1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

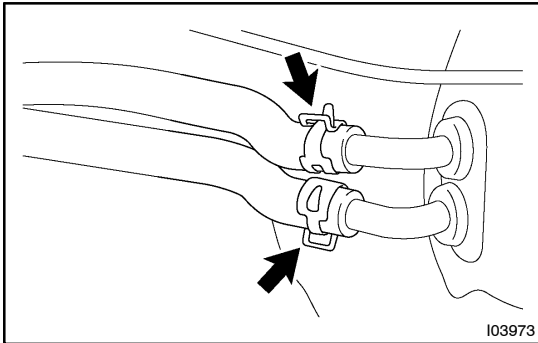

### 2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Using pliers, grip the claws of the clip and slide the clip along the hose.
- Disconnect the water hoses.

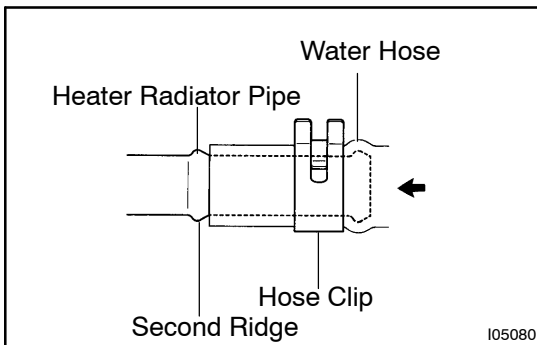

HINT:

At the time of installation, please refer to the following item.

- Push the water hose on to the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in the position, as shown in the illustration.

### 3. REMOVE FRONT SEATS

### 4. REMOVE REAR HEATER CONTROL ASSEMBLY (See page [AC-94](#))

### 5. REMOVE REAR CONSOLE BOX

### 6. REMOVE FRONT CONSOLE BOX COVER

### 7. REMOVE LOWER CENTER CLUSTER FINISH PANEL


### 8. REMOVE FRONT DOOR SCUFF PLATES

### 9. REMOVE COWL SIDE TRIMS

### 10. REMOVE REAR DOOR SCUFF PLATES


### 11. REMOVE CENTER PILLAR GARNISHES

### 12. SLIDE FLOOR CARPET BACKWARD

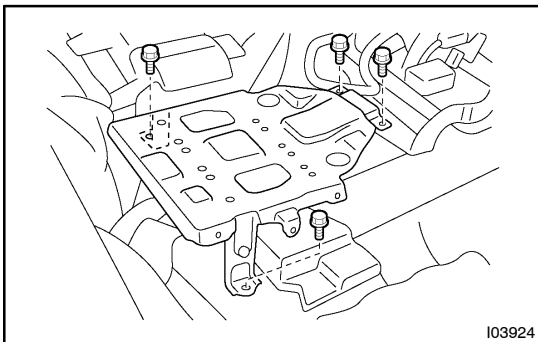


### 13. REMOVE COOLER BRACKET

Remove the 4 bolts and bracket.

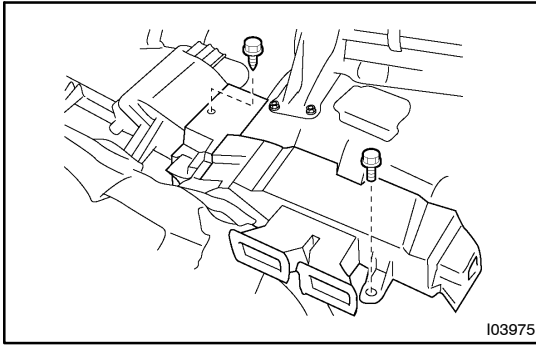**14. REMOVE REAR HEATER DUCT**

Remove the bolt, screw and duct.

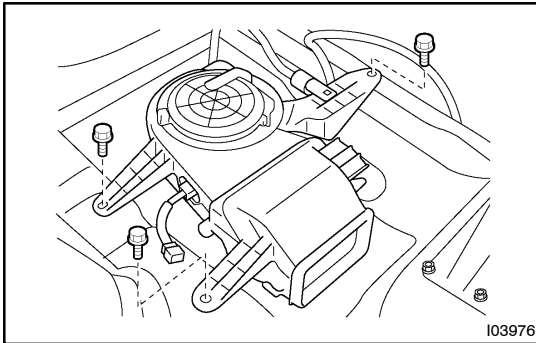**15. REMOVE REAR HEATER UNIT**

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and heater unit.