


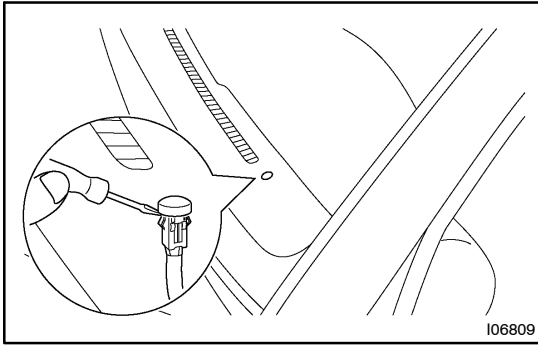

SOLAR SENSOR INSPECTION

AC1X8-01

1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

2. INSPECT SOLAR SENSOR CIRCUIT (See page [DI-784](#))

3. INSTALL SOLAR SENSOR

- (a) Connect the connector.
- (b) Insert the sensor to the instrument panel.