


ATF TEMPERATURE SENSOR ON-VEHICLE REPAIR

AT07N-02

1. REMOVE NO.2 ENGINE UNDER COVER

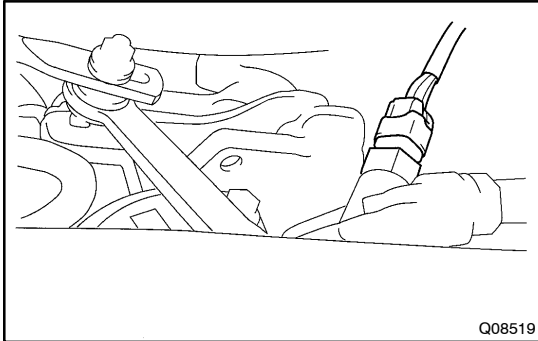

2. DISCONNECT ATF TEMPERATURE SENSOR CONNECTOR

3. REMOVE ATF TEMPERATURE SENSOR

- (a) Remove the ATF temperature sensor.
- (b) Remove the O-ring from the ATF temperature sensor.

4. INSTALL ATF TEMPERATURE SENSOR

- (a) Coat a new O-ring with ATF and install it to the ATF temperature sensor.
- (b) Install the ATF temperature sensor.

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

5. CONNECT ATF TEMPERATURE SENSOR CONNECTOR

6. INSTALL NO.2 ENGINE UNDER COVER