


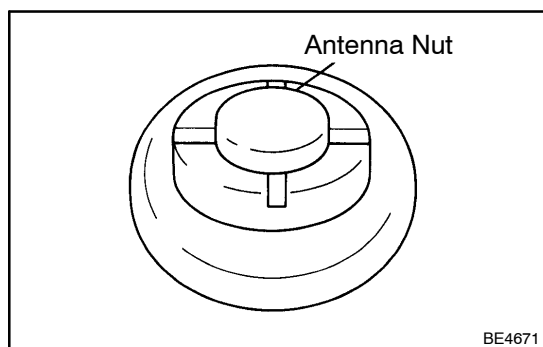

REPLACEMENT

1. Auto antenna models: REMOVE ANTENNA ROD

HINT:

Do this operation with the battery negative (-) cable connected to the battery terminal.



- (a) Remove the antenna nut.
- (b) Turn the radio switch "ON" position.
- (c) Turn the antenna switch to "UP".
- (d) Catch the antenna rod by hand and turn the radio switch "OFF".
- (e) Try again to turn the radio switch "ON" and antenna switch "UP".
- (f) Remove antenna rod.

HINT:

The rod will extend fully and be released from the motor antenna.

NOTICE:

To prevent body damage when the antenna rod is released, hold the rod while it comes out.

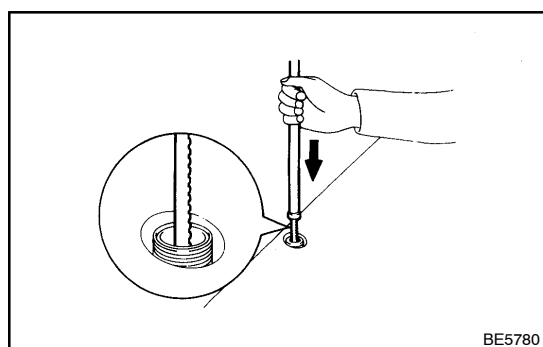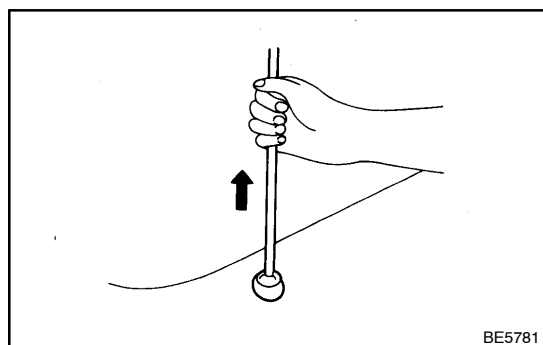

2. Auto antenna models: INSTALL ANTENNA ROD

- (a) Insert the cable of the rod until it reaches the bottom.

HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the antenna approx. 350 mm.

- (b) Turn the radio switch to "OFF".

HINT:

- In case the cable is not wound, twist it, as shown in the illustration.
 - Even if the rod has not retracted fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.
- (c) Inspect the antenna rod operation by pushing the radio wave band select buttons.

