



CIRCUIT

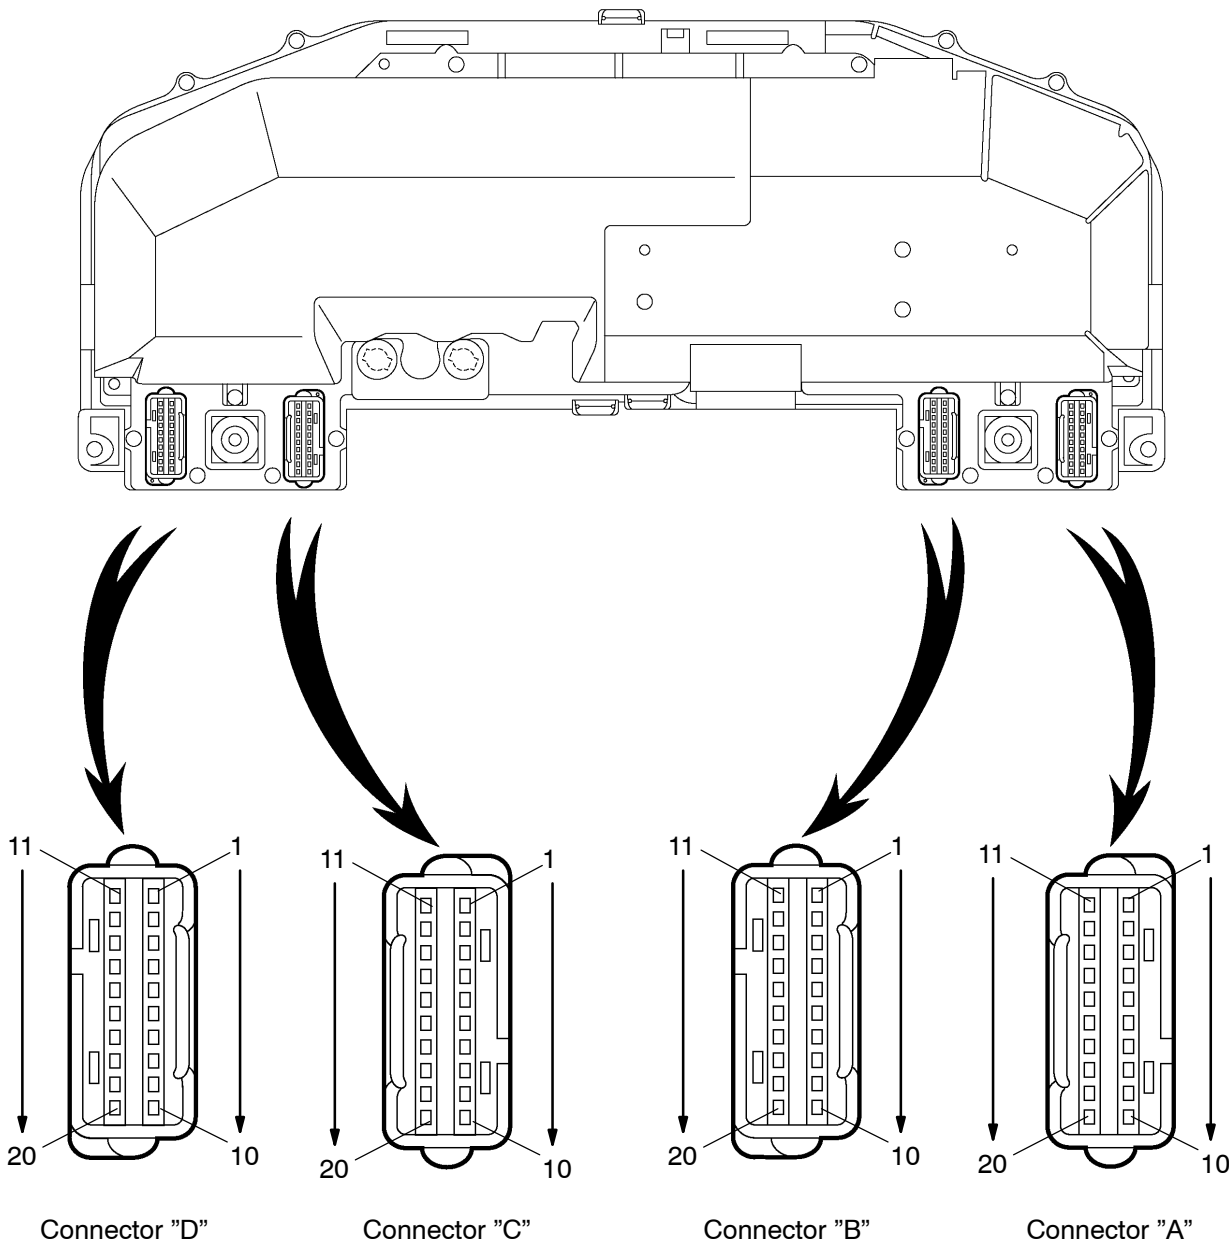


- (S) : Speedometer      (V) : Voltmeter  
 (T) : Tachometer      (E) : Engine coolant temperature gauge  
 (F) : Fuel Receiver Gauge      (O) : Oil Pressure Gauge

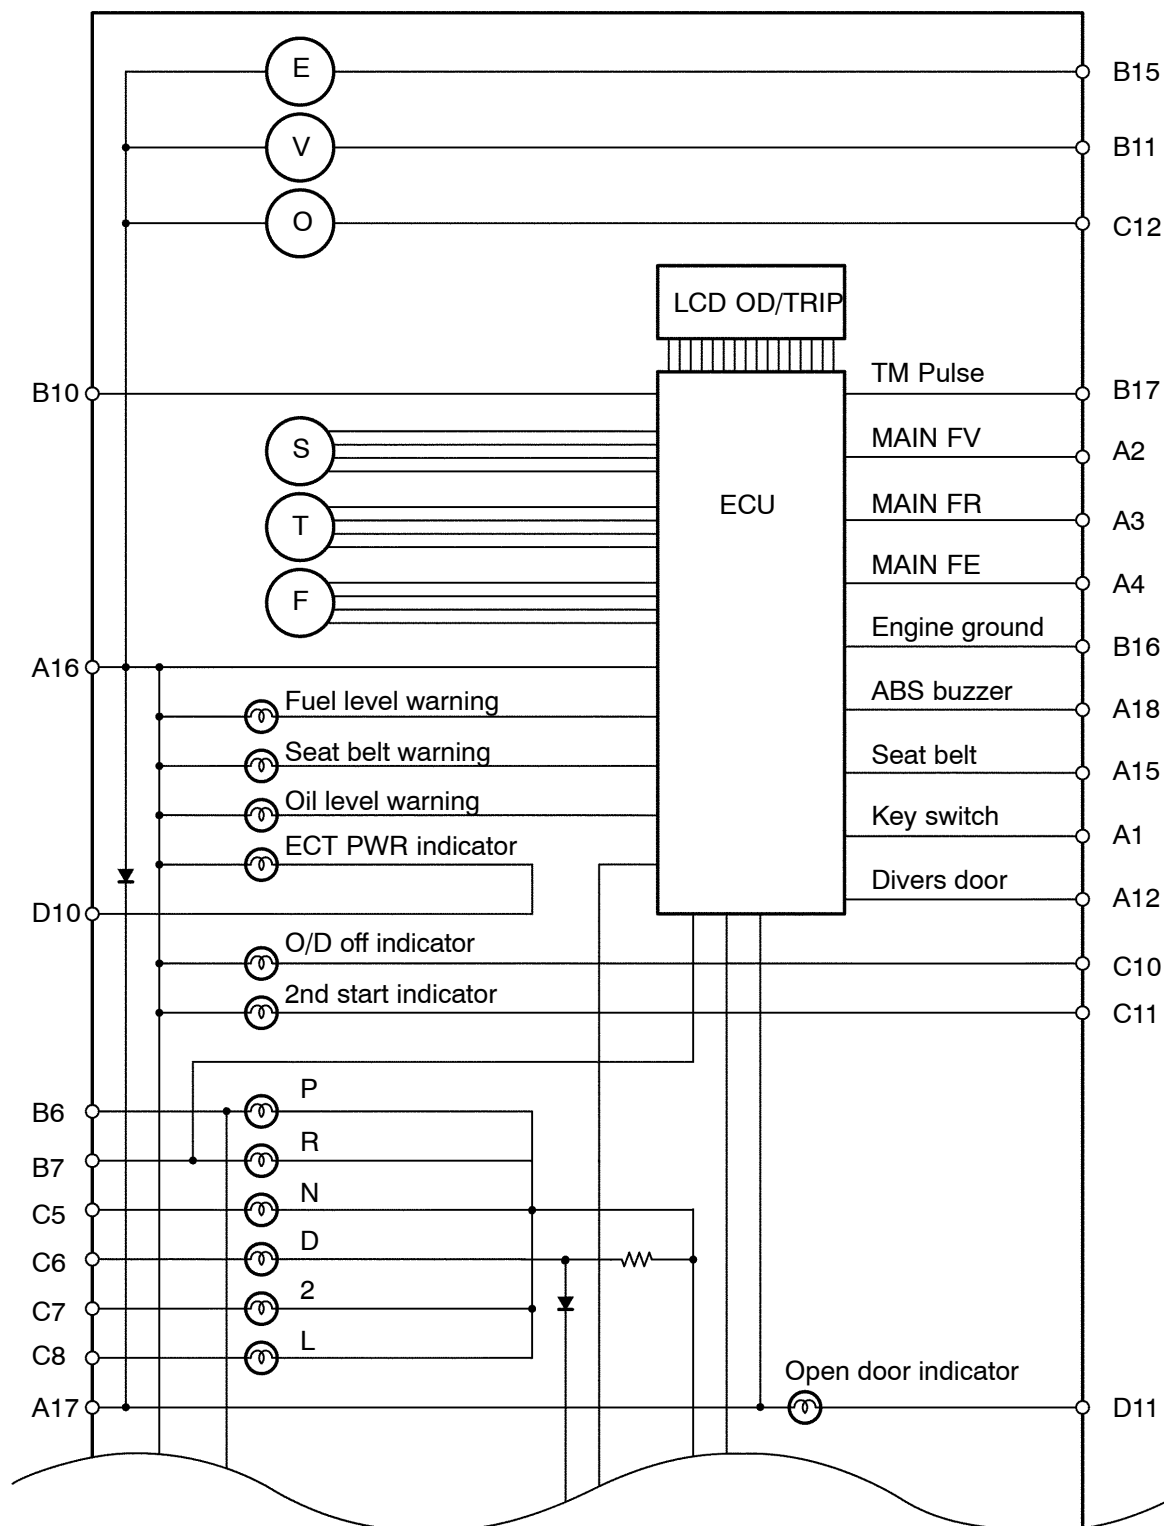

P

I12516

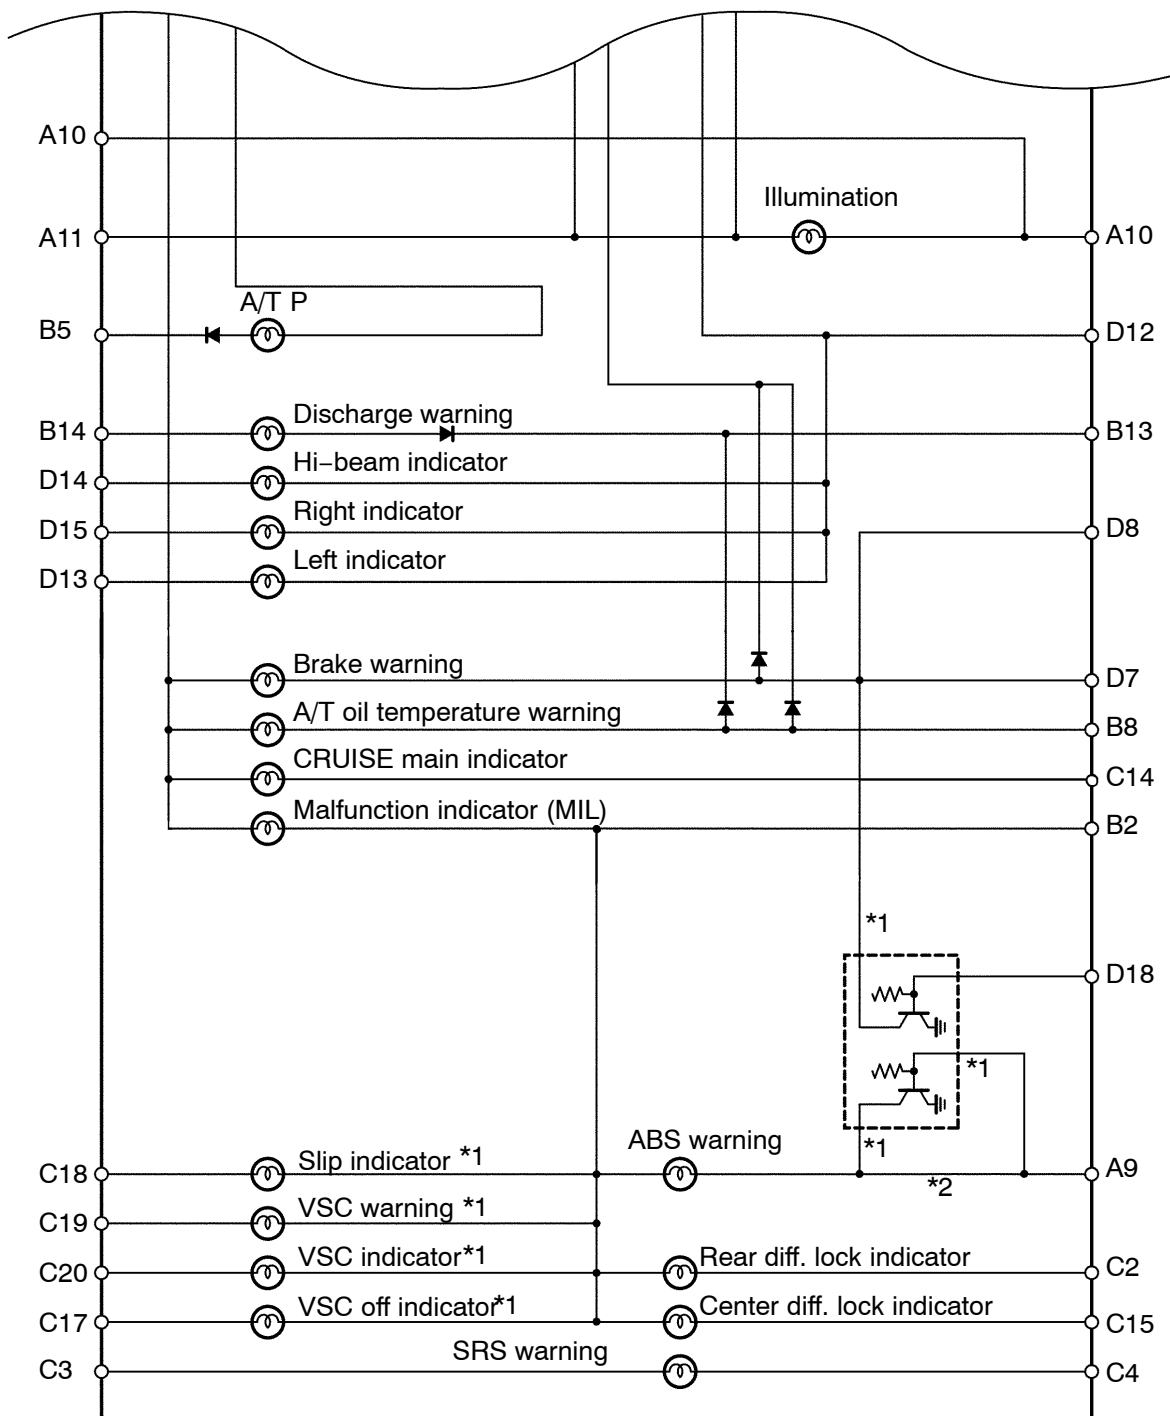

P

I12517

| No. |    | Wiring connector side                      |
|-----|----|--------------------------------------------|
| A   | 1  | Key Unlock Warning Switch                  |
|     | 2  | Fuel Sender Gauge                          |
|     | 3  | Fuel Sender Gauge                          |
|     | 4  | Fuel Sender Gauge                          |
|     | 9  | ABS ECU                                    |
|     | 10 | Light Control Rheostat                     |
|     | 11 | TAIL Fuse                                  |
|     | 12 | Driver Door Courtesy Switch                |
|     | 15 | Seat Belt Buckle Switch                    |
|     | 16 | GAUGE Fuse                                 |
| B   | 17 | DOVE Fuse                                  |
|     | 18 | ABS ECU                                    |
|     | 2  | ECM                                        |
|     | 4  | MIRR Fuse                                  |
|     | 5  | Park/ Neutral Position Switch (P position) |
|     | 6  | Park/ Neutral Position Switch (P position) |
|     | 7  | Park/ Neutral Position Switch (R position) |
|     | 8  | ECM                                        |
|     | 9  | Speed Control Unit                         |
|     | 10 | Speed Sensor                               |
| C   | 11 | Ground                                     |
|     | 12 | Light Control Rheostat                     |
|     | 13 | Generator                                  |
|     | 14 | IGN Fuse                                   |
|     | 15 | Engine Coolant Temperature Sender Gauge    |
|     | 16 | Ground                                     |
|     | 2  | Rear Diff. Lock Detection Switch           |
|     | 3  | ECU-B Fuse                                 |
|     | 4  | Center Airbag Sensor Assembly              |
|     | 5  | Park/ Neutral Position Switch (N position) |
| D   | 6  | Park/ Neutral Position Switch (2 position) |
|     | 7  | Park/ Neutral Position Switch (D position) |
|     | 8  | Park/ Neutral Position Switch (L position) |
|     | 10 | O/D Main Switch                            |
|     | 11 | ECM                                        |
|     | 12 | Low Oil Pressure Warning Switch            |
|     | 13 | Starter Relay                              |
|     | 14 | ECM                                        |
|     | 15 | Transfer 4WD Position Detection Switch     |
|     | 17 | ABS, TRC, VSC ECU                          |
| D   | 18 | ABS, TRC, VSC ECU                          |
|     | 19 | ABS, TRC, VSC ECU                          |
|     | 20 | ABS, TRC, VSC ECU                          |
|     | 7  | Rear Diff. Lock Detection Switch           |
|     | 8  | Parking Brake Switch                       |
|     | 10 | ECT Pattern Select Switch                  |
|     | 11 | Body Control ECU (Instrument Panel ECU)    |
| D   | 12 | Ground                                     |
|     | 13 | Turn Signal Switch (Left)                  |
|     | 14 | Headlight Dimmer Switch                    |
|     | 15 | Turn Signal Switch (Right)                 |
|     | 18 | ABS, TRC, VSC ECU                          |