


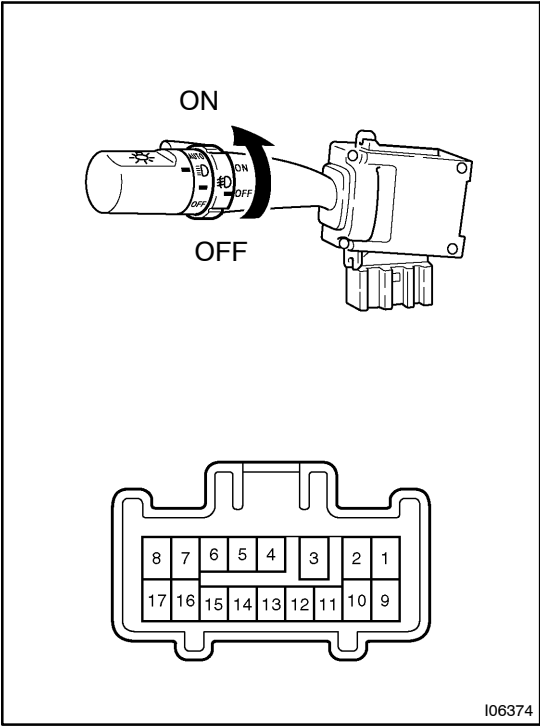


# INSPECTION

## 1. INSPECT FOG LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF             | -                 | No continuity       |
| ON              | 10 - 11           | Continuity          |

If continuity is not as specified, replace the switch.

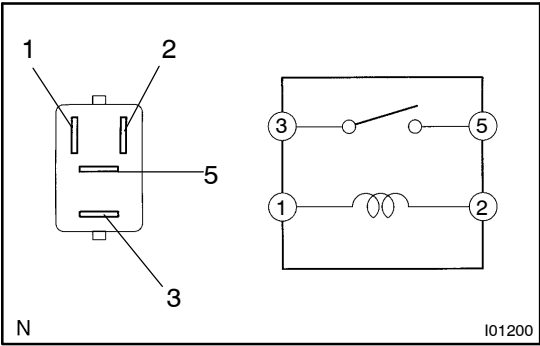

## 2. INSPECT FOG LIGHT RELAY CONTINUITY

| Condition                           | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant                            | 1 - 2             | Continuity          |
| Apply B+ between terminals 1 and 2. | 3 - 5             | Continuity          |

If continuity is not as specified, replace the relay.