



DISASSEMBLY

1. REMOVE STEERING WHEEL (See page [SR-27](#))

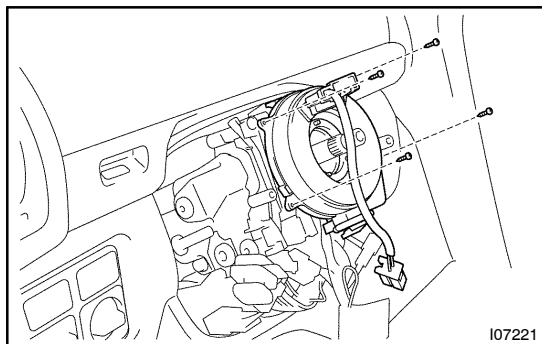

2. REMOVE SPIRAL CABLE

Remove the 4 screws and the spiral cable.

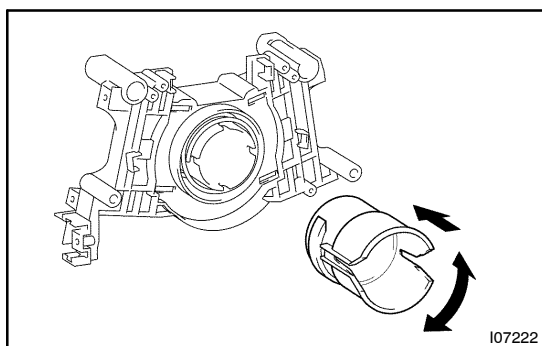

3. REMOVE CANCEL CAM

Turn the cancel cam while pressing it and pull it out.