


POWER WINDOW CONTROL SYSTEM

TROUBLESHOOTING

BE19F-01

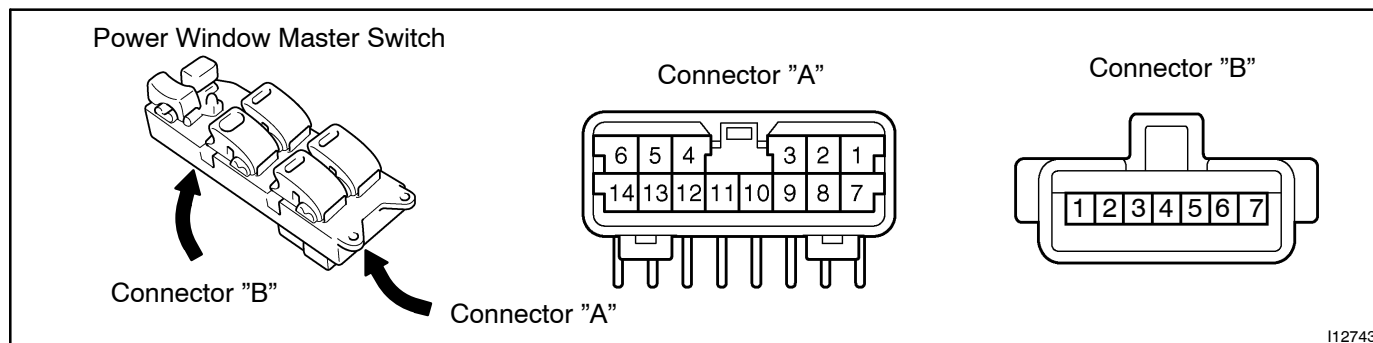


1 One touch power window does not move up and down. (Prepare normal master switch.)

After turning the ignition switch ON and power window master switch UP or DOWN on the drivers side, check that the master switch AUTO light blinks.


- Error is classified into the following 3 types according to the way of blinking.




① Limit switch error

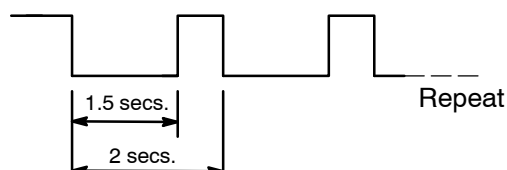

② Pulse sensor error

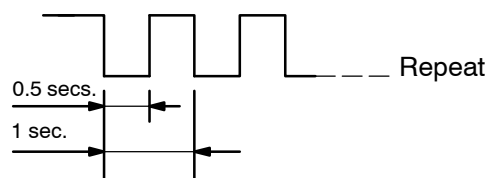

③ Limit switch/Pulse sensor synchronize error

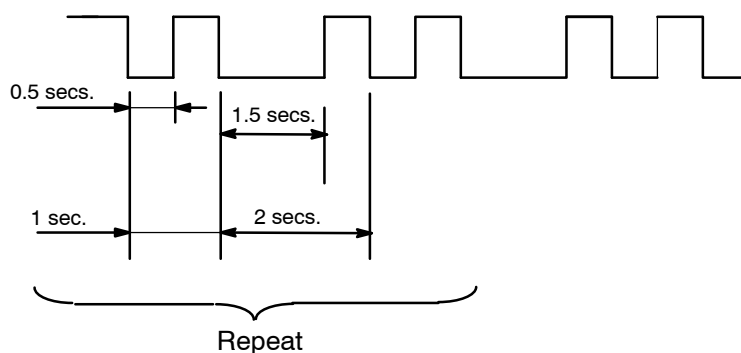

- < Reference >
- When 30 seconds elapsed since blinking started, blinking finishes. (AUTO light remains ON)
 - When turning the ignition key OFF, blinking finishes.

Blinks in the ① way

Remove the master switch.
(Connector connection condition)


CONTINUED ON NEXT PAGE


No

Master switch defective

Blinks in the ② or ③ way

CONTINUED ON NEXT PAGE

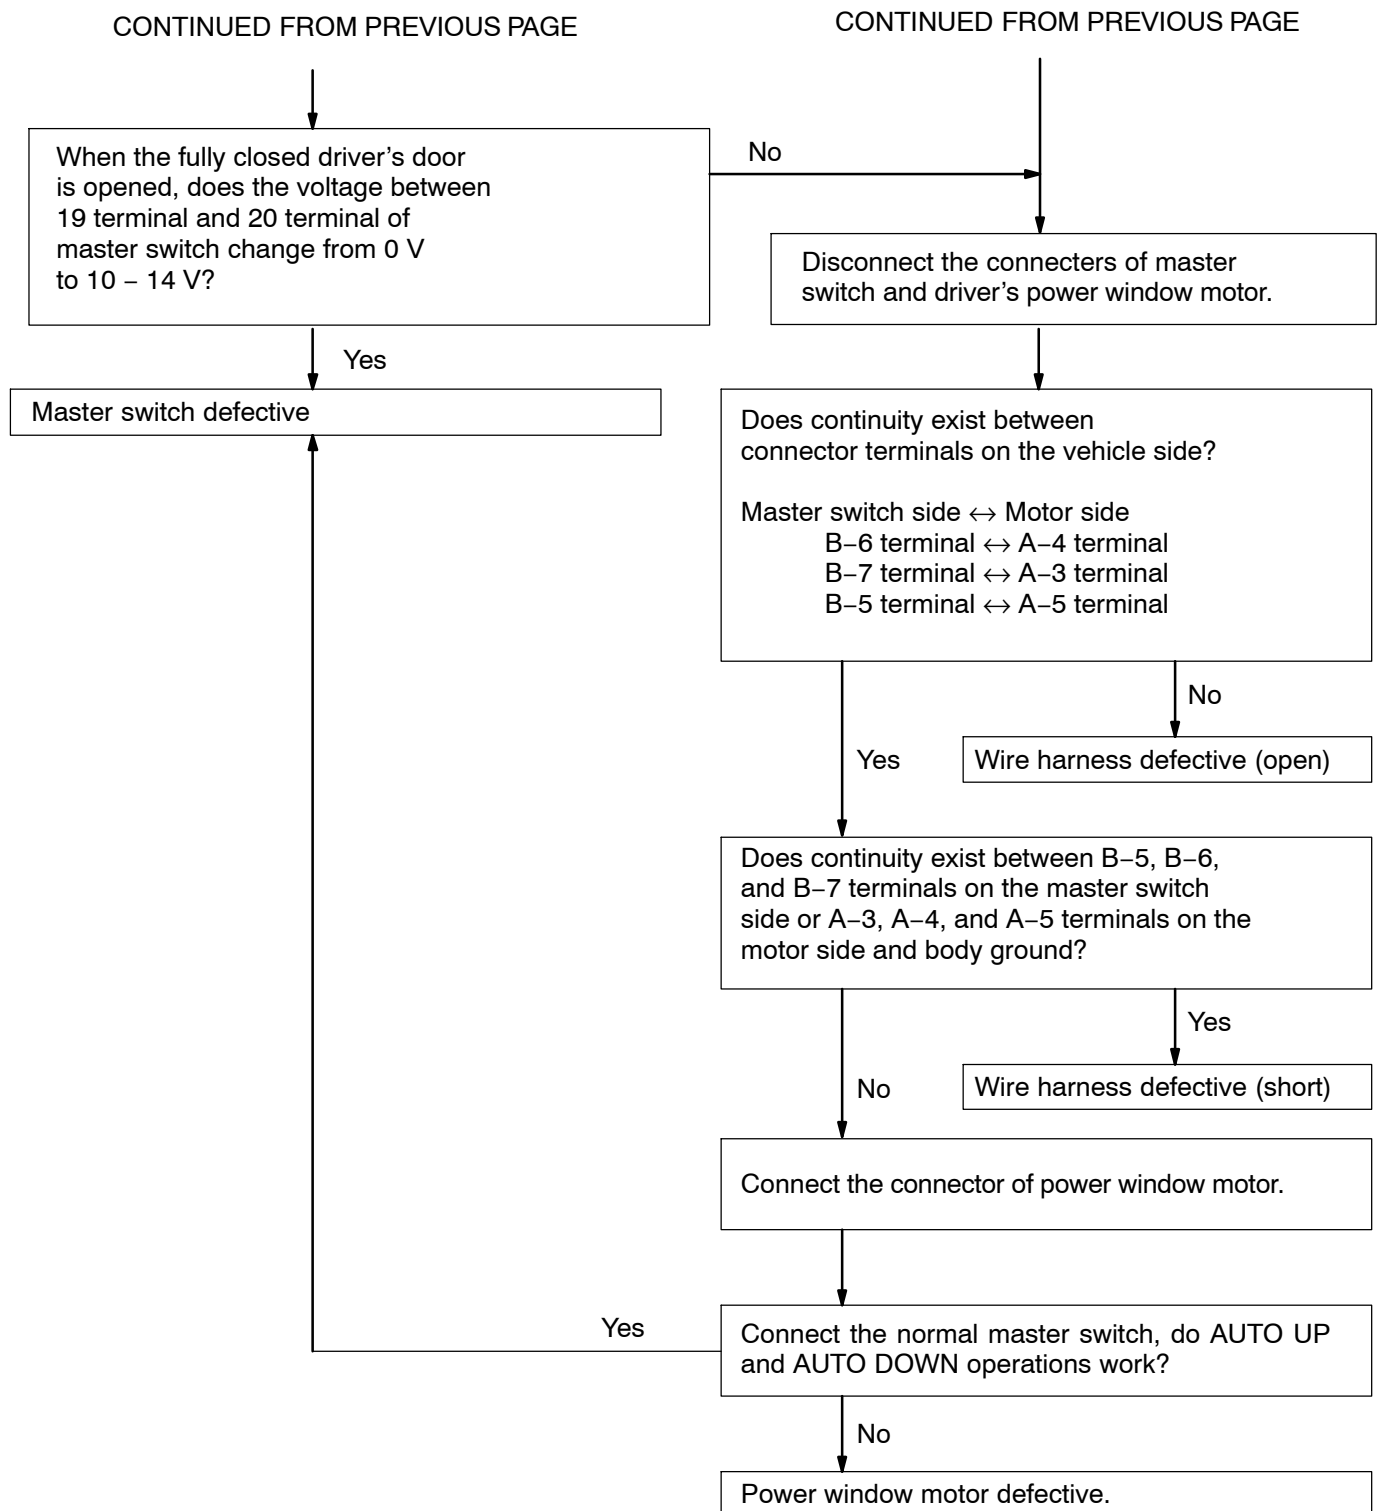

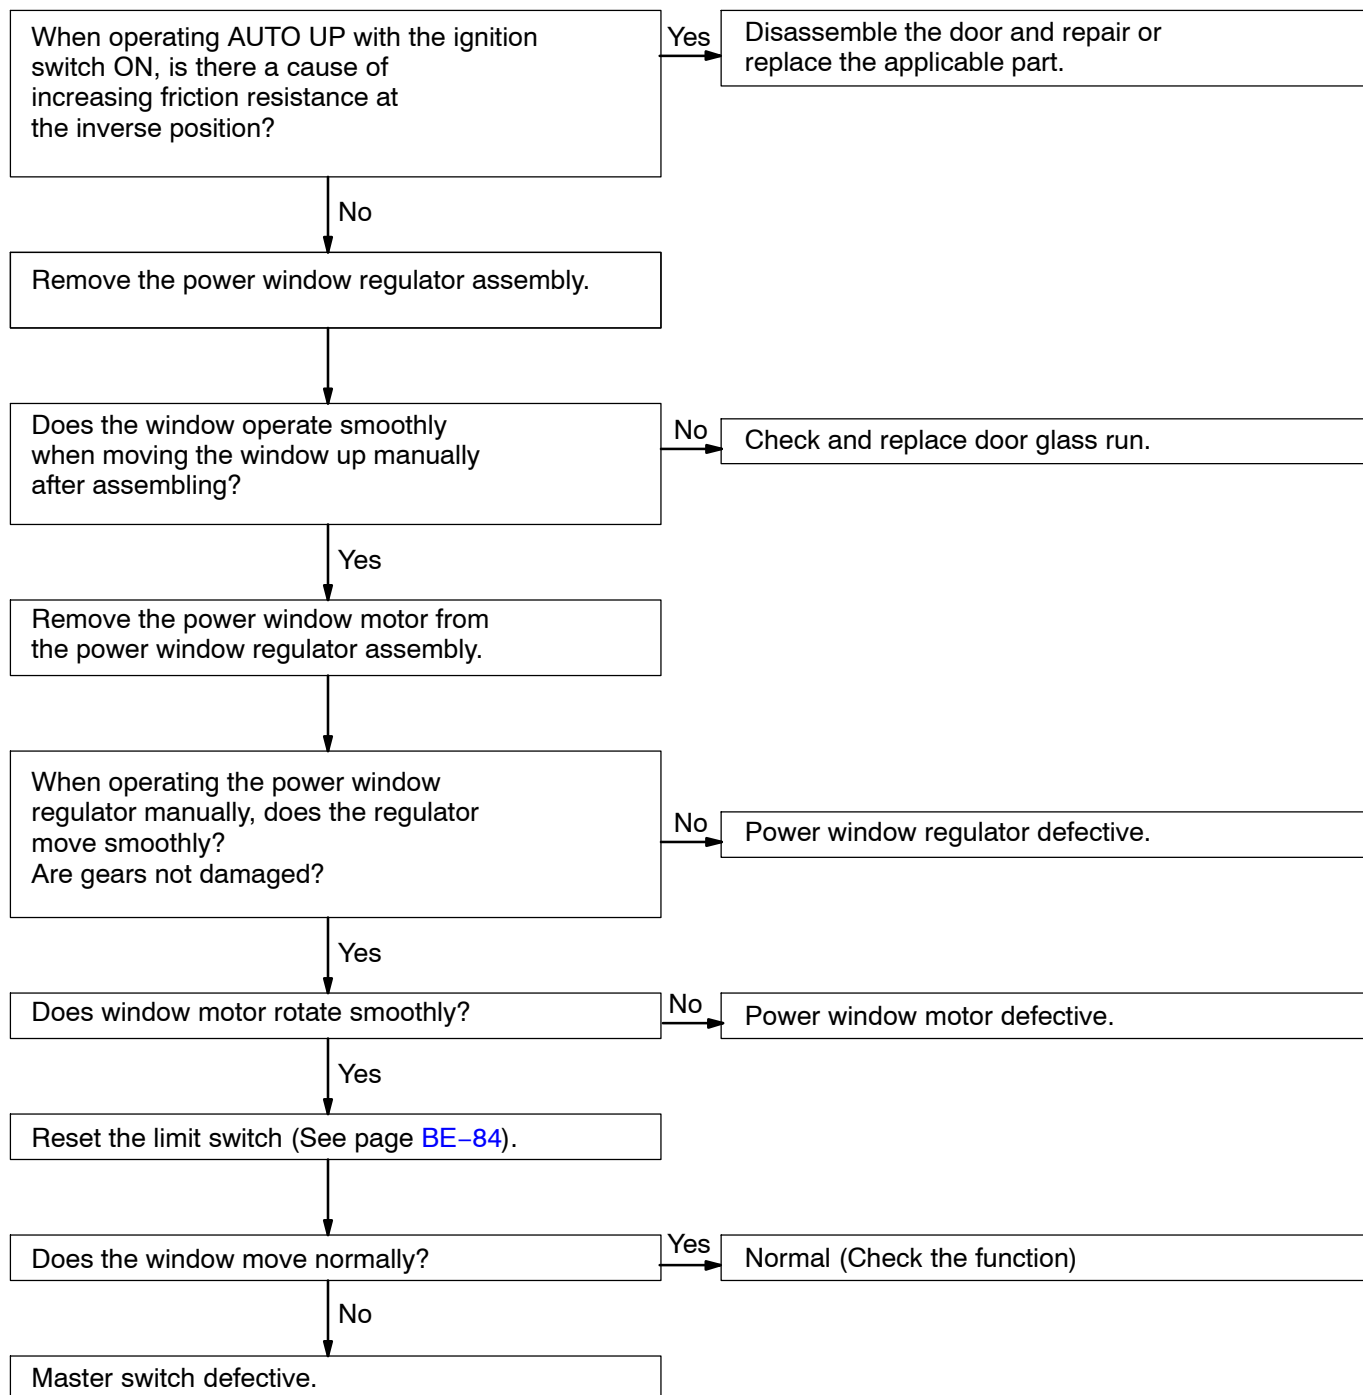2 During AUTO UP operation, the power window moves down.


3 The DOWN function does not work though some other objects are caught in the power window glass.
