



SEAT HEATER SYSTEM LOCATION

BE0GH-06

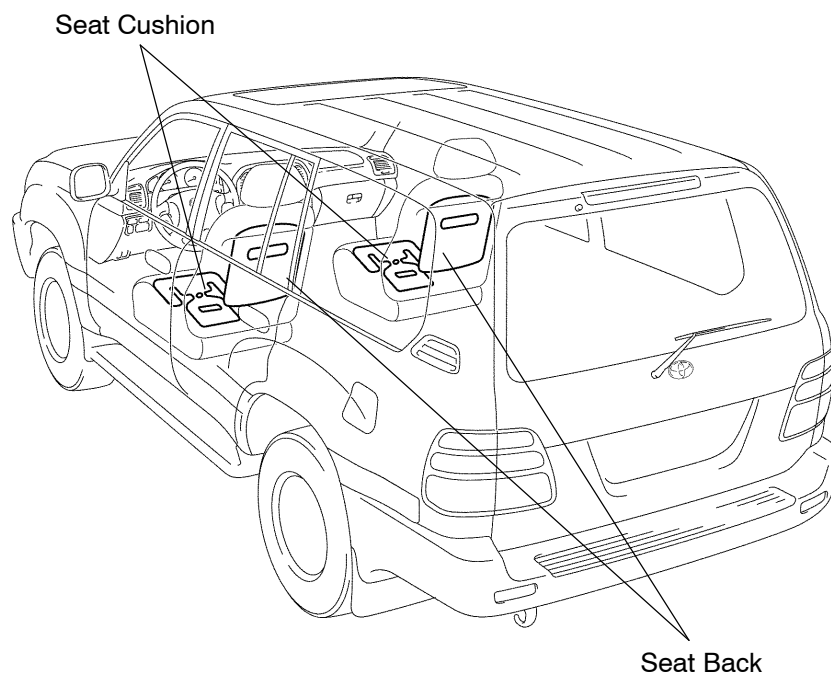

Ignition Switch

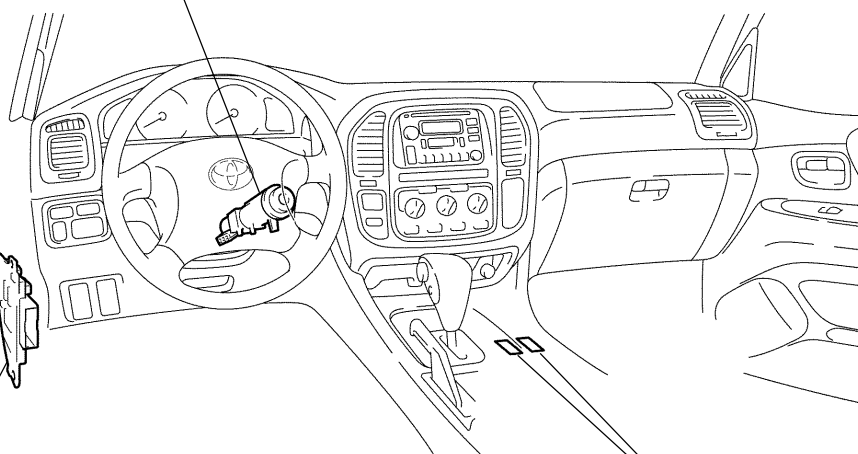

Driver Side Junction Block
● SEAT HTR Fuse

Seat Heater Switch

P

109879